

CHUNGHOP®

 
◆ RM-139ES

Metoda nastavení

(Angličtina)

A. Chcete-li vyhledat příslušné modely zadáním ručních kódů

1. Zapněte televizor a najděte kód, který představuje značku televizoru z číselníku. Podívejte se prosím na obrázek: (seznam kódů přiložený na zadní straně)



2. Podržte tlačítko "SET", dokud se nerozsvítí indikátor,
3. Zadejte 3místný kód do první skupiny odpovídající modelu, například:
4. Indikátor zhasne. Nastavení je dokončeno.
5. Zjistěte, zda tlačítka na dálkovém ovladači mohou fungovat normálně;

*Pokud ne, restartujte nastavení od kroku 1.

☆ Vzhledem k příliš velkému počtu kódů odpovídajících modelu vašeho televizoru vám doporučujeme nastavit kód televizoru podle kódu a nakonec vybrat jeden kód, který je pro váš televizor nejvhodnější.

B. Režim vyhledávání značky Point-to-Point

- 1 Zjistěte symbol značky odpovídající značce vašeho televizoru, například „2“ pro Hisense. Zapněte televizor a namířte dálkový ovladač na televizor.
- 2 Držte stisknuté tlačítko "Setup" + symbolické tlačítko značky a uvolněte, když se indikátor rozsvítí.
- ③ Stiskněte a uvolněte tlačítko „Hlasitost +“ a sledujte, zda je zobrazen symbol hlasitosti TV; a opakujte tento krok, pokud se nezobrazuje.
- ④ Stiskněte tlačítko "Setup" ihned, jakmile se zobrazí symbol hlasitosti a poté indikátor zhasne.
- ⑤ Otestujte tlačítka dálkového ovladače, zda fungují normálně: Nebo resetujte počínaje krokem 2, pokud ne.

Symbol značky odpovídající tabulka

1	2	3	4	5	6	7	8	9	0
Haier	Hisense	Konka	Changhong	TCL	SKYWORTH	Samsung	SONY	LG	Panasonic

C: Režim rychlého vyhledávání jedním tlačítkem

- ✓ Zapněte televizor. umožněte, aby byl televizor v normálním startovacím stavu, a namířte dálkový ovladač na televizor.
- 2 Držte stisknuté tlačítko "Setup" na dálkovém ovladači a po přibližně 6 s bude indikátor stále blikat, poté tlačítko uvolněte, když se na obrazovce televizoru zobrazí symbol hlasitosti.
- ③ Zkontrolujte ostatní tlačítka na dálkovém ovladači, zda fungují efektivně, a pokud ano, dokončete nastavení, nebo opakujte krok 2, pokud ne.

Distributor

Sunnysoft s.r.o.
Kovanecká 2390/1a
190 00 Praha 9
Česká republika
www.sunnysoft.cz

CHUNGHOP®

◆ RM-139ES

Setup Method

(English)

A. To search applicable models by entering manual codes

1. Switch on the TV set and find a code that represents the brand of the TV from the code list. Please see the figure :
(the code list attached to the back)
 2. Hold the "SET" key until the indicator illuminates,
 3. Enter a 3-digit code in the first group corresponding to the model, such as:
 4. The indicator goes out. Setting is finished.
 5. Detect whether the keys on the remote control can work normally;
- ※ If not, restart the setting from Step 1.

Brand	Code
CHANGHONG	000,008,009,091,092,093
KONKA	011,017,029,032,034,054

☆ Due to too many codes corresponding to your TV model, you are recommended to set your TV set code by code, and finally select one code most suitable for your TV set.

B. Point-To-Point Brand Search Mode

- ① Find out the brand symbol corresponding to your TV set brand, for example, "2" for Hisense. Turn on the TV set and aim the remote controller to the TV set.
- ② Keep pressing "Setup" key + brand symbolic key and release when the indicator lights up.
- ③ Press "Volume +" key and release, and watch if TV volume symbol is displayed; and repeat this step if it is not displayed.
- ④ Press "Setup" key immediately when volume symbol is displayed and then the indicator goes out.
- ⑤ Test the keys of the remote controller whether they work normally; Or reset starting from Step 2 if not.

Brand Symbol Corresponding Table

1	2	3	4	5	6	7	8	9	0
Haier	Hisense	Konka	Changhong	TCL	SKYWORTH	Samsung	SONY	LG	Panasonic

C. One Key Quick Search Mode

- ① Turn on TV set, allow the TV set to be in normal starting state and aim the remote controller to the TV set.
- ② Keep pressing the "Setup" key of the remote controller, and after about 6s, the indicator keeps flashing, then release the key when volume symbol is displayed on the TV screen.
- ③ Check the other keys of the remote controller if they work effectively, and finish the setup if yes, or repeat Step 2 if not.

Tabulka kódů

CODE FORM FOR THE COMPONENTS

Brand	Code
AOC	438.446.489
AIWA	009.057.058.516
AMTRAN	445.502
ACER	447.490
APPLE	501
OLYMPIC	033.053.056.079
ANHUA	017.001.032.047
ALCINPU	104
BENQ	294.488
BAIHUA	016.025.033.053.056.079
BAIHEHUA	023.024.040.043
BAILE	016.025.012.019.026.027.028.029.030.031.042
BAOSHENG	011.025.016
BaoHuaShi	033.053.056.079
BEIJING	008.012.011.019.016.023.024.025.027.028.029.030.031.033.040.043.050.053.056.026.079.091.039.042.051.021.122.126.233.265.298.351.376
BUSH	511
CAILING	102
CAIHONG	011.025.016
CAIXING	023.024.040.043.073
CHANGCHENG	011.016.017.023.024.025.033.040.043.053.056.001.012.019.027.026.028.029.030.031.042.079
CHENGDU	011.025
CHANGFENG	011.053.056.045.046.024.079.033
CHANGFEI	011.016.025.042.123.523
CHANGHAI	011.025.016.123.520
CHUNLAN	142.107.131
CHUNFENG	016.025.033.053.056.079.124
CHUNSHUN	000.006.007.008.010.016.025.033.053.055.056.045.046.048.073.099.131.204.258
CONROWA	011.025.016.530
CHANGHONG	000.008.009.091.092.093.010.011.014.016.026.028.033.051.052.057.058.067.071.086.087.088.100.159.162.182.183.184.226.288.289.290.291.292.297.300.336.337.338.372.413.414.450.451.452.453.454.455.520.524.532.534
CHUANGJIA	073.101
CHIMEI	487
CYBEX	523
DUONGJIE	073.097.101
DONGDA	016.025
DONGHAI	214.150.147
DIGITEC	077
DONGLIN	212
DETROIT	012.042.031.408
DAEWOO	495.496
DELL	443
ENVISION	011.016.025
FEILU	011.016.023.024.025.040.043
FEIYUE	016.025
FEILANG	033.053.056.079
FEIVAN	048
FUITSU	047
GOLDSTAR	009.019.023.024.040.043.098.140
GANXIN	011.017.023.024.027.040.041.043
GANGTAL	496
GOKE	033.053.056.079.236
HUAQIANG	103.105.112.118.119.175.178.185.186.187.188.201.205.206.216.272.356.380.415.416.466.467.469.470.471.536
Haier	

Brand	Code
HISENSE	000.006.007.008.010.014.015.025.045.046.057.102.103.105.107.115.116.128.135.136.137.138.139.140.147.227.274.283.285.286.289.270.271.273.274.268.304.305.306.307.309.318.319.339.340.341.342.348.417.418.476.477.478.479.480.481.482.483.484.485.530.531
HITACHI	007.015.014.027.000.006.008.010.048.179.228.373.401.419.521
HITCHI	007.011.015.023.024.028.033.034.040.043.053.056.060.061.065.079.102
FUFIAN	007.016.025
HUAFU	011.016.023.024.025.040.043.051.103.125.155
HUANGHE	016.025
HUANGHAI	011.016.023.024.025.032.033.040.043.053.056.079.523
HUANGSHAN	007.033.053.056.079
HUARI	011.023.024.033.040.043.053.056.079
HAIYAN	016.025.026.027.028.029.030.077.103.268
HAIHONG	032.047
HAILE	011.015.023.024.033.040.043.053.056.009.057.058.079
HUANYU	003.011.016.018.023.024.025.033.040.043.056.005.057.058.079
HONGMEI	011.033.053.056.079
HONGYAN	016.025.526
HUANGLONG	032.001.017.047
HUIJIABAN	513
HUODAKEJI	498
HANNS	505.506.507.509
HKC	213
HPC	033.053.056.012.019.025.026.027.028.029.030.031.042.079
INTEL	016.025.028.033.053.056.079.124.178
IMPERIAL	038.057
COWN	104
JIALICAI	089.161.497
JINGXIN	011.023.024.033.040.043.053.056.079
JINGXIN	009.057.058.099
JINFENG	001.011.021.022
JINTA	016.023.024.025.033.040.043.053.056.009.057.058.079
JINQUE	011.025.016
JINQUE	032.033.053.056.079
JIAHUA	017.047.001.032.033.101.149.207
JINXING	007.008.011.013.024.025.032.033.039.051.057.065.071.073.079.091.097.102.107.138.225.227.364.367.368
KAIGE	011.016.023.024.025.033.040.043.053.056.079.521
KUNLUN	039
KUAILIE	016.025.033.053.056.079
KANGLI	027.012.016.019.025.025.028.030.311.033.073.120.204.271
KANGHONG	009.058.057
KANGLI	016.023.024.025.040.043.011.026.027.028.029.042.005
KANGYI	016.025.033.053.056.079.121
KONGQUE	011.016.023.024.025.033.040.041.043.124
KOLIN	409
KANGHUA	103
KANGWEI	077.101.104

Brand	Code
KONKA	011.017.029.032.034.054.067.069.071.075.076.077.078.079.080.081.107.113.117.157.163.164.165.177.210.235.250.251.252.253.254.255.256.257.301.302.303.321.323.324.345.355.385.386.392.420.421.473.474.475.518.522
LONGJIANG	011.033.053.056.079
LIHUA	011
LG	024.040.098.043.140.259.260.261.422
MEILE	011.023.024.033.040.043.053.056.009.057.058.079
MUDAN	001.002.011.016.020.021.022.025.032.033.039.040.043.053.056.059.063.065.079.101.107.145.146.149.218.223
MENGMEI	023.024.040.043.530
MANITIANXING	114
MITSUBISHI	011.051.499.510
NANSHENG	011.033.053.056.079
NIKON	009.057.058
NEC	006.011.016.004.025.033.053.056.024.079.089.140.525
NANBAO	016.025.033.053.056.009.057.058.079
OULIN	101
OLEVIA	491.504
PANDA	001.011.016.021.022.023.024.025.026.028.033.040.043.053.056.009.057.058.051.062.073.079.089.091.061.124.125.181.203.204.208.263.264.296.101
POLYTRON	151.152.214.410
PANASONIC	020.001.002.014.015.021.022.059.066.423
(NATIONAL)	013.023.024.039.040.043.141.241.242.377.378.424.493
PHILIPS	411
PROMAC	011.011.021.022.033.053.056.079
CINEMAC	073.097
QINGDAO	011.013.016.023.024.025.040.043.096.127.248.267.268
RIZHI	073
ROWA	011.015.023.024.040.043
RIHONG	097
Ruyi	003.018.016.025.135.136.137.371.426.526
RISHENG	007.016.025.033.053.056.079
SHARP	011.033.053.056.079
SHENCAI	009.011.016.017.022.023.024.025.033.040.043.053.056.057.058.079.123
SHENCHA	011.015.000.006.007.023
SHANGHAI	011.025.016
SHAOFENG	016.025
SHENYANG	016.025
SAIGE	016.025
SONGBAI	016.025
SANYUAN	003.011.016.018.023.024.025.040.043
SANJIAN	033.053.056.079.534
SKYWORTH	011.025.033.045.046.060.070.071.072.073.074.079.083.101.107.108.109.143.160.168.169.170.176.180.181.194.195.196.197.198.199.200.232.234.275.276.277.278.280.281.282.283.284.308.310.311.312.325.326.327.344.347.357.390.391.396.427.456.457.458.459.460.461.462
--RGB	008
SHANSHUI	

Brand	Code
SANKEN	041.049.005.094.106.148.237.238.239.240.405.406.407.508.527
SONY	008.011.016.021.024.025.033.037.039.040.043.050.051.091.113.123.375.376.432
SAMSUNG	008.000.007.014.015.033.035.053.056.079.105.132.133.134.202.223.352.353.354
SANYO	036.044
SANLING	057.101
SHENGCAI	131.204
SHUYUAN	101
SONGDIAN	097
SEYE	214
SHERWOOD	016.025
SVA	158.166.167.365.366
TIANKEBAN	101
TIANGENBAN	101
TAISHAN	011.016.025.042.038.031.030.029.028.027
TIANE	003.011.018
TONGGUANG	033.053.056.079
TOBO	016.025.033.053.056.077.079.101.103
TOSHIBA	000.014.016.027.033.053.056.007.008.015.028.030.089.090.091.079.159.285.286.287.355.431
TCL	051.053.068.071.073.082.083.084.085.110.111.144.156.199.209.216.243.244.245.246.247.248.249.313.314.315.316.317.320.343.344.349.350.382.383.384.427.463.464.465.468.472.517
THTF	430.500.503.537
Vitor	004
VISTAR	412
WARUMAIA	031.012.042
WEIPAI	016.025
WESTINGHOUSE	492
XIAHUA	011.016.024.027.025.033.053.054.055.056.060.080.080.090.095.079.073.209.211.217.218.229.230.231.262.295.358.363.369.370.425.494.535
XIHU	011.023.024.033.038.040.043.053.079.098.131.204.219.220.221.222
XIANGYU	016.025.032
XUELIAN	023.024.040.043.009.057.058
XINAGHAI	016.025.033.053.056.079
XINGMENBAN	104
XINSIDA	123
XIANGYANG	033.053.056.079
XINGFU	016.025
XINRISONG	009.057.058.101
YINGGE	016.023.024.025.040.043
YUANGU	016.025
YONGGU	016.023.024.025.040.043
YONGBAO	009.057.058
YOUANASI	011.023.024.040.043
YAJIA	033.053.056.079
YOUSIDA	016.025.042.528
ZHUHAI	033.053.056.079
888	036.044.057.073.077.097.101.102.103.104.106.114.178.293.326.328.330.331.332.333.334.335.393.394.395.397.398.399.400.402.403.404.407.408.409.410.411.412.414.415.421.422.428.444.448.449.512.514.515.519.529.533
OTHER BRAND	