

70mai Dash Cam T400 + RC21

Uzivatel'ska prirucka / User Manual

Cestina

Vyrobce / Manufacturer: 70mai Co., Ltd.

www.70mai.com | help@70mai.com

SUNNYSOFT

Bezpečnost baterie

- Zařízení obsahuje knoflíkovou baterii (Li). NEROZEBÍREJTE, NEROZBIJEJTE ani nevystavujte nadměrnému teplu — hrozí výbuch. • Baterie není výměnná. Nevyměňujte ji sami — jen odborný servis. • Při deformaci, nabrání nebo uniku baterie ihned přestaňte kameru používat a kontaktujte servis.

Pamětová karta

- Před použitím vložte pamětovou kartu (prodává se samostatně).
- Podporované karty: MicroSD, 32 GB – 512 GB, U3 (UHS-3) nebo vyšší.
- Při prvním vložení naformátujte kartu v kameře.
- Nevkládejte ani nevytahujte pamětovou kartu při zapnutí kameře.
- Používejte kvalitní pamětové karty od renomovaného prodejce.

Bezpečnostní pokyny

- Před použitím si pečlivě přečtěte tento návod a uschovejte ho na bezpečném místě.
- Tato palubní kamera pomáhá řidičům se zaznamenaním okolí vozidla. Nezárukuje bezpečnost jízdy.
- Neinstalujte tak, aby blokovala výhled řidiče nebo airbag.
- Nepoužívejte při teplotách nad 60 °C nebo pod -10 °C.
- Uchovejte mimo dosah silných magnetických polí.
- Toto zařízení není hračka – malé součásti mohou představovat riziko udusení u dětí.

SUNNYSOFT

Obsah balení

- Palubní kamera 70mai T400 x 1
- Držák (předmontovaný) x 1
- Napájecí kabel x 1
- Nabíječka do auta x 1
- Samolepící nálepková x 1
- Elektrostatická nálepková x 2
- Nastroj na kabel x 1
- Sada zadní kamery RC21 x 1
- Navod k použití x 1

Prehled výrobku

1-Display / 2-Function buttons / 3-Power button / 4-Microphone / 5-Ventilation holes / 6-Indicator / 7-Cabin camera / 8-Bracket / 9-Speaker / 10-Front camera / 11-Power port / 12-Rear camera port / 13-Memory card slot / 14-Adhesive sticker

Please read this manual carefully before using the product and keep it in a safe place.

Memory Card Instructions

- A memory card (sold separately) must be installed in the dash cam before use.
- The dash cam supports standard microSD cards. Please use memory cards with capacity of 32GB-512GB and rating of U3(UHS-3) or higher.
- The default file partition format of the memory card may be inconsistent with the format supported by the dash cam. When inserting the memory card for the first time, please format it in the dash cam before use. Formatting the memory card will delete all files on the card. Please back up important data to another device beforehand.
- The memory card may become damaged or deteriorated after repeated cycles of overwriting, and this may affect its ability to save video and image files. If this occurs, immediately replace it with a new memory card.
- Please use a high-quality memory card purchased from a reputable vendor. Inferior memory cards may have issues such as the actual reading/writing speeds do not match the stated speeds, and the actual storage capacity does not match the stated storage capacity. We shall not be held liable for lost or damaged videos caused by the use of a low-quality memory card.
- Do not insert or remove a memory card while the dash cam is turned on.

Battery Safety

- This device contains a coin battery (lithium battery). DO NOT disassemble, smash, or subject

the product to excessive heat, as this could result in explosion.

- The battery is non-removable. DO NOT attempt to replace or repair it. If replacement is required, ONLY have it replaced by a professional with the same model.
- Do not use the product in extreme weathers. Temperatures that are too low or too high may cause the battery to explode or give off flammable gas or liquid.
- Dispose of the cam following all local and national regulations on electronic waste disposal.
- If the battery becomes deformed, swollen, or starts leaking during use or storage, stop using the dash cam immediately in order to avoid safety issues, and contact after-sales service.

Precautions

- Before using this dash cam, please read all the precautions and the online guide to ensure correct and safe use.
- This dash cam is intended to assist drivers with the purpose of recording the environment outside the vehicle. The dash cam does not guarantee the user's driving safety. We shall not be held liable for any accident, damage, or loss of information caused by operating the dash cam while driving.
- Due to differences in vehicle conditions, driving style, driving environment, etc., some functions may not work properly. A power failure, usage in environments outside the normal operating temperature or humidity range, a collision, or a damaged memory card may cause the dash cam to function abnormally. There is no guarantee that this dash cam will function normally under all

01

Prehled výrobku — 70mai T400

Instalace

- 1. Instalace elektrostaticke nalepky — Nalezte nalepku na doporučené místo na čelním skle. Vytlačte vzduchové bubliny.
- 2. Instalace držáku — Zarovnejte držák s drážkou na zadní straně kamery a zasunte ho nahoru.
- 3. Vložení památové karty — Vložte památovou kartu do slotu.
- 4. Montáž kamery — Odstrazte krycí vrstvu z držáku a nalezte kameru na elektrostatická nalepka.
- 5. Pripojení napájecího kabelu — Propojte kameru s nabíječkou autonabíječky kabelem.
- 6. Vedení kabelu — Přiveďte kabel k zásuvce vozidla a zapojte nabíječku. Nastartujte motor – kamera se automaticky zapne.
- 7. Nastavení uhlu kamery — Upravte úhel podle obrázu na hlavní obrazovce po zapnutí.

circumstances. Videos recorded by this dash cam are for reference only.

- Please install this dash cam correctly, and do not block the driver's line of sight, nor block the vehicle's airbag, in order to avoid product failure or personal injury.
- Please use the included car charger, power cord, and other accessories in order to avoid product failure due to non-conformance. We shall not be held liable for any loss or damage caused by the use of a non-genuine car charger or power cord.
- Please keep this dash cam away from any strong magnetic fields, as they may cause damage to the dash cam.
- Do not use this dash cam in environments with temperatures over 60°C or below -10°C.
- Please only use this dash cam within the scope permitted by law.
- This device is not a toy. Some of its small components may pose risk of suffocation to children. Keep it out of the reach of children.

Package Contents

If you purchased the Dash Cam Set, check the following items in the package:

- Dash Cam × 1
- Mount (pre-installed on the dash cam) × 1
- Power cord × 1
- Car charger × 1
- Adhesive sticker × 1
- Electrostatic sticker × 2
- Wiring trim tool × 1
- User manual × 1

 
- Rear camera package* × 1

 
* This package contains the rear camera, rear camera wire and other accessories for the rear camera. For more information, please refer to the rear camera user manual.

If you purchased the dash cam only, check the following items in the package:

- Dash Cam × 1
- Mount (pre-installed on the dash cam) × 1
- Power cord × 1
- Car charger × 1
- Adhesive sticker × 1
- Electrostatic sticker × 2
- Wiring trim tool × 1
- User manual × 1

Product Overview

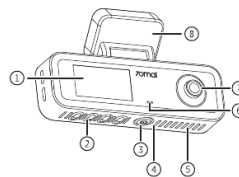

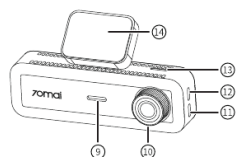

- ① Display screen
- ② Function buttons
- ③ Power button
- ④ Microphone
- ⑤ Ventilation holes
- ⑥ Indicator
- ⑦ Cabin camera
- ⑧ Bracket
- ⑨ Speaker
- ⑩ Front camera
- ⑪ Power port
- ⑫ Rear camera port
- ⑬ Memory card slot
- ⑭ Adhesive sticker

Note: Illustrations of the product, accessories, and user interface in the user manual are for reference purposes only. The actual product and functions may vary due to product enhancements.

Installation

 
1. Installing the electrostatic sticker

Paste the electrostatic sticker on the recommended

area on the front windshield. Press the sticker to remove air bubbles out.


Avoid the edge of the windshield and select the flat and smooth area for the installation.

Note: Keep the windshield clean and dry without liquid residue to prevent the sticker from losing adhesion and dash cam from dropping.



2. Installing the mount

 
Align the mount to the slot on the back and slide it up.

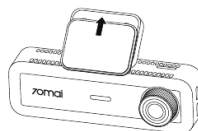

3. Inserting the memory card

Insert the memory card into the card slot.

 
Krok 4–6 / Steps 4–6

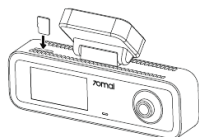

4. Mounting the dash cam


Remove the release liner on the mount and paste the cam to the electrostatic sticker.

 and plug the car charger into the power outlet. Start the car engine, and the dash cam will automatically turn on.



Notes:

 - Use the included wiring trim tool to hide the power cord underneath the vehicle's headliner and rubber seal along the A-pillar.
- Depending on the vehicle, the cigarette lighter socket may be located in a different position. The above figure is for reference only.

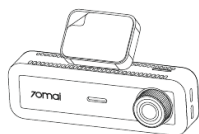


5. Connecting the power cord

Connect the dash cam and car charger with the power cord.


7. Adjusting the camera angle

 Adjust the camera angle based on the image presented on the main screen when dash cam is turned on.



6. Routing cable

 Route the power cord to the vehicle's power outlet

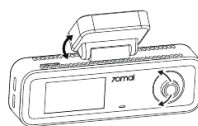

Connecting with the 70mai App

This product can be used in conjunction with the 70mai app. Follow the steps below to connect it with

04

Krok 7 + Aplikace / Step 7 + App

Pripojeni k aplikaci 70mai

Stahnte aplikaci 70mai (QR kod nebo App Store / Google Play). Na stranice zarizeni stisknete '+', vyberte typ kamery. Zapnete kameru, aktivujte Wi-Fi hotspot a pripojte se dle pokynach v aplikaci.

Hlasove ovladani

Kamera podporuje hlasove ovladani v anglictine a mandarinstine. Prikazy: 'Take photo', 'Record video', 'Record audio', 'Turn off audio', 'Enable hotspot', 'Disable hotspot'.

Technicke parametry

Produkt / Product	Palubni kamera / Dash Cam
Model	T400 + RC21
Vstup / Input	5 V = 2,4 A
Rozliseni / Resolution	2560 x 1440 (predni) / 1920 x 1080 (vnitrni, zadni RC21)
Objektiv / Lens	FOV 125° / F1.55
Napajeni / Power	Autozasuvka / Car charger socket
Wi-Fi	IEEE 802.11b/g/n/ax 2,4 GHz (Wi-Fi 6)
Bluetooth	Bluetooth 5.0
GPS	GPS, Galileo, QZSS
Pamet / Storage	microSD 32 GB – 512 GB, min. U3
EAN	6971669785260

SUNNYSOFT

Pravni informace

Vyrobce: 70mai Co., Ltd., Room 2220, Building 2, No. 588 Zixing Road, Minhang District, Shanghai, China

Zaruka: 24 mesicu

Prohlaseni o shode EU: <https://help.70mai.asia/1193.html>

Zbavte se zarizeni v souladu s predpisy o elektronickem odpadu (OEEZ - 2012/19/EU).

CE | WEEE | RoHS

SUNNYSOFT

70mai Dash Cam T400 + RC21

Užívateľská príručka / User Manual

Slovenčina

Vyrobce / Manufacturer: 70mai Co., Ltd.

www.70mai.com | help@70mai.com

SUNNYSOFT

Bezpečnosť baterie

- Zariadenie obsahuje knoflíkovú bateriu (Li). **NEROZEBIREJTE, NEROZBIJAJTE** ani nevystavujte nadmerne teplu — hrozi výbuch.
- Baterie není vymenná. Nevymenjujte ji sami — jen odborný servis.
- Pri deformácii, nabreknutí nebo uniku baterie ihned prestane kameru používat a kontaktujte servis.

Pamätová karta

- Pred použitím vložte pamätovú kartu (predáva sa samostatne).
- Podporované karty: MicroSD, 32 GB – 512 GB, U3 (UHS-3) alebo vyššie.
- Pri prvom vložení naformátujte kartu v kamese.
- Nevkladajte ani nevyťahujte pamätovú kartu pri zapnutej kamese.
- Používajte kvalitné pamätové karty od renomovaného predajcu.

Bezpečnostné pokyny

- Pred použitím si starostlivo prečítajte tento návod a uschovajte ho na bezpečnom mieste.
- Táto palubná kamera pomáha vodičovi so zaznamenaním okolia vozidla. Nezaručuje bezpečnosť jazdy.
- Neinstalujte tak, aby blokovala výhľad vodiča alebo airbag.
- Nepoužívajte pri teplotách nad 60 °C alebo pod -10 °C.
- Uschovajte mimo dosahu silných magnetických poli.
- Toto zariadenie nie je hračka – malé súčiastky môžu predstavovať riziko udusenía u detí.

SUNNYSOFT

Obsah balenia

- Palubna kamera 70mai T400 x 1
- Drzak (predmontovany) x 1
- Napajaci kabel x 1
- Nabijecka do auta x 1
- Samolepica nalepka x 1
- Elektrostaticka nalepka x 2
- Nastroj na kabel x 1
- Sada zadnej kamery RC21 x 1
- Navod na pouzitie x 1

Prehľad výrobku

1-Display / 2-Function buttons / 3-Power button / 4-Microphone / 5-Ventilation holes / 6-Indicator / 7-Cabin camera / 8-Bracket / 9-Speaker / 10-Front camera / 11-Power port / 12-Rear camera port / 13-Memory card slot / 14-Adhesive sticker

Please read this manual carefully before using the product and keep it in a safe place.

Memory Card Instructions

- A memory card (sold separately) must be installed in the dash cam before use.
- The dash cam supports standard microSD cards. Please use memory cards with capacity of 32GB-512GB and rating of U3(UHS-3) or higher.
- The default file partition format of the memory card may be inconsistent with the format supported by the dash cam. When inserting the memory card for the first time, please format it in the dash cam before use. Formatting the memory card will delete all files on the card. Please back up important data to another device beforehand.
- The memory card may become damaged or deteriorated after repeated cycles of overwriting, and this may affect its ability to save video and image files. If this occurs, immediately replace it with a new memory card.
- Please use a high-quality memory card purchased from a reputable vendor. Inferior memory cards may have issues such as the actual reading/writing speeds do not match the stated speeds, and the actual storage capacity does not match the stated storage capacity. We shall not be held liable for lost or damaged videos caused by the use of a low-quality memory card.
- Do not insert or remove a memory card while the dash cam is turned on.

Battery Safety

- This device contains a coin battery (lithium battery). DO NOT disassemble, smash, or subject

the product to excessive heat, as this could result in explosion.

- The battery is non-removable. DO NOT attempt to replace or repair it. If replacement is required, ONLY have it replaced by a professional with the same model.
- Do not use the product in extreme weathers. Temperatures that are too low or too high may cause the battery to explode or give off flammable gas or liquid.
- Dispose of the cam following all local and national regulations on electronic waste disposal.
- If the battery becomes deformed, swollen, or starts leaking during use or storage, stop using the dash cam immediately in order to avoid safety issues, and contact after-sales service.

Precautions

- Before using this dash cam, please read all the precautions and the online guide to ensure correct and safe use.
- This dash cam is intended to assist drivers with the purpose of recording the environment outside the vehicle. The dash cam does not guarantee the user's driving safety. We shall not be held liable for any accident, damage, or loss of information caused by operating the dash cam while driving.
- Due to differences in vehicle conditions, driving style, driving environment, etc., some functions may not work properly. A power failure, usage in environments outside the normal operating temperature or humidity range, a collision, or a damaged memory card may cause the dash cam to function abnormally. There is no guarantee that this dash cam will function normally under all

Instalacia

- 1. Instalacia elektrostatickej nalepky — Nalezte nalepku na odporucene miesto na celnom skle. Vytlačte vzduchove bubliny.
- 2. Instalacia drzaka — Zarovnajzte drzak s drazkou na zadnej strane kamery a zasunte ho nahor.
- 3. Vloženie pamätovkej karty — Vložzte pamätovku kartu do slotu.
- 4. Montaz kamery — Odstrante kryciu vrstvu z drzaka a nalezte kameru na elektrostaticku nalepku.
- 5. Pripojenie napajaciho kabla — Prepojte kameru s nabijacom autonabijacky kablom.
- 6. Vedenie kabla — Privedzte kabel k zasuvke vozidla a zapojte nabijacu. Nastartujte motor – kamera sa automaticky zapne.
- 7. Nastavenie uhla kamery — Upravte uhol podla obrazu na hlavnej obrazovke po zapnutí.

circumstances. Videos recorded by this dash cam are for reference only.

- Please install this dash cam correctly, and do not block the driver's line of sight, nor block the vehicle's airbag, in order to avoid product failure or personal injury.
- Please use the included car charger, power cord, and other accessories in order to avoid product failure due to non-conformance. We shall not be held liable for any loss or damage caused by the use of a non-genuine car charger or power cord.
- Please keep this dash cam away from any strong magnetic fields, as they may cause damage to the dash cam.
- Do not use this dash cam in environments with temperatures over 60°C or below -10°C.
- Please only use this dash cam within the scope permitted by law.
- This device is not a toy. Some of its small components may pose risk of suffocation to children. Keep it out of the reach of children.

Package Contents

If you purchased the Dash Cam Set, check the following items in the package:

- Dash Cam × 1
- Mount (pre-installed on the dash cam) × 1
- Power cord × 1
- Car charger × 1
- Adhesive sticker × 1
- Electrostatic sticker × 2
- Wiring trim tool × 1
- User manual × 1

 
- Rear camera package* × 1

 
* This package contains the rear camera, rear camera wire and other accessories for the rear camera. For more information, please refer to the rear camera user manual.

If you purchased the dash cam only, check the following items in the package:

- Dash Cam × 1
- Mount (pre-installed on the dash cam) × 1
- Power cord × 1
- Car charger × 1
- Adhesive sticker × 1
- Electrostatic sticker × 2
- Wiring trim tool × 1
- User manual × 1

Product Overview

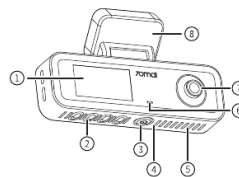

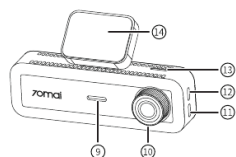

- ① Display screen
- ② Function buttons
- ③ Power button
- ④ Microphone
- ⑤ Ventilation holes
- ⑥ Indicator
- ⑦ Cabin camera
- ⑧ Bracket
- ⑨ Speaker
- ⑩ Front camera
- ⑪ Power port
- ⑫ Rear camera port
- ⑬ Memory card slot
- ⑭ Adhesive sticker

Note: Illustrations of the product, accessories, and user interface in the user manual are for reference purposes only. The actual product and functions may vary due to product enhancements.

Installation

 
1. Installing the electrostatic sticker

Paste the electrostatic sticker on the recommended

area on the front windshield. Press the sticker to remove air bubbles out.


Avoid the edge of the windshield and select the flat and smooth area for the installation.

Note: Keep the windshield clean and dry without liquid residue to prevent the sticker from losing adhesion and dash cam from dropping.



2. Installing the mount

 
Align the mount to the slot on the back and slide it up.

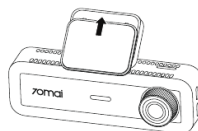

3. Inserting the memory card

Insert the memory card into the card slot.

 
Krok 4–6 / Steps 4–6

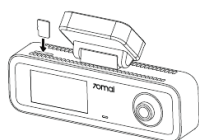

4. Mounting the dash cam


Remove the release liner on the mount and paste the cam to the electrostatic sticker.

 and plug the car charger into the power outlet. Start the car engine, and the dash cam will automatically turn on.



Notes:

 - Use the included wiring trim tool to hide the power cord underneath the vehicle's headliner and rubber seal along the A-pillar.
- Depending on the vehicle, the cigarette lighter socket may be located in a different position. The above figure is for reference only.

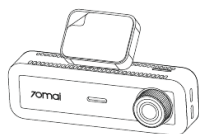


5. Connecting the power cord

Connect the dash cam and car charger with the power cord.


7. Adjusting the camera angle

 Adjust the camera angle based on the image presented on the main screen when dash cam is turned on.



6. Routing cable

 Route the power cord to the vehicle's power outlet

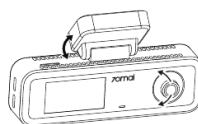

Connecting with the 70mai App

This product can be used in conjunction with the 70mai app. Follow the steps below to connect it with

Krok 7 + Aplikace / Step 7 + App

Pripojenie k aplikácii 70mai

Stiahnite aplikáciu 70mai (QR kód alebo App Store / Google Play). Na stránke zariadenia stlačte '+', vyberte typ kamery. Zapnite kameru, aktivujte Wi-Fi hotspot a pripojte sa podľa pokynov v aplikácii.

Hlasové ovládanie

Kamera podporuje hlasové ovládanie v angličtine a mandarínštine. Prikazy: 'Take photo', 'Record video', 'Record audio', 'Turn off audio', 'Enable hotspot', 'Disable hotspot'.

Technické parametre

Produkt / Product	Palubni kamera / Dash Cam
Model	T400 + RC21
Vstup / Input	5 V = 2,4 A
Rozliseni / Resolution	2560 x 1440 (predni) / 1920 x 1080 (vnitrni, zadni RC21)
Objektiv / Lens	FOV 125° / F1.55
Napajeni / Power	Autozasuvka / Car charger socket
Wi-Fi	IEEE 802.11b/g/n/ax 2,4 GHz (Wi-Fi 6)
Bluetooth	Bluetooth 5.0
GPS	GPS, Galileo, QZSS
Pamet / Storage	microSD 32 GB – 512 GB, min. U3
EAN	6971669785260

SUNNYSOFT

Pravne informacie

Vyrobca: 70mai Co., Ltd., Room 2220, Building 2, No. 588 Zixing Road, Minhang District, Shanghai, China

Zaruka: 24 mesiacov

Vyhlasenie o zhode EU: <https://help.70mai.asia/1193.html>

Zlikvidujte zariadenie v sulade s predpismi o elektronickej odpade (WEEE - 2012/19/EU).

CE | WEEE | RoHS

SUNNYSOFT

70mai Dash Cam T400 + RC21

Uzivatel'ska prirucka / User Manual

Deutsch

Vyrobce / Manufacturer: 70mai Co., Ltd.

www.70mai.com | help@70mai.com

SUNNYSOFT

Batteriesicherheit

- Zarizeni obsahuje knoflíkovou baterii (Li). NEROZEBIREJTE, NEROZBIJEJTE ani nevystavujte nadmerneemu teplu — hrozi vybuch. • Baterie neni vymenna. Nevymenjujte ji sami — jen odborný servis. • Při deformaci, nabreknutí nebo uniku baterie ihned prestante kameru pouzivat a kontaktujte servis.

Speicherkarte

- Vor Gebrauch muss eine Speicherkarte (separat erhältlich) eingesetzt werden.
- Unterstützte Karten: MicroSD, 32 GB – 512 GB, U3 (UHS-3) oder höher.
- Beim ersten Einsetzen die Karte in der Dashcam formatieren.
- Speicherkarte nicht bei eingeschalteter Dashcam ein- oder ausbauen.
- Hochwertige Speicherkarte von einem renommierten Anbieter verwenden.

Sicherheitshinweise

- Lesen Sie diese Anleitung sorgfältig durch, bevor Sie das Produkt verwenden.
- Diese Dashcam unterstützt Fahrer bei der Aufzeichnung der Fahrzeugumgebung. Sie garantiert keine Fahrsicherheit.
- Nicht so montieren, dass das Sichtfeld des Fahrers oder der Airbag blockiert wird.
- Nicht bei Temperaturen über 60 °C oder unter -10 °C verwenden.
- Von starken Magnetfeldern fernhalten.
- Dieses Gerät ist kein Spielzeug — Kleinteile können für Kinder ein Erstickenrisiko darstellen.

Lieferumfang

- Dashcam 70mai T400 x 1
- Halterung (vorinstalliert) x 1
- Netzkabel x 1
- Fahrzeugladegerät x 1
- Aufkleber x 1
- Elektrostatischer Aufkleber x 2
- Kabeleinpasswerkzeug x 1
- Heckkamera-Paket RC21 x 1
- Betriebsanleitung x 1

Produktübersicht

1-Display / 2-Function buttons / 3-Power button / 4-Microphone / 5-Ventilation holes / 6-Indicator / 7-Cabin camera / 8-Bracket / 9-Speaker / 10-Front camera / 11-Power port / 12-Rear camera port / 13-Memory card slot / 14-Adhesive sticker

Please read this manual carefully before using the product and keep it in a safe place.

Memory Card Instructions

- A memory card (sold separately) must be installed in the dash cam before use.
- The dash cam supports standard microSD cards. Please use memory cards with capacity of 32GB-512GB and rating of U3(UHS-3) or higher.
- The default file partition format of the memory card may be inconsistent with the format supported by the dash cam. When inserting the memory card for the first time, please format it in the dash cam before use. Formatting the memory card will delete all files on the card. Please back up important data to another device beforehand.
- The memory card may become damaged or deteriorated after repeated cycles of overwriting, and this may affect its ability to save video and image files. If this occurs, immediately replace it with a new memory card.
- Please use a high-quality memory card purchased from a reputable vendor. Inferior memory cards may have issues such as the actual reading/writing speeds do not match the stated speeds, and the actual storage capacity does not match the stated storage capacity. We shall not be held liable for lost or damaged videos caused by the use of a low-quality memory card.
- Do not insert or remove a memory card while the dash cam is turned on.

Battery Safety

- This device contains a coin battery (lithium battery). DO NOT disassemble, smash, or subject

the product to excessive heat, as this could result in explosion.

- The battery is non-removable. DO NOT attempt to replace or repair it. If replacement is required, ONLY have it replaced by a professional with the same model.
- Do not use the product in extreme weathers. Temperatures that are too low or too high may cause the battery to explode or give off flammable gas or liquid.
- Dispose of the cam following all local and national regulations on electronic waste disposal.
- If the battery becomes deformed, swollen, or starts leaking during use or storage, stop using the dash cam immediately in order to avoid safety issues, and contact after-sales service.

Precautions

- Before using this dash cam, please read all the precautions and the online guide to ensure correct and safe use.
- This dash cam is intended to assist drivers with the purpose of recording the environment outside the vehicle. The dash cam does not guarantee the user's driving safety. We shall not be held liable for any accident, damage, or loss of information caused by operating the dash cam while driving.
- Due to differences in vehicle conditions, driving style, driving environment, etc., some functions may not work properly. A power failure, usage in environments outside the normal operating temperature or humidity range, a collision, or a damaged memory card may cause the dash cam to function abnormally. There is no guarantee that this dash cam will function normally under all

01

Produktübersicht — 70mai T400

Installation

- 1. Elektrostatischen Aufkleber anbringen — Aufkleber auf den empfohlenen Bereich der Windschutzscheibe kleben. Luftblasen herausdrücken.
- 2. Halterung montieren — Halterung am Schlitz auf der Rückseite ausrichten und nach oben schieben.
- 3. Speicherkarte einsetzen — Speicherkarte in den Kartensteckplatz einsetzen.
- 4. Dashcam montieren — Schutzfolie von der Halterung entfernen und Kamera auf den Aufkleber kleben.
- 5. Netzkabel anschliessen — Dashcam und Fahrzeugladegerät mit dem Netzkabel verbinden.
- 6. Kabelführung — Kabel zum Netzanschluss des Fahrzeugs führen und Ladegerät einstecken. Motor starten – Dashcam schaltet sich automatisch ein.
- 7. Kamerawinkel einstellen — Winkel anhand des Bildes auf dem Hauptbildschirm nach dem Einschalten einstellen.

circumstances. Videos recorded by this dash cam are for reference only.

- Please install this dash cam correctly, and do not block the driver's line of sight, nor block the vehicle's airbag, in order to avoid product failure or personal injury.
- Please use the included car charger, power cord, and other accessories in order to avoid product failure due to non-conformance. We shall not be held liable for any loss or damage caused by the use of a non-genuine car charger or power cord.
- Please keep this dash cam away from any strong magnetic fields, as they may cause damage to the dash cam.
- Do not use this dash cam in environments with temperatures over 60°C or below -10°C.
- Please only use this dash cam within the scope permitted by law.
- This device is not a toy. Some of its small components may pose risk of suffocation to children. Keep it out of the reach of children.

Package Contents

If you purchased the Dash Cam Set, check the following items in the package:

- Dash Cam × 1
- Mount (pre-installed on the dash cam) × 1
- Power cord × 1
- Car charger × 1
- Adhesive sticker × 1
- Electrostatic sticker × 2
- Wiring trim tool × 1
- User manual × 1

 
- Rear camera package* × 1

 
* This package contains the rear camera, rear camera wire and other accessories for the rear camera. For more information, please refer to the rear camera user manual.

If you purchased the dash cam only, check the following items in the package:

- Dash Cam × 1
- Mount (pre-installed on the dash cam) × 1
- Power cord × 1
- Car charger × 1
- Adhesive sticker × 1
- Electrostatic sticker × 2
- Wiring trim tool × 1
- User manual × 1

Product Overview

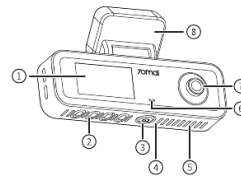

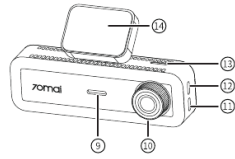

- ① Display screen
- ② Function buttons
- ③ Power button
- ④ Microphone
- ⑤ Ventilation holes
- ⑥ Indicator
- ⑦ Cabin camera
- ⑧ Bracket
- ⑨ Speaker
- ⑩ Front camera
- ⑪ Power port
- ⑫ Rear camera port
- ⑬ Memory card slot
- ⑭ Adhesive sticker

 
Note: Illustrations of the product, accessories, and user interface in the user manual are for reference purposes only. The actual product and functions may vary due to product enhancements.

Installation

1. Installing the electrostatic sticker


Paste the electrostatic sticker on the recommended

area on the front windshield. Press the sticker to remove air bubbles out.
Avoid the edge of the windshield and select the flat and smooth area for the installation.
Note: Keep the windshield clean and dry without liquid residue to prevent the sticker from losing adhesion and dash cam from dropping.



2. Installing the mount

 Align the mount to the slot on the back and slide it up.

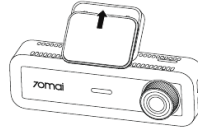


3. Inserting the memory card

Insert the memory card into the card slot.

03

 
Krok 4–6 / Steps 4–6

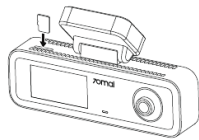

4. Mounting the dash cam


Remove the release liner on the mount and paste the cam to the electrostatic sticker.

 and plug the car charger into the power outlet. Start the car engine, and the dash cam will automatically turn on.



Notes:

 - Use the included wiring trim tool to hide the power cord underneath the vehicle's headliner and rubber seal along the A-pillar.
- Depending on the vehicle, the cigarette lighter socket may be located in a different position. The above figure is for reference only.

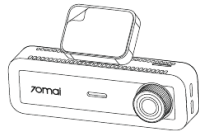


5. Connecting the power cord

Connect the dash cam and car charger with the power cord.


7. Adjusting the camera angle

 Adjust the camera angle based on the image presented on the main screen when dash cam is turned on.



6. Routing cable

 Route the power cord to the vehicle's power outlet

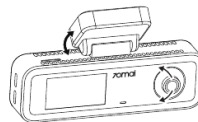

Connecting with the 70mai App

This product can be used in conjunction with the 70mai app. Follow the steps below to connect it with

04

Krok 7 + Aplikace / Step 7 + App

Verbindung mit der 70mai-App

Laden Sie die 70mai-App herunter (QR-Code oder App Store/Google Play). Tippen Sie auf '+' auf der Geräteseite, wählen Sie den Dashcam-Typ. Schalten Sie die Dashcam ein, aktivieren Sie den WLAN-Hotspot und folgen Sie den Anweisungen in der App.

Sprachsteuerung

Die Dashcam unterstützt Sprachsteuerung auf Englisch und Mandarin. Befehle: 'Take photo', 'Record video', 'Record audio', 'Turn off audio', 'Enable hotspot', 'Disable hotspot'.

Technische Daten

Produkt / Product	Palubni kamera / Dash Cam
Model	T400 + RC21
Vstup / Input	5 V = 2,4 A
Rozliseni / Resolution	2560 x 1440 (predni) / 1920 x 1080 (vnitrni, zadni RC21)
Objektiv / Lens	FOV 125° / F1.55
Napajeni / Power	Autozasuvka / Car charger socket
Wi-Fi	IEEE 802.11b/g/n/ax 2,4 GHz (Wi-Fi 6)
Bluetooth	Bluetooth 5.0
GPS	GPS, Galileo, QZSS
Pamet / Storage	microSD 32 GB – 512 GB, min. U3
EAN	6971669785260

SUNNYSOFT

Rechtliche Hinweise

Hersteller: 70mai Co., Ltd., Room 2220, Building 2, No. 588 Zixing Road, Minhang District, Shanghai, China

Garantie: 24 Monate

EU-Konformitätserklärung: <https://help.70mai.asia/1193.html>

Entsorgen Sie das Gerät gemäss den örtlichen Vorschriften für Elektronikschrott (WEEE - 2012/19/EU).

CE | WEEE | RoHS

SUNNYSOFT

70mai Dash Cam T400 + RC21

Uzivatelska prirucka / User Manual

Polski

Vyrobce / Manufacturer: 70mai Co., Ltd.

www.70mai.com | help@70mai.com

SUNNYSOFT

Bezpieczeństwo baterii

- Zarządzenie zawiera baterię (Li). NEROZEBIREJTE, NEROZBIJEJTE ani nie wystawiajcie nadmiernej temperaturze — grozi wybuch.
- Baterie nie są wymienne. Nie wymieniajcie ich sami — tylko specjalista.
- W przypadku uszkodzenia, pęknięcia lub wycieku baterii natychmiast przestańcie używać kamery i skontaktujcie się z serwisem.

Karta pamięci

- Przed użyciem należy zainstalować kartę pamięci (sprzedawana oddzielnie).
- Obsługiwane karty: MicroSD, 32 GB – 512 GB, U3 (UHS-3) lub wyższa klasa.
- Po pierwszym włożeniu sformatować kartę w kamerze.
- Nie wkładać ani nie wyjmować karty pamięci przy włączonej kamerze.
- Używać kart pamięci wysokiej jakości od renomowanego sprzedawcy.

Instrukcje bezpieczeństwa

- Przed użyciem prosimy uważnie zapoznać się z niniejszą instrukcją.
- Kamera służy do wspomagania kierowców przy nagrywaniu otoczenia pojazdu. Nie gwarantuje bezpieczeństwa jazdy.
- Nie instalować tak, aby blokowała pole widzenia kierowcy lub poduszkę powietrzną.
- Nie używać w temperaturach powyżej 60 °C lub poniżej -10 °C.
- Przechowywać z dala od silnych pól magnetycznych.
- Urządzenie nie jest zabawką — małe części mogą stanowić zagrożenie uduszenia dla dzieci.

Zawartosc opakowania

- Kamera Dash Cam 70mai T400 x 1
- Uchwyt (fabrycznie zamontowany) x 1
- Kabel zasilajacy x 1
- Ladowarka samochodowa x 1
- Naklejka samoprzylepna x 1
- Naklejka elektrostatyczna x 2
- Narzedzie do kabli x 1
- Zestaw kamery tylnej RC21 x 1
- Instrukcja obslugi x 1

Przegląd produktu

1-Display / 2-Function buttons / 3-Power button / 4-Microphone / 5-Ventilation holes / 6-Indicator / 7-Cabin camera / 8-Bracket / 9-Speaker / 10-Front camera / 11-Power port / 12-Rear camera port / 13-Memory card slot / 14-Adhesive sticker

Please read this manual carefully before using the product and keep it in a safe place.

Memory Card Instructions

- A memory card (sold separately) must be installed in the dash cam before use.
- The dash cam supports standard microSD cards. Please use memory cards with capacity of 32GB-512GB and rating of U3(UHS-3) or higher.
- The default file partition format of the memory card may be inconsistent with the format supported by the dash cam. When inserting the memory card for the first time, please format it in the dash cam before use. Formatting the memory card will delete all files on the card. Please back up important data to another device beforehand.
- The memory card may become damaged or deteriorated after repeated cycles of overwriting, and this may affect its ability to save video and image files. If this occurs, immediately replace it with a new memory card.
- Please use a high-quality memory card purchased from a reputable vendor. Inferior memory cards may have issues such as the actual reading/writing speeds do not match the stated speeds, and the actual storage capacity does not match the stated storage capacity. We shall not be held liable for lost or damaged videos caused by the use of a low-quality memory card.
- Do not insert or remove a memory card while the dash cam is turned on.

Battery Safety

- This device contains a coin battery (lithium battery). DO NOT disassemble, smash, or subject

the product to excessive heat, as this could result in explosion.

- The battery is non-removable. DO NOT attempt to replace or repair it. If replacement is required, ONLY have it replaced by a professional with the same model.
- Do not use the product in extreme weathers. Temperatures that are too low or too high may cause the battery to explode or give off flammable gas or liquid.
- Dispose of the cam following all local and national regulations on electronic waste disposal.
- If the battery becomes deformed, swollen, or starts leaking during use or storage, stop using the dash cam immediately in order to avoid safety issues, and contact after-sales service.

Precautions

- Before using this dash cam, please read all the precautions and the online guide to ensure correct and safe use.
- This dash cam is intended to assist drivers with the purpose of recording the environment outside the vehicle. The dash cam does not guarantee the user's driving safety. We shall not be held liable for any accident, damage, or loss of information caused by operating the dash cam while driving.
- Due to differences in vehicle conditions, driving style, driving environment, etc., some functions may not work properly. A power failure, usage in environments outside the normal operating temperature or humidity range, a collision, or a damaged memory card may cause the dash cam to function abnormally. There is no guarantee that this dash cam will function normally under all

01

Przegląd produktu — 70mai T400

Instalacja

- 1. Instalacja naklejki elektrostatycznej — Należyc naklejke na zalecany obszar przedniej szyby. Docisnac, aby usunac pecherzyki powietrza.
- 2. Montaz uchwyty — Uchwyt dopasowac do gniazda z tylu kamery i przesunac go w gore.
- 3. Wlozenie karty pamieci — Wlozyc karte pamieci do gniazda karty.
- 4. Montaz kamery — Zdjac folie z uchwyty i przykleic kamere do naklejki elektrostatycznej.
- 5. Podlaczenie przewodu zasilajacego — Polaczyc kamere z ladowarka samochodowa za pomoca kabla.
- 6. Prowadzenie przewodu — Przewod doprowadzic do gniazda zasilania i podlaczyc ladowarke. Uruchomic silnik – kamera wlaczy sie automatycznie.
- 7. Regulacja kata kamery — Dostosowac kat kamery na podstawie obrazu na ekranie glownym po wlaczeniu.

circumstances. Videos recorded by this dash cam are for reference only.

- Please install this dash cam correctly, and do not block the driver's line of sight, nor block the vehicle's airbag, in order to avoid product failure or personal injury.
- Please use the included car charger, power cord, and other accessories in order to avoid product failure due to non-conformance. We shall not be held liable for any loss or damage caused by the use of a non-genuine car charger or power cord.
- Please keep this dash cam away from any strong magnetic fields, as they may cause damage to the dash cam.
- Do not use this dash cam in environments with temperatures over 60°C or below -10°C.
- Please only use this dash cam within the scope permitted by law.
- This device is not a toy. Some of its small components may pose risk of suffocation to children. Keep it out of the reach of children.

Package Contents

If you purchased the Dash Cam Set, check the following items in the package:

- Dash Cam × 1
- Mount (pre-installed on the dash cam) × 1
- Power cord × 1
- Car charger × 1
- Adhesive sticker × 1
- Electrostatic sticker × 2
- Wiring trim tool × 1
- User manual × 1

 
- Rear camera package* × 1

 
* This package contains the rear camera, rear camera wire and other accessories for the rear camera. For more information, please refer to the rear camera user manual.

If you purchased the dash cam only, check the following items in the package:

- Dash Cam × 1
- Mount (pre-installed on the dash cam) × 1
- Power cord × 1
- Car charger × 1
- Adhesive sticker × 1
- Electrostatic sticker × 2
- Wiring trim tool × 1
- User manual × 1

Product Overview

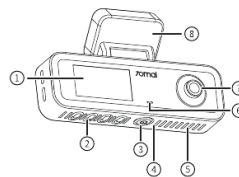

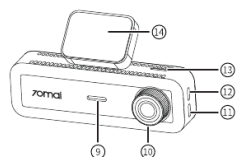

- ① Display screen
- ② Function buttons
- ③ Power button
- ④ Microphone
- ⑤ Ventilation holes
- ⑥ Indicator
- ⑦ Cabin camera
- ⑧ Bracket
- ⑨ Speaker
- ⑩ Front camera
- ⑪ Power port
- ⑫ Rear camera port
- ⑬ Memory card slot
- ⑭ Adhesive sticker

 
Note: Illustrations of the product, accessories, and user interface in the user manual are for reference purposes only. The actual product and functions may vary due to product enhancements.

Installation

1. Installing the electrostatic sticker


Paste the electrostatic sticker on the recommended

area on the front windshield. Press the sticker to remove air bubbles out.
Avoid the edge of the windshield and select the flat and smooth area for the installation.
Note: Keep the windshield clean and dry without liquid residue to prevent the sticker from losing adhesion and dash cam from dropping.



2. Installing the mount

 Align the mount to the slot on the back and slide it up.

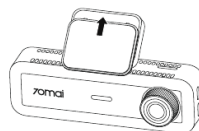


3. Inserting the memory card

Insert the memory card into the card slot.

03

 
Krok 4-6 / Steps 4-6

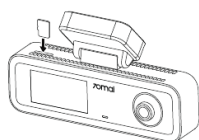

4. Mounting the dash cam


Remove the release liner on the mount and paste the cam to the electrostatic sticker.

 and plug the car charger into the power outlet. Start the car engine, and the dash cam will automatically turn on.



Notes:

 - Use the included wiring trim tool to hide the power cord underneath the vehicle's headliner and rubber seal along the A-pillar.
- Depending on the vehicle, the cigarette lighter socket may be located in a different position. The above figure is for reference only.

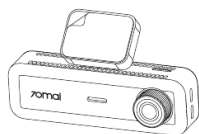


5. Connecting the power cord

Connect the dash cam and car charger with the power cord.


7. Adjusting the camera angle

 Adjust the camera angle based on the image presented on the main screen when dash cam is turned on.



6. Routing cable

 Route the power cord to the vehicle's power outlet

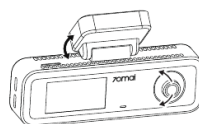

Connecting with the 70mai App

This product can be used in conjunction with the 70mai app. Follow the steps below to connect it with

04

Krok 7 + Aplikace / Step 7 + App

Laczenie z aplikacja 70mai

Pobierz aplikacje 70mai (kod QR lub App Store/Google Play). Stukac '+' na stronie urzadzenia, wybrac typ kamery. Wlaczyc kamere, aktywowac hotspot Wi-Fi i postepowac zgodnie z instrukcjami w aplikacji.

Sterowanie glosowe

Kamera obsluje sterowanie glosowe w jezyku angielskim i mandarynskim. Polecenia: 'Take photo', 'Record video', 'Record audio', 'Turn off audio', 'Enable hotspot', 'Disable hotspot'.

Dane techniczne

Produkt / Product	Palubni kamera / Dash Cam
Model	T400 + RC21
Vstup / Input	5 V = 2,4 A
Rozliseni / Resolution	2560 x 1440 (predni) / 1920 x 1080 (vnitrni, zadni RC21)
Objektiv / Lens	FOV 125° / F1.55
Napajeni / Power	Autozasuvka / Car charger socket
Wi-Fi	IEEE 802.11b/g/n/ax 2,4 GHz (Wi-Fi 6)
Bluetooth	Bluetooth 5.0
GPS	GPS, Galileo, QZSS
Pamet / Storage	microSD 32 GB – 512 GB, min. U3
EAN	6971669785260

SUNNYSOFT

Informacje prawne

Producent: 70mai Co., Ltd., Room 2220, Building 2, No. 588 Zixing Road, Minhang District, Szanghaj, Chiny

Gwarancja: 24 miesiące

Deklaracja zgodności UE: <https://help.70mai.asia/1193.html>

Należy utylizować urządzenie zgodnie z lokalnymi przepisami dotyczącymi odpadów elektronicznych (WEEE - 2012/19/EU).

CE | WEEE | RoHS

SUNNYSOFT

70mai Dash Cam T400 + RC21

Uzivatelska prirucka / User Manual

Magyar

Vyrobce / Manufacturer: 70mai Co., Ltd.

www.70mai.com | help@70mai.com

SUNNYSOFT

Akkumulátor biztonság

- Zarizeni obsahuje knoflíkovou baterii (Li). NEROZEBIREJTE, NEROZBIJEJTE ani nevystavujte nadmerneemu teplu — hrozi vybuch. • Baterie neni vymenna. Nevymenjujte ji sami — jen odborný servis. • Pri deformaci, nabreknutí nebo uniku baterie ihned prestante kameru pouzivat a kontaktujte servis.

Memoriakartyra vonatkozó utasítások

- Használat előtt memoriakartyát kell behelyezni (külön vasárellható).
- Támogatott kártyák: MicroSD, 32 GB – 512 GB, U3 (UHS-3) vagy magasabb.
- Az első behelyezéskor formázza a kártyát a kamerában.
- Ne vegye ki és ne helyezze be a memoriakartyát bekapcsolt állapotban.
- Csak megbízható eladótól vásárolt kiemino minosegu memoriakartyát használjon.

Biztonsági utasítások

- Használat előtt figyelmesen olvassa el ezt az útmutatót és orúzza meg.
- A fedélbord kamera a jármű külső környezetnek rogziteseben segíti a sofórokat. Nem garantálja a vezetési biztonságot.
- Ne szerelje úgy, hogy blokkolja a sofórat látóteret vagy az airbagot.
- Ne használjon 60 °C fölé vagy -10 °C alatti környezeti hőmérsékleten.
- Tartsa távol erős mágneses terektől.
- Ez az eszköz nem játék — kis alkotórészei fulladás kockázatot jelenthetik a gyermekek számára.

SUNNYSOFT

A csomag tartalma

- Fedelbord kamera 70mai T400 x 1
- Tarto (előre felszerelve) x 1
- Toltokabel x 1
- Autós töltő x 1
- Oentapadós lap x 1
- Elektrostatikus lap x 2
- Kableszétvalaszto x 1
- Hatso kamera csomag RC21 x 1
- Hasznalati utmutato x 1

A termék attekintese

1-Display / 2-Function buttons / 3-Power button / 4-Microphone / 5-Ventilation holes / 6-Indicator / 7-Cabin camera / 8-Bracket / 9-Speaker / 10-Front camera / 11-Power port / 12-Rear camera port / 13-Memory card slot / 14-Adhesive sticker

Please read this manual carefully before using the product and keep it in a safe place.

Memory Card Instructions

- A memory card (sold separately) must be installed in the dash cam before use.
- The dash cam supports standard microSD cards. Please use memory cards with capacity of 32GB-512GB and rating of U3(UHS-3) or higher.
- The default file partition format of the memory card may be inconsistent with the format supported by the dash cam. When inserting the memory card for the first time, please format it in the dash cam before use. Formatting the memory card will delete all files on the card. Please back up important data to another device beforehand.
- The memory card may become damaged or deteriorated after repeated cycles of overwriting, and this may affect its ability to save video and image files. If this occurs, immediately replace it with a new memory card.
- Please use a high-quality memory card purchased from a reputable vendor. Inferior memory cards may have issues such as the actual reading/writing speeds do not match the stated speeds, and the actual storage capacity does not match the stated storage capacity. We shall not be held liable for lost or damaged videos caused by the use of a low-quality memory card.
- Do not insert or remove a memory card while the dash cam is turned on.

Battery Safety

- This device contains a coin battery (lithium battery). DO NOT disassemble, smash, or subject

the product to excessive heat, as this could result in explosion.

- The battery is non-removable. DO NOT attempt to replace or repair it. If replacement is required, ONLY have it replaced by a professional with the same model.
- Do not use the product in extreme weathers. Temperatures that are too low or too high may cause the battery to explode or give off flammable gas or liquid.
- Dispose of the cam following all local and national regulations on electronic waste disposal.
- If the battery becomes deformed, swollen, or starts leaking during use or storage, stop using the dash cam immediately in order to avoid safety issues, and contact after-sales service.

Precautions

- Before using this dash cam, please read all the precautions and the online guide to ensure correct and safe use.
- This dash cam is intended to assist drivers with the purpose of recording the environment outside the vehicle. The dash cam does not guarantee the user's driving safety. We shall not be held liable for any accident, damage, or loss of information caused by operating the dash cam while driving.
- Due to differences in vehicle conditions, driving style, driving environment, etc., some functions may not work properly. A power failure, usage in environments outside the normal operating temperature or humidity range, a collision, or a damaged memory card may cause the dash cam to function abnormally. There is no guarantee that this dash cam will function normally under all

01

A termék attekintese — 70mai T400

Beszereles

- 1. Elektrosztatikus lap felhelyezése — Helyezze az elso szelvedore. Nyomkodja ki a levegobuborekat.
- 2. A tarto felhelyezese — Igazitsa a tartot a hatoldalon levo aljzatba es tolja felfel.
- 3. A memoriakartyat behelyezese — Dugja a memoriakartyat a kartyaresbe.
- 4. A fedelbord kamera feleresitese — Tavolitse el a tartoro az elvalaszto papirt es ragassza a kamerare az elektrosztatikus lapra.
- 5. A tapkabel csatlakoztasa — A fedelbord kamera tapkabelet csatlakoztassa a szivargyujto toltore.
- 6. A kabel elvezetese — Vezesse el a tapkabelt a jarmu szivargyujto csatlakoztojate. Inditsa be a motort – a kamera automatikusan bekapcsol.
- 7. A kamera szogenek beallitasa — Allitsa be a kamerat az elso kepernyoen megjeleno kep alapján.

circumstances. Videos recorded by this dash cam are for reference only.

- Please install this dash cam correctly, and do not block the driver's line of sight, nor block the vehicle's airbag, in order to avoid product failure or personal injury.
- Please use the included car charger, power cord, and other accessories in order to avoid product failure due to non-conformance. We shall not be held liable for any loss or damage caused by the use of a non-genuine car charger or power cord.
- Please keep this dash cam away from any strong magnetic fields, as they may cause damage to the dash cam.
- Do not use this dash cam in environments with temperatures over 60°C or below -10°C.
- Please only use this dash cam within the scope permitted by law.
- This device is not a toy. Some of its small components may pose risk of suffocation to children. Keep it out of the reach of children.

Package Contents

If you purchased the Dash Cam Set, check the following items in the package:

- Dash Cam × 1
- Mount (pre-installed on the dash cam) × 1
- Power cord × 1
- Car charger × 1
- Adhesive sticker × 1
- Electrostatic sticker × 2
- Wiring trim tool × 1
- User manual × 1

 
- Rear camera package* × 1

 
* This package contains the rear camera, rear camera wire and other accessories for the rear camera. For more information, please refer to the rear camera user manual.

If you purchased the dash cam only, check the following items in the package:

- Dash Cam × 1
- Mount (pre-installed on the dash cam) × 1
- Power cord × 1
- Car charger × 1
- Adhesive sticker × 1
- Electrostatic sticker × 2
- Wiring trim tool × 1
- User manual × 1

Product Overview

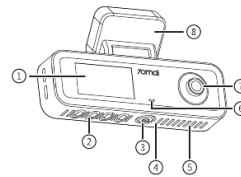

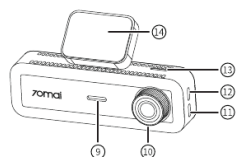

- ① Display screen
- ② Function buttons
- ③ Power button
- ④ Microphone
- ⑤ Ventilation holes
- ⑥ Indicator
- ⑦ Cabin camera
- ⑧ Bracket
- ⑨ Speaker
- ⑩ Front camera
- ⑪ Power port
- ⑫ Rear camera port
- ⑬ Memory card slot
- ⑭ Adhesive sticker

Note: Illustrations of the product, accessories, and user interface in the user manual are for reference purposes only. The actual product and functions may vary due to product enhancements.

Installation

 
1. Installing the electrostatic sticker

Paste the electrostatic sticker on the recommended

area on the front windshield. Press the sticker to remove air bubbles out.


Avoid the edge of the windshield and select the flat and smooth area for the installation.

Note: Keep the windshield clean and dry without liquid residue to prevent the sticker from losing adhesion and dash cam from dropping.



2. Installing the mount

 Align the mount to the slot on the back and slide it up.

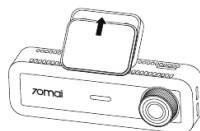


3. Inserting the memory card

Insert the memory card into the card slot.


03

 Krok 4–6 / Steps 4–6

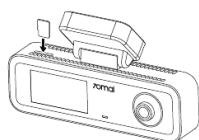


4. Mounting the dash cam

 Remove the release liner on the mount and paste the cam to the electrostatic sticker.

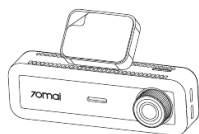

5. Connecting the power cord

 
Connect the dash cam and car charger with the power cord.



6. Routing cable

Route the power cord to the vehicle's power outlet

 and plug the car charger into the power outlet. Start the car engine, and the dash cam will automatically turn on.




Notes:

- Use the included wiring trim tool to hide the power cord underneath the vehicle's headliner and rubber seal along the A-pillar.
- Depending on the vehicle, the cigarette lighter socket may be located in a different position. The above figure is for reference only.

7. Adjusting the camera angle

 Adjust the camera angle based on the image presented on the main screen when dash cam is turned on.

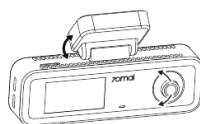

Connecting with the 70mai App

This product can be used in conjunction with the 70mai app. Follow the steps below to connect it with

04

Krok 7 + Aplikace / Step 7 + App

Csatlakozás a 70mai alkalmazáshoz

Tölts le a 70mai alkalmazást (QR-kod vagy App Store/Google Play). Erintse meg a '+' gombot az eszköz oldalon, keresse meg a megfelelő kameratípust. Kapcsolja be a kamerát, aktiválja a Wi-Fi hotspotot, és kövesse az útmutatót az alkalmazásban.

Hangvezérlés

A kamera támogatja a hangvezérlést angolul és mandarinul. Parancsok: 'Take photo', 'Record video', 'Record audio', 'Turn off audio', 'Enable hotspot', 'Disable hotspot'.

Muszaki adatok

Produkt / Product	Palubni kamera / Dash Cam
Model	T400 + RC21
Vstup / Input	5 V = 2,4 A
Rozliseni / Resolution	2560 x 1440 (predni) / 1920 x 1080 (vnitrni, zadni RC21)
Objektiv / Lens	FOV 125° / F1.55
Napajeni / Power	Autozasuvka / Car charger socket
Wi-Fi	IEEE 802.11b/g/n/ax 2,4 GHz (Wi-Fi 6)
Bluetooth	Bluetooth 5.0
GPS	GPS, Galileo, QZSS
Pamet / Storage	microSD 32 GB – 512 GB, min. U3
EAN	6971669785260

SUNNYSOFT

Jogi információk

Gyártó: 70mai Co., Ltd., Room 2220, Building 2, No. 588 Zixing Road, Minhang District, Shanghai, China

Garancia: 24 hónap

EU megfelelési nyilatkozat: <https://help.70mai.asia/1193.html>

Az eszközt az elektronikai hulladakra vonatkozó helyi szabályozások szerint kell eltávolítani (WEEE - 2012/19/EU).

CE | WEEE | RoHS

SUNNYSOFT

70mai Dash Cam T400 + RC21

Uzivatelska prirucka / User Manual

Romana

Vyrobce / Manufacturer: 70mai Co., Ltd.

www.70mai.com | help@70mai.com

SUNNYSOFT

Siguranta bateriei

- Zarizeni obsahuje knoflíkovou baterii (Li). NEROZEBIREJTE, NEROZBIJEJTE ani nevystavujte nadmerneemu teplu — hrozi vybuch. • Baterie neni vymenna. Nevymenjujte ji sami — jen odborný servis. • Pri deformaci, nabreknutí nebo uniku baterie ihned prestante kameru pouzivat a kontaktujte servis.

Card de memorie

- Inainte de utilizare trebuie instalat un card de memorie (vandut separat).
- Carduri acceptate: MicroSD, 32 GB – 512 GB, U3 (UHS-3) sau mai mare.
- La prima introducere, formatati cardul in camera de bord.
- Nu introduceti si nu scoateti cardul de memorie in timp ce camera este pornita.
- Utilizati un card de memorie de inalta calitate de la un furnizor de incredere.

Instructiuni de siguranta

- Va rugam sa cititi cu atentie acest manual inainte de utilizare si sa il pastrati intr-un loc sigur.
- Camera de bord este destinata inregistrarii mediului exterior al vehiculului. Nu garanteaza siguranta la condus.
- Nu instalati astfel incat sa blocheze raza vizuala a soferului sau airbagul.
- Nu utilizati la temperaturi peste 60 °C sau sub -10 °C.
- Nu permiteti apropierea de campuri magnetice puternice.
- Dispozitivul nu este o jucarie — componentele mici pot prezenta risc de sufocare pentru copii.

SUNNYSOFT

Continutul ambalajului

- Camera de bord 70mai T400 x 1
- Suport (preinstalat) x 1
- Cablu alimentare x 1
- Incarcator auto x 1
- Autocolant adeziv x 1
- Autocolant electrostatic x 2
- Instrument cabluri x 1
- Pachet camera spate RC21 x 1
- Manual utilizare x 1

Prezentarea produsului

1-Display / 2-Function buttons / 3-Power button / 4-Microphone / 5-Ventilation holes / 6-Indicator / 7-Cabin camera / 8-Bracket / 9-Speaker / 10-Front camera / 11-Power port / 12-Rear camera port / 13-Memory card slot / 14-Adhesive sticker

Please read this manual carefully before using the product and keep it in a safe place.

Memory Card Instructions

- A memory card (sold separately) must be installed in the dash cam before use.
- The dash cam supports standard microSD cards. Please use memory cards with capacity of 32GB-512GB and rating of U3(UHS-3) or higher.
- The default file partition format of the memory card may be inconsistent with the format supported by the dash cam. When inserting the memory card for the first time, please format it in the dash cam before use. Formatting the memory card will delete all files on the card. Please back up important data to another device beforehand.
- The memory card may become damaged or deteriorated after repeated cycles of overwriting, and this may affect its ability to save video and image files. If this occurs, immediately replace it with a new memory card.
- Please use a high-quality memory card purchased from a reputable vendor. Inferior memory cards may have issues such as the actual reading/writing speeds do not match the stated speeds, and the actual storage capacity does not match the stated storage capacity. We shall not be held liable for lost or damaged videos caused by the use of a low-quality memory card.
- Do not insert or remove a memory card while the dash cam is turned on.

Battery Safety

- This device contains a coin battery (lithium battery). DO NOT disassemble, smash, or subject

the product to excessive heat, as this could result in explosion.

- The battery is non-removable. DO NOT attempt to replace or repair it. If replacement is required, ONLY have it replaced by a professional with the same model.
- Do not use the product in extreme weathers. Temperatures that are too low or too high may cause the battery to explode or give off flammable gas or liquid.
- Dispose of the cam following all local and national regulations on electronic waste disposal.
- If the battery becomes deformed, swollen, or starts leaking during use or storage, stop using the dash cam immediately in order to avoid safety issues, and contact after-sales service.

Precautions

- Before using this dash cam, please read all the precautions and the online guide to ensure correct and safe use.
- This dash cam is intended to assist drivers with the purpose of recording the environment outside the vehicle. The dash cam does not guarantee the user's driving safety. We shall not be held liable for any accident, damage, or loss of information caused by operating the dash cam while driving.
- Due to differences in vehicle conditions, driving style, driving environment, etc., some functions may not work properly. A power failure, usage in environments outside the normal operating temperature or humidity range, a collision, or a damaged memory card may cause the dash cam to function abnormally. There is no guarantee that this dash cam will function normally under all

Prezentarea produsului — 70mai T400

Montarea

- 1. Montarea autocolantului electrostatic — Lipiti autocolantul pe zona recomandata a parbrizului. Apasati pentru a elimina bulele de aer.
- 2. Instalarea suportului — Aliniati suportul la slotul de pe spate si glisati-l in sus.
- 3. Introducerea cardului de memorie — Introduceti cardul de memorie in slot.
- 4. Montarea camerei de bord — Indepartati folia protectoare de pe suport si lipiti camera pe autocolant.
- 5. Conectarea cablului de alimentare — Conectati camera si incarcatorul cu cablul de alimentare.
- 6. Instalarea cablului — Dirijati cablul spre priza vehiculului si conectati incarcatorul. Porniti motorul — camera porneste automat.
- 7. Reglarea unghiului camerei — Ajustati unghiul pe baza imaginii de pe ecranul principal dupa pornire.

circumstances. Videos recorded by this dash cam are for reference only.

- Please install this dash cam correctly, and do not block the driver's line of sight, nor block the vehicle's airbag, in order to avoid product failure or personal injury.
- Please use the included car charger, power cord, and other accessories in order to avoid product failure due to non-conformance. We shall not be held liable for any loss or damage caused by the use of a non-genuine car charger or power cord.
- Please keep this dash cam away from any strong magnetic fields, as they may cause damage to the dash cam.
- Do not use this dash cam in environments with temperatures over 60°C or below -10°C.
- Please only use this dash cam within the scope permitted by law.
- This device is not a toy. Some of its small components may pose risk of suffocation to children. Keep it out of the reach of children.

Package Contents

If you purchased the Dash Cam Set, check the following items in the package:

- Dash Cam × 1
- Mount (pre-installed on the dash cam) × 1
- Power cord × 1
- Car charger × 1
- Adhesive sticker × 1
- Electrostatic sticker × 2
- Wiring trim tool × 1
- User manual × 1

 
- Rear camera package* × 1

 
* This package contains the rear camera, rear camera wire and other accessories for the rear camera. For more information, please refer to the rear camera user manual.

If you purchased the dash cam only, check the following items in the package:

- Dash Cam × 1
- Mount (pre-installed on the dash cam) × 1
- Power cord × 1
- Car charger × 1
- Adhesive sticker × 1
- Electrostatic sticker × 2
- Wiring trim tool × 1
- User manual × 1

Product Overview

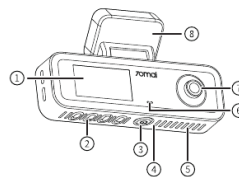

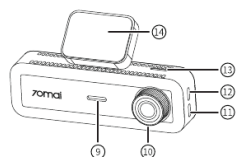

- ① Display screen
- ② Function buttons
- ③ Power button
- ④ Microphone
- ⑤ Ventilation holes
- ⑥ Indicator
- ⑦ Cabin camera
- ⑧ Bracket
- ⑨ Speaker
- ⑩ Front camera
- ⑪ Power port
- ⑫ Rear camera port
- ⑬ Memory card slot
- ⑭ Adhesive sticker

 
Note: Illustrations of the product, accessories, and user interface in the user manual are for reference purposes only. The actual product and functions may vary due to product enhancements.

Installation

1. Installing the electrostatic sticker


Paste the electrostatic sticker on the recommended

area on the front windshield. Press the sticker to remove air bubbles out.
Avoid the edge of the windshield and select the flat and smooth area for the installation.
Note: Keep the windshield clean and dry without liquid residue to prevent the sticker from losing adhesion and dash cam from dropping.



2. Installing the mount

 
Align the mount to the slot on the back and slide it up.

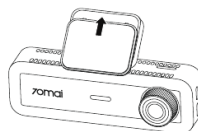

3. Inserting the memory card

Insert the memory card into the card slot.

 
Krok 4–6 / Steps 4–6

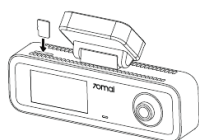

4. Mounting the dash cam


Remove the release liner on the mount and paste the cam to the electrostatic sticker.

 and plug the car charger into the power outlet. Start the car engine, and the dash cam will automatically turn on.



Notes:

 - Use the included wiring trim tool to hide the power cord underneath the vehicle's headliner and rubber seal along the A-pillar.
- Depending on the vehicle, the cigarette lighter socket may be located in a different position. The above figure is for reference only.

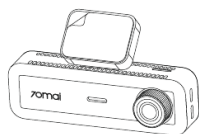


5. Connecting the power cord

Connect the dash cam and car charger with the power cord.


7. Adjusting the camera angle

 Adjust the camera angle based on the image presented on the main screen when dash cam is turned on.



6. Routing cable

 Route the power cord to the vehicle's power outlet

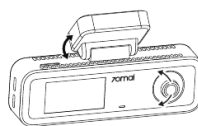

Connecting with the 70mai App

This product can be used in conjunction with the 70mai app. Follow the steps below to connect it with

04

Krok 7 + Aplikace / Step 7 + App

Conectarea la aplicatia 70mai

Descarcati aplicatia 70mai (cod QR sau App Store/Google Play). Atingeti '+' pe pagina dispozitivului, selectati tipul de camera. Porniti camera, activati hotspot-ul Wi-Fi si urmati instructiunile din aplicatie.

Control vocal

Camera suporta control vocal in engleza si mandarina. Comenzi: 'Take photo', 'Record video', 'Record audio', 'Turn off audio', 'Enable hotspot', 'Disable hotspot'.

Specificatii tehnice

Produkt / Product	Palubni kamera / Dash Cam
Model	T400 + RC21
Vstup / Input	5 V = 2,4 A
Rozliseni / Resolution	2560 x 1440 (predni) / 1920 x 1080 (vnitrni, zadni RC21)
Objektiv / Lens	FOV 125° / F1.55
Napajeni / Power	Autozasuvka / Car charger socket
Wi-Fi	IEEE 802.11b/g/n/ax 2,4 GHz (Wi-Fi 6)
Bluetooth	Bluetooth 5.0
GPS	GPS, Galileo, QZSS
Pamet / Storage	microSD 32 GB – 512 GB, min. U3
EAN	6971669785260

SUNNYSOFT

Informatii legale

Producator: 70mai Co., Ltd., Room 2220, Building 2, No. 588 Zixing Road, Minhang District, Shanghai, China

Garantie: 24 luni

Declaratie de conformitate UE: <https://help.70mai.asia/1193.html>

Eliminati dispozitivul in conformitate cu reglementarile locale privind deseurile electronice (WEEE - 2012/19/EU).

CE | WEEE | RoHS

SUNNYSOFT

70mai Dash Cam T400 + RC21

Uzivatel'ska prirucka / User Manual

Български

Vyrobce / Manufacturer: 70mai Co., Ltd.

www.70mai.com | help@70mai.com

SUNNYSOFT

Безопасност на батерията

- Zarizeni obsahuje knoflíkovou baterii (Li). NEROZEBIREJTE, NEROZBIJEJTE ani nevystavujte nadmerneemu teplu — hrozi vybuch. • Baterie není výměnná. Nevyměňujte ji sami — jen odborný servis. • Při deformaci, nabreknutí nebo uniku baterie ihned přestane kameru používat a kontaktujte servis.

Паметна карта

- Преди употреба вставьте паметна карта (продава се отделно).
- Поддържани карти: MicroSD, 32 GB – 512 GB, U3 (UHS-3) или по-високо.
- При първо вставяне форматирайте картата в камерата.
- Не вставяйте и не изваждайте картата при включена камера.
- Използвайте карти с високо качество от надежден продавач.

Инструкции за безопасност

- Преди употреба прочетете внимателно това ръководство и го съхранете на безопасно място.
- Камерата помага на шофьорите да записват околната среда. Не гарантира безопасност при шофиране.
- Не монтирайте така, че да блокира видимостта на шофьора или ербага.
- Не използвайте при температури над 60 °C или под -10 °C.
- Дръжте настрана от силни магнитни полета.
- Устройството не е играчка — малките части могат да са опасни за деца.

SUNNYSOFT

Съдържание на опаковката

- Палубна камера 70mai T400 x 1
- Държач (предмонтиран) x 1
- Захранващ кабел x 1
- Автомобилно зарядно устройство x 1
- Самолепящ стикер x 1
- Електростатичен стикер x 2
- Инструмент за кабел x 1
- Комплект задна камера RC21 x 1
- Ръководство за потребителя x 1

Обзор на продукта

1-Display / 2-Function buttons / 3-Power button / 4-Microphone / 5-Ventilation holes / 6-Indicator / 7-Cabin camera / 8-Bracket / 9-Speaker / 10-Front camera / 11-Power port / 12-Rear camera port / 13-Memory card slot / 14-Adhesive sticker

Please read this manual carefully before using the product and keep it in a safe place.

Memory Card Instructions

- A memory card (sold separately) must be installed in the dash cam before use.
- The dash cam supports standard microSD cards. Please use memory cards with capacity of 32GB-512GB and rating of U3(UHS-3) or higher.
- The default file partition format of the memory card may be inconsistent with the format supported by the dash cam. When inserting the memory card for the first time, please format it in the dash cam before use. Formatting the memory card will delete all files on the card. Please back up important data to another device beforehand.
- The memory card may become damaged or deteriorated after repeated cycles of overwriting, and this may affect its ability to save video and image files. If this occurs, immediately replace it with a new memory card.
- Please use a high-quality memory card purchased from a reputable vendor. Inferior memory cards may have issues such as the actual reading/writing speeds do not match the stated speeds, and the actual storage capacity does not match the stated storage capacity. We shall not be held liable for lost or damaged videos caused by the use of a low-quality memory card.
- Do not insert or remove a memory card while the dash cam is turned on.

Battery Safety

- This device contains a coin battery (lithium battery). DO NOT disassemble, smash, or subject

the product to excessive heat, as this could result in explosion.

- The battery is non-removable. DO NOT attempt to replace or repair it. If replacement is required, ONLY have it replaced by a professional with the same model.
- Do not use the product in extreme weathers. Temperatures that are too low or too high may cause the battery to explode or give off flammable gas or liquid.
- Dispose of the cam following all local and national regulations on electronic waste disposal.
- If the battery becomes deformed, swollen, or starts leaking during use or storage, stop using the dash cam immediately in order to avoid safety issues, and contact after-sales service.

Precautions

- Before using this dash cam, please read all the precautions and the online guide to ensure correct and safe use.
- This dash cam is intended to assist drivers with the purpose of recording the environment outside the vehicle. The dash cam does not guarantee the user's driving safety. We shall not be held liable for any accident, damage, or loss of information caused by operating the dash cam while driving.
- Due to differences in vehicle conditions, driving style, driving environment, etc., some functions may not work properly. A power failure, usage in environments outside the normal operating temperature or humidity range, a collision, or a damaged memory card may cause the dash cam to function abnormally. There is no guarantee that this dash cam will function normally under all

Инсталация

- 1. Монтиране на електростатичния стикер — Поставете стикера на предното стъкло. Натиснете, за да отстраните въздушни мехури.
- 2. Монтиране на държача — Насочете държача към слота отзад и плъзнете нагоре.
- 3. Поставяне на паметна карта — Поставете паметната карта в слота.
- 4. Монтаж на камерата — Отстранете защитното фолио от държача и залепете камерата върху електростатичния стикер.
- 5. Свързване на захранващия кабел — Свържете камерата с автомобилното зарядно устройство с кабела.
- 6. Прокарване на кабела — Докарайте кабела до контакта за захранване и запалете зарядното устройство. Стартирайте двигателя — камерата се включва автоматично.
- 7. Настройване на ъгъла — Настройте ъгъла спрямо образа на главния екран след включване.

circumstances. Videos recorded by this dash cam are for reference only.

- Please install this dash cam correctly, and do not block the driver's line of sight, nor block the vehicle's airbag, in order to avoid product failure or personal injury.
- Please use the included car charger, power cord, and other accessories in order to avoid product failure due to non-conformance. We shall not be held liable for any loss or damage caused by the use of a non-genuine car charger or power cord.
- Please keep this dash cam away from any strong magnetic fields, as they may cause damage to the dash cam.
- Do not use this dash cam in environments with temperatures over 60°C or below -10°C.
- Please only use this dash cam within the scope permitted by law.
- This device is not a toy. Some of its small components may pose risk of suffocation to children. Keep it out of the reach of children.

Package Contents

If you purchased the Dash Cam Set, check the following items in the package:

- Dash Cam × 1
- Mount (pre-installed on the dash cam) × 1
- Power cord × 1
- Car charger × 1
- Adhesive sticker × 1
- Electrostatic sticker × 2
- Wiring trim tool × 1
- User manual × 1

 
- Rear camera package* × 1

 
* This package contains the rear camera, rear camera wire and other accessories for the rear camera. For more information, please refer to the rear camera user manual.

If you purchased the dash cam only, check the following items in the package:

- Dash Cam × 1
- Mount (pre-installed on the dash cam) × 1
- Power cord × 1
- Car charger × 1
- Adhesive sticker × 1
- Electrostatic sticker × 2
- Wiring trim tool × 1
- User manual × 1

Product Overview

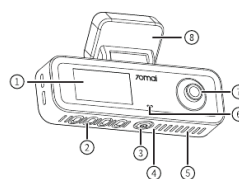

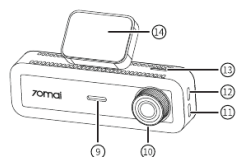

- ① Display screen
- ② Function buttons
- ③ Power button
- ④ Microphone
- ⑤ Ventilation holes
- ⑥ Indicator
- ⑦ Cabin camera
- ⑧ Bracket
- ⑨ Speaker
- ⑩ Front camera
- ⑪ Power port
- ⑫ Rear camera port
- ⑬ Memory card slot
- ⑭ Adhesive sticker

Note: Illustrations of the product, accessories, and user interface in the user manual are for reference purposes only. The actual product and functions may vary due to product enhancements.

Installation

 
1. Installing the electrostatic sticker

Paste the electrostatic sticker on the recommended

area on the front windshield. Press the sticker to remove air bubbles out.


Avoid the edge of the windshield and select the flat and smooth area for the installation.

Note: Keep the windshield clean and dry without liquid residue to prevent the sticker from losing adhesion and dash cam from dropping.



2. Installing the mount

 Align the mount to the slot on the back and slide it up.

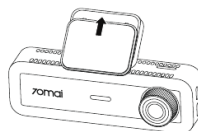


3. Inserting the memory card

Insert the memory card into the card slot.


03

 Krok 4–6 / Steps 4–6

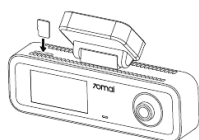


4. Mounting the dash cam

 Remove the release liner on the mount and paste the cam to the electrostatic sticker.

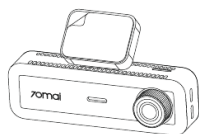

5. Connecting the power cord

 
Connect the dash cam and car charger with the power cord.



6. Routing cable

Route the power cord to the vehicle's power outlet

 and plug the car charger into the power outlet. Start the car engine, and the dash cam will automatically turn on.




Notes:

- Use the included wiring trim tool to hide the power cord underneath the vehicle's headliner and rubber seal along the A-pillar.
- Depending on the vehicle, the cigarette lighter socket may be located in a different position. The above figure is for reference only.

7. Adjusting the camera angle

 Adjust the camera angle based on the image presented on the main screen when dash cam is turned on.

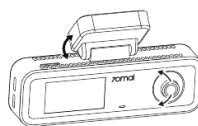

Connecting with the 70mai App

This product can be used in conjunction with the 70mai app. Follow the steps below to connect it with

04

Krok 7 + Aplikace / Step 7 + App

Свързване с приложението 70mai

Изтеглете приложението 70mai (QR код или App Store/Google Play). Докоснете '+' на страницата на устройството, изберете вида камера. Включете камерата, активирайте Wi-Fi хотспота и следвайте инструкциите в приложението.

Гласово управление

Камерата поддържа гласово управление на английски и мандарински. Команди: 'Take photo', 'Record video', 'Record audio', 'Turn off audio', 'Enable hotspot', 'Disable hotspot'.

Технически характеристики

Produkt / Product	Palubni kamera / Dash Cam
Model	T400 + RC21
Vstup / Input	5 V = 2,4 A
Rozliseni / Resolution	2560 x 1440 (predni) / 1920 x 1080 (vnitrni, zadni RC21)
Objektiv / Lens	FOV 125° / F1.55
Napajeni / Power	Autozasuvka / Car charger socket
Wi-Fi	IEEE 802.11b/g/n/ax 2,4 GHz (Wi-Fi 6)
Bluetooth	Bluetooth 5.0
GPS	GPS, Galileo, QZSS
Pamet / Storage	microSD 32 GB – 512 GB, min. U3
EAN	6971669785260

SUNNYSOFT

Правна информация

Производител: 70mai Co., Ltd., Room 2220, Building 2, No. 588 Zixing Road, Minhang District, Shanghai, China

Гаранция: 24 месеца

Декларация за съответствие с ЕС: <https://help.70mai.asia/1193.html>

Утилизирайте устройството съгласно местните правила за електронни отпадъци (WEEE - 2012/19/EU).

CE | WEEE | RoHS

SUNNYSOFT

70mai Dash Cam T400 + RC21

Uzivatelska prirucka / User Manual

Slovenscina

Vyrobce / Manufacturer: 70mai Co., Ltd.

www.70mai.com | help@70mai.com

SUNNYSOFT

Varnost baterije

- Zarizeni vsebuje knoflíkovou baterii (Li). NEROZEBIREJTE, NEROZBIJEJTE ani nevystavujte nadmerneemu teplu — hrozi vybuch.
- Baterie neni vymenna. Nevymenjujte ji sami — jen odborný servis.
- Pri deformaci, nabreknutí nebo uniku baterie ihned prestante kameru pouzivat a kontaktujte servis.

Pomnilniska kartica

- Pred uporabo vstavite pomnilniskou kartico (prodaja se loceno).
- Podprte kartice: MicroSD, 32 GB – 512 GB, U3 (UHS-3) ali visje.
- Ob prvi vstavitvi formatirajte kartico v kameri.
- Ne vstavljajte in ne odstranjajte kartice, ko je kamera vklopljena.
- Uporabljajte kakovostne kartice od zanesljivega prodajalca.

Varnostna navodila

- Pred uporabo pozorno preberite ta navodila in jih hranite na varnem mestu.
- Kamera pomaga voznikom pri snemanju okolja zunaj vozila. Ne zagotavlja varnosti pri vozniji.
- Ne namescajte tako, da bi blokirali voznikov vidni kot ali airbag.
- Ne uporabljajte pri temperaturah nad 60 °C ali pod -10 °C.
- Hranite stran od mocnih magnetnih polj.
- Naprava ni igracka — majhni deli so lahko nevarni za zadusitev za otroke.

SUNNYSOFT

Vsebina paketa

- Kamera za armaturno ploosco 70mai T400 x 1
- Drzalo (predhodno nameščeno) x 1
- Napajalni kabel x 1
- Polnilec za avto x 1
- Samolepilna nalepka x 1
- Elektrostatska nalepka x 2
- Orodje za kable x 1
- Komplet zadnje kamere RC21 x 1
- Navodila za uporabo x 1

Pregled izdelka

1-Display / 2-Function buttons / 3-Power button / 4-Microphone / 5-Ventilation holes / 6-Indicator / 7-Cabin camera / 8-Bracket / 9-Speaker / 10-Front camera / 11-Power port / 12-Rear camera port / 13-Memory card slot / 14-Adhesive sticker

Please read this manual carefully before using the product and keep it in a safe place.

Memory Card Instructions

- A memory card (sold separately) must be installed in the dash cam before use.
- The dash cam supports standard microSD cards. Please use memory cards with capacity of 32GB-512GB and rating of U3(UHS-3) or higher.
- The default file partition format of the memory card may be inconsistent with the format supported by the dash cam. When inserting the memory card for the first time, please format it in the dash cam before use. Formatting the memory card will delete all files on the card. Please back up important data to another device beforehand.
- The memory card may become damaged or deteriorated after repeated cycles of overwriting, and this may affect its ability to save video and image files. If this occurs, immediately replace it with a new memory card.
- Please use a high-quality memory card purchased from a reputable vendor. Inferior memory cards may have issues such as the actual reading/writing speeds do not match the stated speeds, and the actual storage capacity does not match the stated storage capacity. We shall not be held liable for lost or damaged videos caused by the use of a low-quality memory card.
- Do not insert or remove a memory card while the dash cam is turned on.

Battery Safety

- This device contains a coin battery (lithium battery). DO NOT disassemble, smash, or subject

the product to excessive heat, as this could result in explosion.

- The battery is non-removable. DO NOT attempt to replace or repair it. If replacement is required, ONLY have it replaced by a professional with the same model.
- Do not use the product in extreme weathers. Temperatures that are too low or too high may cause the battery to explode or give off flammable gas or liquid.
- Dispose of the cam following all local and national regulations on electronic waste disposal.
- If the battery becomes deformed, swollen, or starts leaking during use or storage, stop using the dash cam immediately in order to avoid safety issues, and contact after-sales service.

Precautions

- Before using this dash cam, please read all the precautions and the online guide to ensure correct and safe use.
- This dash cam is intended to assist drivers with the purpose of recording the environment outside the vehicle. The dash cam does not guarantee the user's driving safety. We shall not be held liable for any accident, damage, or loss of information caused by operating the dash cam while driving.
- Due to differences in vehicle conditions, driving style, driving environment, etc., some functions may not work properly. A power failure, usage in environments outside the normal operating temperature or humidity range, a collision, or a damaged memory card may cause the dash cam to function abnormally. There is no guarantee that this dash cam will function normally under all

01

Pregled izdelka — 70mai T400

Namestitev

- 1. Namestitev elektrostatske nalepke — Nalepite nalepko na priporočeno območje vetrnega sticla. Pritisnite, da odstranite mehurčke zraka.
- 2. Namestitev drzala — Poravnajte drzalo z utorom na zadnji strani in potisnite navzgor.
- 3. Vstavljanje pomnilniške kartice — Vstavite pomnilniško kartico v rezino.
- 4. Namestitev kamere — Odstranite zascitno folijo z drzala in prilepite kamero na elektrostatsko nalepko.
- 5. Priklop napajalnega kabla — Povecite kamero in polnilec za vozilo z napajalnim kablom.
- 6. Napeljava kabla — Napeljite kabel do vticalnice vozila in priklopite polnilec. Zazenite motor – kamera se samodejno vklopi.
- 7. Nastavitev kota kamere — Nastavite kot kamere glede na sliko na glavnem zaslonu po vklopu.

circumstances. Videos recorded by this dash cam are for reference only.

- Please install this dash cam correctly, and do not block the driver's line of sight, nor block the vehicle's airbag, in order to avoid product failure or personal injury.
- Please use the included car charger, power cord, and other accessories in order to avoid product failure due to non-conformance. We shall not be held liable for any loss or damage caused by the use of a non-genuine car charger or power cord.
- Please keep this dash cam away from any strong magnetic fields, as they may cause damage to the dash cam.
- Do not use this dash cam in environments with temperatures over 60°C or below -10°C.
- Please only use this dash cam within the scope permitted by law.
- This device is not a toy. Some of its small components may pose risk of suffocation to children. Keep it out of the reach of children.

Package Contents

If you purchased the Dash Cam Set, check the following items in the package:

- Dash Cam × 1
- Mount (pre-installed on the dash cam) × 1
- Power cord × 1
- Car charger × 1
- Adhesive sticker × 1
- Electrostatic sticker × 2
- Wiring trim tool × 1
- User manual × 1

 
- Rear camera package* × 1

 
* This package contains the rear camera, rear camera wire and other accessories for the rear camera. For more information, please refer to the rear camera user manual.

If you purchased the dash cam only, check the following items in the package:

- Dash Cam × 1
- Mount (pre-installed on the dash cam) × 1
- Power cord × 1
- Car charger × 1
- Adhesive sticker × 1
- Electrostatic sticker × 2
- Wiring trim tool × 1
- User manual × 1

Product Overview

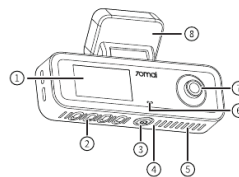

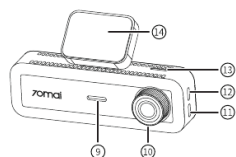

- ① Display screen
- ② Function buttons
- ③ Power button
- ④ Microphone
- ⑤ Ventilation holes
- ⑥ Indicator
- ⑦ Cabin camera
- ⑧ Bracket
- ⑨ Speaker
- ⑩ Front camera
- ⑪ Power port
- ⑫ Rear camera port
- ⑬ Memory card slot
- ⑭ Adhesive sticker

Note: Illustrations of the product, accessories, and user interface in the user manual are for reference purposes only. The actual product and functions may vary due to product enhancements.

Installation

 
1. Installing the electrostatic sticker

Paste the electrostatic sticker on the recommended

area on the front windshield. Press the sticker to remove air bubbles out.


Avoid the edge of the windshield and select the flat and smooth area for the installation.

Note: Keep the windshield clean and dry without liquid residue to prevent the sticker from losing adhesion and dash cam from dropping.



2. Installing the mount

 Align the mount to the slot on the back and slide it up.

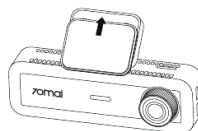


3. Inserting the memory card

Insert the memory card into the card slot.

03

 
Krok 4–6 / Steps 4–6

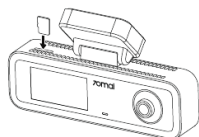

4. Mounting the dash cam


Remove the release liner on the mount and paste the cam to the electrostatic sticker.

 and plug the car charger into the power outlet. Start the car engine, and the dash cam will automatically turn on.



Notes:

 - Use the included wiring trim tool to hide the power cord underneath the vehicle's headliner and rubber seal along the A-pillar.
- Depending on the vehicle, the cigarette lighter socket may be located in a different position. The above figure is for reference only.

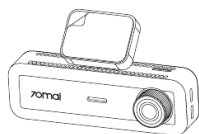


5. Connecting the power cord

Connect the dash cam and car charger with the power cord.


7. Adjusting the camera angle

 Adjust the camera angle based on the image presented on the main screen when dash cam is turned on.



6. Routing cable

 Route the power cord to the vehicle's power outlet

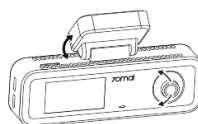

Connecting with the 70mai App

This product can be used in conjunction with the 70mai app. Follow the steps below to connect it with

04

Krok 7 + Aplikace / Step 7 + App

Povezava z aplikacijo 70mai

Prenesite aplikacijo 70mai (QR koda ali App Store/Google Play). Tapnite '+' na strani naprave, izberite vrsto kamere. Vključite kamero, aktivirajte Wi-Fi dostopno točko in sledite navodilom v aplikaciji.

Glasovno upravljanje

Kamera podpira glasovno upravljanje v angleščini in mandarinščini. Ukazi: 'Take photo', 'Record video', 'Record audio', 'Turn off audio', 'Enable hotspot', 'Disable hotspot'.

Tehnicne specifikacije

Produkt / Product	Palubni kamera / Dash Cam
Model	T400 + RC21
Vstup / Input	5 V = 2,4 A
Rozliseni / Resolution	2560 x 1440 (predni) / 1920 x 1080 (vnitrni, zadni RC21)
Objektiv / Lens	FOV 125° / F1.55
Napajeni / Power	Autozasuvka / Car charger socket
Wi-Fi	IEEE 802.11b/g/n/ax 2,4 GHz (Wi-Fi 6)
Bluetooth	Bluetooth 5.0
GPS	GPS, Galileo, QZSS
Pamet / Storage	microSD 32 GB – 512 GB, min. U3
EAN	6971669785260

SUNNYSOFT

Pravne informacije

Proizvajalec: 70mai Co., Ltd., Room 2220, Building 2, No. 588 Zixing Road, Minhang District, Shanghai, China

Garancija: 24 mesecev

Izjava EU o skladnosti: <https://help.70mai.asia/1193.html>

Napravo odlagajte v skladu z lokalnimi predpisi o elektronskih odpadkih (WEEE - 2012/19/EU).

CE | WEEE | RoHS

SUNNYSOFT