 
# # Tronsmart

Element T6 Bluetooth speaker

## **USER MANUAL**



### CONTENTS

English		01~04
Français	;	05~08
Italiano		09~12
Deutsch		13~16
Русский		17~20
한국어		21~24
日本語		25~28
Español		29~32

Thank you for purchasing Tronsmart Element T6 Bluetooth speaker. Tronsmart Element T6 is equipped with Bluetooth 4.1 for optimal connection & pairing with your smartphone or any compatible media player supporting Bluetooth 4.1 or lower.

### BUTTON CONFIGURATION



- 1) Long press 3-4 seconds for power ON/OFF, short press to change the mode between AUX-IN and Bluetooth
- Next song
- 3) Hands-free: During an incoming call, short press to answer the phone, short press again to hang-up and play music. Long press key for 2~3 sec to redial the last dialed number.
- 4) Previous song
- 5) During Bluetooth mode, short press for play/pause, during Bluetooth mode, long press to disconnect Bluetooth, during the aux-in mode, short press for music.
- 6) Micro-USB charging port
- 7) Aux-in port
- 8) Rotate for volume up
- 9) Rotate for volume down

### BLUETOOTH

Turn the speaker on by long pressing the power switch for 2-3 seconds. The Blue LED light flashes quickly. The speaker now has entered the Bluetooth pairing mode.

- 1. Activate your phone's Bluetooth
- 2. Go to your phone's Bluetooth settings, scan for new Bluetooth devices
- 3. Upon discovering the device (Tronsmart Element T6), click the device name and pair with it
- 4. If your phone ask for pairing code, please enter "0000" and confirm
- After successful pairing, your speaker will sound a prompt tone and the LED lights blue.

Note: Pairing time is varied with different mobile phones. It only needs to pair the first time and it will auto connect the devices which have already paired before. (Speaker only can remember the last 8 paired devices)

#### **AUX-IN FUNCTION**

The speaker also features one AUX audio in port, simply connect the speaker with your non-Bluetooth mobile phone/MP3 player/PC/laptop with the 3.5mm audio jack cable. Once the green LED is on, then you can play music via wired connection.

### CHARGING THE SPEAKER

Connect the Micro-USB charging cable to a computer or USB charger, red LED indicates charging status.

Green LED goes on completion of charging, 3-4 hours of charging time based on SV,1A.) Low power indication: Speaker will show a red LED to remind you to charge if battery is low (10%).

### PACKAGE CONTENTS

- Bluetooth Speaker
- 2. Micro USB Cable ( for charging )
- 3. 3.5mm Audio cable ( AUX-in cable )
- 4. User Manual

### SPECIFICATIONS

Model	T6
Bluetooth	4.1
Transmission distance	up to 10m
USB charging voltage	5V ± 0.25V,1-2A
Battery	2*2600mAh
Output power	2*12.5W
Frequency response	60Hz-20KHz

### TROUBLESHOOTING

PROBLEM	SOLUTION
Failure to connect or pair the speaker to an audio device	Confirm the device you want to pair with the speaker that has Bluetooth capability. Check if it has lower battery, speaker may need to be charged Inspect whether the speaker is in the status of searching for Bluetooth devices. There may be too many Bluetooth enabled devices in the area, please turn OFF the Bluetooth function on devices you do not want to pair with the speaker.
The sound is too low or distorted	Inspect the volume of the Bluetooth device and adjust the volume. The battery is too low, please charge the speaker.
Discontinuous music	Move the paired Bluetooth device closer to the speaker. Make sure there are no obstacles between the Bluetooth device and the speaker.
The indicator light for Bluetooth mode is not on	The battery is too low. Please charge the speaker and try again. Restart the speaker by turning it OFF and then turn it back ON

#### CARE & MAINTENANCE

### Please keep this manual handy for future reference.

To clean the Tronsmart Element T6 Bluetooth speaker uses a lightly dampened cloth in water to clean the exterior in-case it gets dirty. Do not use any form of detergents or cleaning material to clean this peaker, any type of chemical may make this device unusable. Do not disassemble this product. It contains no user serviceable parts. Do not drop or jump on it, treat it with care for the best performance. Keep the speaker in a dry location. Dust, dirt & moisture from humidity can accumulate on the body of the speaker if kept at an unfriendly place. Do not dispose this product in fire, batteries may explode or leak

#### WARRANTY INFORMATION

Your 'Tronsmart Element T6 Bluetooth speaker' is warranted to the original owner for lyear from the date of purchase against defects in material and workmanship under normal use and service. Should your speaker proves defective within 1 year from the date of purchase, return the defective part or unit, freight prepaid along with an explanation of the claim. Please pack your speaker carefully to avoid damages in transit. Under this warranty, Tronsmart will repair or replace any parts found to be defective due manufacturer's defect. This warranty extends only to personal use and does not extend to any product that has been used for commercial use, rental use, or use which is ont intended. There are no warranties other than that expressly set forth herein. This warranty is not transferable. Tronsmart is not responsible in any way for damages, losses or inconveniences caused by equipment failure or user negligence, abuse, or use not in accordance with the "User Manual" or any additional safety, use, or warraings included in the product materials. Further, Tronsmart is not liable for incidental or consequential damages of any nature resulting from the use of this product and any liability shall not exceed the ourchase price of the product.

This Warranty gives you specific legal rights. You may also have other rights which vary from state to state.

### THIS WARRANTY DOES NOT APPLY TO THE FOLLOWING

- Damage due to accident, misuse, abuse, alterations or vandalism.
- Improper or inadequate maintenance.
- Unauthorized modifications or commercial use.
- Damage in return transit.
- Unsupervised use by children under 18 years of age.

(Tronsmart™ and its subsidiaries assume no liability for damage caused by the use of the Element T6 Bluedooth Speaker other than for its intended use or as instructed above in the User Manual.)