

V20190617 EN FR

ThermoPro

Digital Kitchen Timer Instruction Manual



Model No.: TM-01

English..... 2 Français..... 12

Introduction

Congratulations on your purchase of the ThermoPro Digital Kitchen Timer. You will now be able to keep track of time with this digital timer!


Features

1. Large LCD screen displays TIMER or CLOCK by switching the selector.
2. Backlight display: Touchable backlight button or press any button.
3. 4 adjustable volume settings: off, low, medium, and high.
4. 12/24-hour time format for different needs.
5. Function: Countdown timer or count up timer.
6. Countdown time range: 99hour59min59sec.
7. Count up time range: 99hour59min59sec, infinite cycled.

8. Tabletop and magnet-mountable design.

9. 2 AAA batteries included

Key Definition

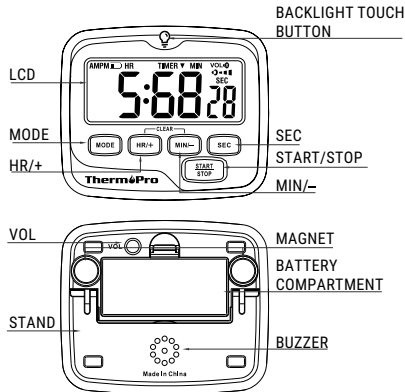

Buttons

MODE: Switch between TIMER/CLOCK function.

EN

HR/+: Press to set the hour in the TIMER mode and increase the digits of hour in CLOCK mode. Press and hold to quickly scroll through digits; Select between 12/24 hour clock.

MIN/-: Press to set the minute in the TIMER mode and increase the digits of minute in CLOCK mode. Press and hold to quickly scroll through digits; Select between 12/24 hour clock.

SEC: Press to increase the digits of second in CLOCK mode. Press and hold to quickly scroll through digits.

START/STOP: Press to start or to pause in the TIMER mode; Select between hour/minute/second in CLOCK mode.

VOL: Press to cycle through the volume settings - off, low, medium, and high.

“💡”: Press to activate a backlight, if no further button presses for 10s, the backlight will automatically turn off.

EN

Start a Countdown Timer

1. Power on the timer and it should be in the default TIMER mode. If not in TIMER mode, press the MODE button to switch between modes.
2. Press "HR/+" to set the hour, press "MIN/-" to set the minutes, press "SEC" to set the seconds. Press and hold the buttons to increase digits rapidly.
3. Press "START/STOP" to start the timer or pause the timer.
4. To clear the timer to zero, press "START/STOP" to pause the timer, then press "HR/+" and "MIN/-" at the same time.
5. When the countdown timer reaches 0:00:00, the

timer will beep and flash for 1 minute and start to count up. Press "START/STOP" to stop the alarm.

Start a Count Up Timer

1. Press "HR/+" and "MIN/-" together to clear all digits.
2. Press "START/STOP" to start to count up function, and press "START/STOP" to pause it.

Set CLOCK

1. Power on the timer, and press "MODE" to select CLOCK.
2. Press and hold the "START/STOP" button to choose between 12-hour or 24-hour time. Press "HR/+" or "MIN/-" to switch between 12Hr and 24Hr then press the "START/STOP" button again to confirm your selection.
3. Press "HR/+" to increase the hour or minutes and

press "MIN/-" to decrease the hours or minutes. Press and hold the buttons to quickly scroll through the digits.

4. Press "START/STOP" to confirm the correct hour then repeat for minute as well.

NOTE: If no operation for 20 seconds, all the current flashing digits will be saved as default.

Adjust alarm volume

The timer has 4 alarm volume settings, press "VOL" to select between off, low, medium and high

 =off
  =low
  =medium
  =high

Backlight feature

Pressing any buttons or press touchable backlight button will activate a backlight, if no further button presses for 10s, the backlight will automatically turn off.

Declaration of conformity

EN Hereby, the manufacturer declares that this product complies with the basic requirements and applicable regulations of the EMC Directive 2014/30/EU. The complete declaration of conformity can be found at: <https://itronicsamall.com/eu-declaration-of-conformity/>

Disposal



Meaning of the “Dustbin” Symbol

- Protect our environment: do not dispose of electrical equipment in the domestic waste.
- Please return any electrical equipment that you will no longer use to the collection points provided for their disposal.
- This helps avoid the potential effects

of incorrect disposal on the environment and human health.

- This will contribute to the recycling and other forms of reutilisation of electrical and electronic equipment.
- Information concerning where the equipment can be disposed of can be obtained from your local authority.



CAUTION: Batteries/rechargeable batteries must not be disposed of with household waste!

- The batteries must be removed from the appliance.
- Take spent batteries to the appropriate collection point or to a dealer.
- Your town or local authority can provide information about public collection points.

This symbol can be found on batteries/rechargeable

batteries which contain hazardous:



- Pb = contains lead
- Cd = contains cadmium
- Hg = contains mercury
- Li = contains lithium

Limited One-year Warranty

ThermoPro warrants this product to be free of defects in parts, materials and workmanship for a period of one years, from date of purchase.

Should any repairs or servicing under this warranty be required, contact Customer Service by phone or email for instructions on how to pack and ship the product to ThermoPro.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Customer service

Telephone: 1-877-515-7797 (USA & Canada only)
44-203-769-1321(UK)

Email: service@buythermopro.com

Hours: Weekdays 8:00 AM- 8:00 PM EST(USA & Canada only)

Weekdays 1:00 PM-12:00 PM CET(UK)