


Quick Start Guide

- A** 1/4-inch nut
- B** Projector mount
- C** Knob
- D** Support rod
- E** Base

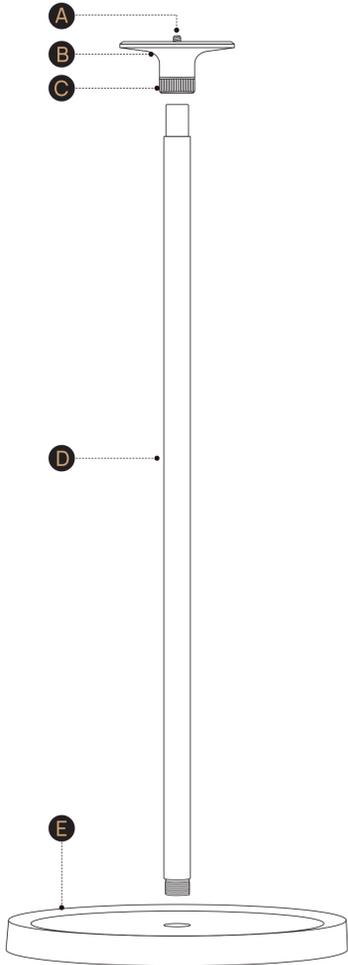

1 Position the base in the appropriate location, align the threaded end of the support rod with the center of the base and tighten the rod clockwise.

A diagram showing a circular base with a central hole. A support rod is being inserted into the hole. A dashed line indicates the center of the base. A curved arrow around the rod indicates it should be tightened clockwise.

2 Align the threaded hole on the bottom of the projector with the 1/4-inch nut on the projector mount and tighten the projector mount counterclockwise to secure it to the projector.

A diagram showing the bottom of a projector with a threaded hole. A projector mount is being aligned with the hole. A dashed line indicates the alignment. A curved arrow around the mount indicates it should be tightened counterclockwise.

3 Fit the projector mount, with the projector secured, on top of the support rod, and tighten the knob clockwise to complete the assembly.

A diagram showing the projector mount on top of the support rod. A knob is being tightened clockwise. A curved arrow around the knob indicates the direction of tightening. Below the diagram, the text reads: "Turn the knob counterclockwise to loosen" and "Turn the knob clockwise to tighten".