



Stolní digitální osciloskop

FNIRSI-1014D

Návod k použití

Představení produktu

FNIRSI-1014D je osciloskop a generátor signálu dva v jednom, který společnost FNIRSI uvedla na trh, s rozsáhlými funkcemi a vysokou praktičností. Jedná se o cenově výhodný dvoukanalový stolní osciloskop pro průmysl údržby a výzkum a vývoj. Osciloskop má vzorkovací frekvenci v reálném čase 1GSa/s, analogovou šířku pásma 100MHz* 2; kompletní spouštěcí funkce (jednorázová / normální / automatická), lze libovolně používat jak pro periodický analogový signál, tak pro aperiodický digitální signál; vestavěný generátor signálu s funkcí DDS a originální sekací výstup (@ 2.5VPP), krok všech signálů je 1Hz, podpora 14 druhů standardního funkčního signálu a přizpůsobitelného sekacího signálu, sekání Výstupní zařízení zachytí část nebo celou část komplexních signálů měřených osciloskopem jako výstupní signál generátoru signálu, který může uložit až 1000 přizpůsobených sekacích signálů; vestavěný modul vysokonapěťové ochrany snese až 400V trvalého napětí, aniž byste se museli obávat nehody s hořením osciloskopu způsobené tím, že se sonda nepohne na 10x převodovku. Režim posouvání velké časové základny, který může sledovat pomalou změnu úrovně; vybaven účinným automatickým, samoadaptivním spouštěčem s jedním tlačítkem 25 %, 50 %, 75 %, který může zobrazit měřený průběh bez složitého nastavování; displej je vybaven 7palcovým LCD displejem s vysokým rozlišením 800 * 480; funkce měření kurzorem, která může ručně číst parametry amplitudy a frekvence bez čtení jednotky a množství stupnice na pozadí a bez převodu Pro přímé získání špičky a frekvence; mimořádně pohodlná funkce snímání obrazovky a ukládání průběhů, vestavěný úložný prostor 1 GB, lze uložit až 1000 snímků obrazovky + 1000 skupin dat průběhů, proces ukládání je jednoduchý a rychlý, uložení aktuálního průběhu, pouhým kliknutím uložíte aktuální data, velmi pohodlné; výkonný správce obrazů průběhů, podpora prohlížení miniatur, zobrazení, zobrazení detailů Funkce otáčení stránek, mazání a zvětšování, zmenšování a přesouvání průběhů jsou vhodné pro sekundární analýzu. Trup je vybaven rozhraním USB, které lze připojit k počítači a realizovat tak sdílení vlastních snímků obrazovky a počítače, což je vhodné pro sekundární analýzu; funkci grafického zobrazení Lissajous lze použít k porovnání a posouzení amplitudy, frekvence a fáze dvou skupin signálů; funkce zobrazení FFT může zhruba odhadnout harmonickou složku signálu; funkci grafického zobrazení Li Shayu lze použít k porovnání a posouzení amplitudy, frekvence a fáze dvou skupin signálů;

Varování

1: Při současném použití dvou kanálů musí být zemnicí svorky obou sond spojeny dohromady. Je přísně zakázáno připojovat zemnicí svorky

svorky obou sond na různé potenciály, zejména na různé potenciály svorek výkonných zařízení nebo 220 V. jinak dojde ke spálení základní desky osciloskopu. Protože oba kanály jsou uzemněny společně, připojení na různé potenciály povede ke zkratu vnitřních zemnicích vodičů základní desky, a to u všech osciloskopů stejně;

2: Vstup BNC osciloskopu vydrží maximálně 400 V napětí. Je přísně zakázáno přivádět napětí vyšší než 400V v poloze 1x sonda.


3: Je nutné použít originální napájecí zdroj. Je přísně zakázáno používat napájecí zdroj nebo USB jiných testovaných zařízení. V opačném případě může dojít během testu ke zkratu zemnicího vodiče základní desky.

4: K měření vysokofrekvenčních a vysokofrekvenčních signálů je třeba použít 100x sondu (např. ultrazvukový svařovací stroj, ultrazvukový čistící stroj atd.) nebo dokonce 1000x sondu (např. vysokonapěťový konec vysokofrekvenčního transformátoru, cívka indukčního vařiče atd.).
vysokonapěťový signál

Připomínka

šířka pásma 1x sondy je 5MHz a šířka pásma 10x sondy je 100MHz. Pokud je měřicí frekvence vyšší než 5MHz, je třeba přepínač na rukojeti sondy přepnout do polohy 10x a osciloskop je také třeba nastavit na 10x. Jinak bude signál značně zeslaben, což je případ všech osciloskopů. Protože samotné vedení sondy osciloskopu má kapacitu až 100 - 300pf, což je pro vysokofrekvenční signál velká kapacita! Signál byl značně utlumen, když se přes sondu dostal na vstupní konec osciloskopu, a ekvivalentní šířka pásma je 5 MHz. Proto, aby bylo možné přizpůsobit stovky PF vedení sondy, bude vstupní konec vedení sondy desetkrát zeslaben (přepínač je v převodu 10x), takže kondenzátor stovek PF se používá pouze pro přizpůsobení impedance. V tomto okamžiku je šířka pásma 100 MHz. Všimněte si, že lze použít pouze sondy se šířkou pásma 100MHz nebo vyšší.


diagram indikátoru funkce rozhraní

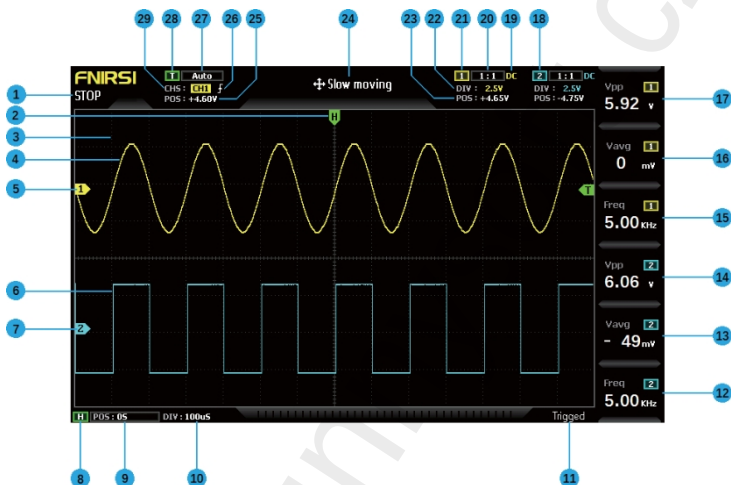

- 1: Indikátor pozastavení chodu
- 2: Šipka označující polohu x spouštěče signalizuje, že se jedná o bod x spouštěče
- 3: Značky zaškrtnutí v pozadí mřížky
- 4: Údaje o průběhu kanálu 1
- 5: Základní poloha kanálu 1 označuje šipku, tj. polohu potenciálu 0 V.
- 6: Údaje o průběhu kanálu 2
- 7: Základní poloha kanálu 2 označuje šipku, tj. polohu potenciálu 0 V.
- 8: Příznak vodorovné časové základny
- 9: Spuštění polohy šipky X vzhledem k souřadnicovému systému systému
- 10: Horizontální časová základna označuje délku času reprezentovanou velkou mřížkou v horizontálním směru, která je určena vzorkovací frekvencí. Čím větší je časová základna, tím pomalejší je vzorkovací frekvence a naopak.
- 11: Příznak stavu spouštěče
- 12: Sloupec 6 parametrů měření, stiskněte F6 pro volný výběr parametrů měření
- 13: Sloupec 5 parametrů měření, stiskněte F5 pro volný výběr parametrů měření
- 14: Sloupec 4 parametrů měření, stiskněte F4 pro výběr parametrů měření volně

- 15: Sroupec 3 parametrů měření, stiskněte F3 pro výběr parametrů měření volně
- 16: Parametry měření ve sloupci 2, stiskněte F2 pro výběr parametrů měření volně
- 17: Parametry měření ve sloupci 1, stiskněte F1 pro výběr parametrů měření volně
- 18: Značka ovládacího panelu kanálu 2
- 19: Režim vstupní vazby kanálu 1 má dvě možnosti: DC a AC. DC znamená stejnosměrnou vazbu a AC znamená střídavou vazbu.
- 20: Zvětšení sondy kanálu 1
- 21: Značka ovládacího panelu kanálu 1
- 22: vertikální citlivost kanálu 1 se vztahuje na napětí reprezentované velkou mřížkou ve vertikálním směru.
- 23: Poloha základní šipky kanálu 1 vzhledem k souřadnicovému systému systému
- 24: rychlost pohybu při práci s průběhem, rychlý pohyb se používá pro hrubé nastavení a pomalý pohyb se používá pro jemné nastavení.
- 25: poloha šipky spouštěcího napětí vzhledem k souřadnicovému systému systému
- 26: indikátor spouštěcí hrany, šipka nahoru pro spouštění vzestupné hrany, šipka dolů pro spouštění sestupné hrany
- 27: indikátor režimu spouštění, rozdělený na automatické, jednoduché a normální; automatické je automatické spouštění, jednoduché je jednoduché spouštění a normální je normální spouštění.
- 28: příznak ovládací lišty spouště
- 29: spouštěcí kanál, rozdělený na možnosti ch1 a CH2

Funkce tlačítek

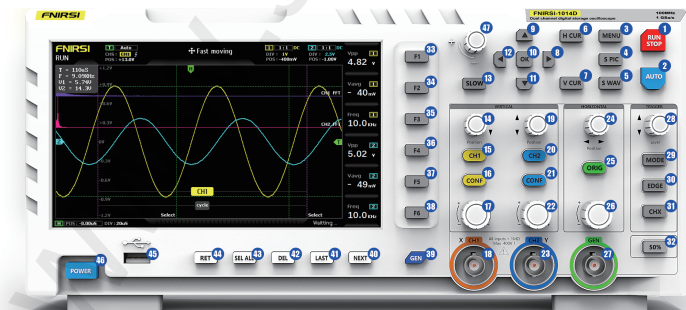

1: Tlačítko Spustit / pozastavit. Kliknutím na toto tlačítko můžete odběr vzorků kdykoli pozastavit.

2: Tlačítko automatického nastavení jedním tlačítkem, po kliknutí na toto tlačítko systém automaticky identifikuje signál a nastaví systém na nejlepší parametry pro zobrazení tohoto průběhu.

3: Tlačítko nabídky funkcí, kliknutím na něj se zobrazí nabídka funkcí

4: Tlačítko pro snímání obrazovky jedním kliknutím. Kliknutím na toto tlačítko pořídíte snímek celé obrazovky a automaticky jej uložíte do interního úložiště.

5: Tlačítko pro uložení tvaru vlny, kliknutím na toto tlačítko se uloží všechna data tvaru vlny dvou kanálů do interního úložiště.

6: Tlačítko přepínače časového kurzoru, kliknutím na toto tlačítko zapnete a vypnete měření kurzoru.

ment funkce

7: Stisknutím tlačítka přepínače kurzoru napětí zapnete a vypnete funkci měření kurzoru.

8: Systémové navigační tlačítko

[vpravo] 9: Systémové navigační tlačítko

10: Navigační tlačítko systému

[OK] 11: Navigační tlačítko systému

12: Systémové navigační tlačítko [vlevo]

13: Tlačítko rychlosti pohybu. Kliknutím na toto tlačítko přepínáte mezi rychlým a pomalým pohybem 14: Knoflík pro nastavení vertikální polohy kanálu 1, otáčením ve směru hodinových ručiček se pohybujete nahoru, otáčením proti směru hodinových ručiček se pohybujete dolů

15: Tlačítko přepínání kanálů. Kliknutím na toto tlačítko zapnete nebo vypnete zobrazení průběhů.

kanálu 1

16: Tlačítko ovládacího panelu kanálu 1. Kliknutím na toto tlačítko se zobrazí ovládací parametry týkající se kanálu 1, které lze vybrat podle navigačního tlačítka nebo knoflíku vedle něj.

17: Knoflík vertikálního nastavení citlivosti kanálu 1, vertikální zesílení po směru hodinových ručiček, vertikální snížení proti směru hodinových ručiček.

18: Vstupní port signálu kanálu 1, rozsah měření je 0 - 40 V od špičky ke špičce, dbejte na maximální toleranci 400 V od špičky ke špičce výdržného napětí.

19: Knoflík pro nastavení vertikální polohy kanálu 2, otáčením ve směru hodinových ručiček se posunete nahoru, otáčením proti směru hodinových ručiček dolů.

20: Tlačítko přepínače kanálu 2. Kliknutím na toto tlačítko zapnete nebo vypnete zobrazení průběhů.

kanálu 2

21: Tlačítko ovládacího panelu kanálu 2. Kliknutím na toto tlačítko se zobrazí ovládací parametry týkající se kanálu 2, které lze vybrat podle navigačního tlačítka nebo knoflíku vedle něj.

22: Knoflík vertikálního nastavení citlivosti kanálu 2, vertikální zesílení po směru hodinových ručiček, vertikální snížení proti směru hodinových ručiček.

23: Vstupní port signálu kanálu 2, rozsah měření je 0 - 40 V od špičky ke špičce, platí maximální tolerance 400 V od špičky ke špičce výdržného napětí.

24: systém spustí pohyb knoflíku pro nastavení polohy x ve směru hodinových ručiček doprava a proti směru hodinových ručiček doleva.

25: jedno tlačítko pro návrat do středu, po kliknutí na toto tlačítko se kanál 1, kanál 2 vertikální pozice, spouštěč x horizontální pozice, spouštěč y vertikální pozice vrátí do středu.

26: knoflík pro nastavení časové základny se otáčí ve směru hodinových ručiček, čímž se časová základna zmenšuje, tj. horizontálně zvětšuje průběh, a proti směru hodinových ručiček, čímž se časová základna zvětšuje, tj. horizontálně zmenšuje průběh.

27: Výstup generátoru signálu DDS

28: knoflík pro nastavení polohy y spouštěcího napětí, otáčením ve směru hodinových ručiček se posunete nahoru, otáčením proti směru hodinových ručiček se posunete dolů.

29: Tlačítko přepínače režimu spouštění, rozdělené na automatický,

jednoduchý a normální 30: Tlačítko přepínače hrany spouštění,

rozdělené na vzestupnou a sestupnou hranu 31: Tlačítko přepínače kanálu spouštění, rozdělené na kanál 1 a kanál 2

32: tlačítko 50% spouštění, po kliknutí na toto tlačítko systém automaticky nastaví aktuální spouštěcí napětí na 25 %, 50 %, 75 % podle charakteristik signálu pro spouštění 33: tlačítko pro výběr parametrů měření prvního sloupce, po vyskočení blokového schématu měření můžete vybrat podle navigačního tlačítka nebo knoflíku vedle něj.

34: tlačítko pro výběr parametrů měření ve druhém sloupci, po vyskočení blokového schématu měření můžete vybrat podle navigačního tlačítka nebo knoflíku vedle něj.

35: tlačítko pro výběr parametrů měření ve sloupci 3, po vyskočení blokového schématu měření můžete vybrat podle navigačního tlačítka nebo knoflíku vedle něj.

- 36: tlačítko pro výběr parametrů měření ve sloupci 4, po vyskočení blokového schématu měření lze vybrat podle navigačního tlačítka nebo knoflíku vedle něj: tlačítko pro výběr parametrů měření ve sloupci 5 vyskočí blokové schéma měření, které lze vybrat podle navigačního tlačítka nebo knoflíku vedle něj
- 38: tlačítko pro výběr parametrů měření ve sloupci 6, po vyskočení blokového schématu měření můžete vybrat podle navigačního tlačítka nebo knoflíku vedle něj.
- 39: tlačítko ovládacího panelu generátoru signálu, kliknutím na toto tlačítko se zobrazí ovládací panel parametrů generátoru signálu, můžete vybírat podle navigační klávesy nebo knoflíku vedle ní.
- 40: další stránka ovládacího tlačítka na další stránce obrázku / tvaru vlny / sekání Správce
- 41: obrázek / průběh / správce sekaných vln ovládací tlačítko další stránky [předchozí strana]
- 42: [delete] ovládacího tlačítka na další stránce obrázku / křivky / sekání Správce
- 43: vyberte všechna ovládací tlačítka na další straně obrazu / průběhu / sekání Manažer
- 44: [návrat] ovládacího tlačítka na další stránce obrázku / tvaru vlny / sekání Správce
- 45: Port USB pro sdílení snímků obrazovky
- 46: vypínač, kliknutím spustíte nebo vypnete provoz

návod k obsluze (část osciloskopu)

Otevření nebo zavření kanálu 1 / kanálu 2: kliknutím na tlačítko [ch1] / [CH2] otevřete nebo zavřete kanál 1 / CH2 Zapnutí nebo vypnutí FFT: klikněte na tlačítko [conf] pod kanálem 1 nebo CH2, zobrazí se panel ovládání parametrů kanálu 1 / kanálu 2 a poté zapnete / vypnete FFT pomocí navigačního tlačítka.

Nastavení režimu vstupní **vazby**: kliknutím na tlačítko [conf] v poloze ch1 nebo CH2 se zobrazí panel ovládání parametrů kanálu 1 / kanálu 2 a poté se pomocí navigačního tlačítka přepne stejnosměrný / střídavý proud.

Nastavení vstupního poměru sondy: klikněte na tlačítko [conf] v poloze CH1 nebo CH2, zobrazí se panel ovládání parametrů kanálu 1 / kanálu 2 a poté pomocí navigačního tlačítka přepnete na 1x / 10x / 100x.

Škálování průběhu: otáčením velkého knoflíku v levém dolním rohu svislého rámečku škálujete průběh kanálu 1 svisle a otáčením velkého knoflíku v pravém dolním rohu škálujete průběh kanálu 2 svisle; otáčením velkého knoflíku v dolní části vodorovného rámečku škálujete průběh kanálu 1 a kanálu 2 vodorovně, ve směru hodinových ručiček zvětšujete, proti směru hodinových ručiček zmenšujete.

Posouvání tvaru vlny: otáčením malého knoflíku v levém horním rohu vertikálního rámečku posouváte tvar vlny kanálu 1 vertikálně a otáčením malého knoflíku v pravém horním rohu posouváte tvar vlny kanálu 2 vertikálně, který se pohybuje po směru hodinových ručiček nahoru a proti směru hodinových ručiček dolů; otáčením malého knoflíku v horním horizontálním rámečku posouváte tvar vlny kanálu 1 a kanálu 2 horizontálně, který se pohybuje po směru hodinových ručiček doprava a proti směru hodinových ručiček doleva. V průběhu můžete kliknutím na tlačítko [pomalu] vybrat hrubé nebo jemné nastavení.

Nastavení napětí spouště: otáčením malého knoflíku pod rámečkem spouště nastavte spouštěcí napětí. V tomto procesu můžete kliknutím na tlačítko [pomalu] zvolit hrubé nebo jemné nastavení. Dávejte pozor, abyste v nabídce nejprve vypnuli [automatické 50%] spouštění, jinak nebude možné nastavit spouštěcí napětí.

Nastavení spouštěcí hrany: kliknutím na hranu pro přepnutí vzestupné / sestupné hrany

Nastavení automatického spouštění: kliknutím na režim přepínáte mezi automatickým / jednoduchým / normálním, kde automatické je automatické spouštění

Nastavení jednorázového spuštění: kliknutím na režim přepínáte mezi automatickým / jednorázovým / normálním, kde jednorázové je jednorázové spuštění.

Nastavení normálního spouštění: kliknutím na režim přepínáte mezi automatickým / jednoduchým / normálním, kde normální je normální spouštění.

Pozastavení zobrazení: kliknutím na červené tlačítko [run / stop] v pravém horním rohu pozastavíte nebo spustíte zobrazení.

Automatické nastavení tvaru vlny: kliknutím na modré tlačítko [auto] v pravém horním rohu provedete automatické nastavení.

Nastavení režimu pomalého skenování: otáčejte velkým knoflíkem pod horizontálním rámečkem proti směru hodinových ručiček. Když základna dosáhne 100 ms, systém přejde do režimu pomalého skenování. 100ms - 50s patří časové základně režimu rolování.

Měření časového kurzoru: kliknutím na tlačítko [H cur] zapnete časový kurzor a poté vyberte levé a pravé světelné značky pomocí levého a pravého tlačítka navigačního tlačítka a nakonec je nastavte malým knoflíkem v levém horním rohu navigačního tlačítka, ve kterém se světelné značky otáčením ve směru hodinových ručiček posouvají doprava a otáčením proti směru hodinových ručiček doleva.

Měření napětového kurzoru: kliknutím na tlačítko [v cur] zapnete napětový kurzor a poté vyberte světelné označovací čáry nahoru a dolů pomocí tlačítek nahoru a dolů navigačního tlačítka a nakonec je nastavte malým knoflíkem v levém horním rohu navigačního tlačítka, ve kterém se světelné označovací čáry pohybují nahoru otáčením ve směru hodinových ručiček a dolů otáčením proti směru hodinových ručiček.

Nastavení **zobrazovaných** parametrů: kliknutím na F1 - F6 se zobrazí ovládací panel měření parametrů a pomocí navigační klávesy nebo blízkého knoflíku vyberte aktuálně požadované parametry.

Zachycení celé obrazovky: kliknutím na tlačítko [s pic] **zachytíte** aktuální zobrazení. Zachycený obraz se uloží na místní disk ve formátu BMP.

Uložit **aktuální data průběhu**: kliknutím na tlačítko [s wav] uložíte všechna data **průběhu** otevřeného kanálu na místní disk.

Nastavení jasu obrazovky: klikněte na tlačítko [menu], přejděte na položku [jas obrazovky], stiskněte tlačítko OK a nakonec nastavte jas obrazovky pomocí malého knoflíku v levém horním rohu. 1 00 je nejjasnější a 0 je nejtmavší.

Nastavení jasu mřížky pozadí: klikněte na tlačítko [menu], přejděte na položku [jas mřížky], stiskněte tlačítko OK a **nakonec nastavte** jas mřížky pomocí malého knoflíku v levém horním rohu. 100 je **nejjasnější** a 0 znamená vypnutí zobrazení mřížky.

Nastavení automatické 5096 spouště po celou dobu: klikněte na klávesu [menu], přejděte na položku [automatic 50%], stiskněte klávesu OK a poté pomocí navigační klávesy vyberte možnost [on]. Po nastavení se v režimu automatického spouštění u každého měřicího systému automaticky nastaví spouštěcí napětí na 25 % / 50 % / 75 % hodnoty od špičky ke špičce podle charakteristik průběhu.

Kalibrace posunu vodorovné základní linie: po vytažení sondy, kdy levá šipka žlutého / azurového indikátoru a žlutá / azurová vodorovná základní linie kteréhokoli kanálu nejsou ve stejné poloze, je nutná kalibrace; nejprve vytáhněte sondu, poté klikněte na tlačítko [menu], přejděte na položku [kalibrace základní linie] a poté stiskněte tlačítko OK pro kalibraci základní linie.

Zobrazení uloženého snímku obrazovky: klikněte na tlačítko [menu], přejděte na položku [picture browse] a poté stisknutím tlačítka OK vstupte do rozhraní náhledu miniaturního obrázku, což je miniatura zachyceného průběhu. Pomocí navigační klávesy vyberte miniaturu a poté kliknutím na tlačítko [OK] zobrazte snímání průběhu na celé obrazovce, přičemž v dolní části lze ovládat tlačítka (RET) návrat, (SEL) vše, (DEL), (poslední), (další) další ovládací tlačítko.

Zobrazení uložených dat průběhu: klikněte na klávesu [menu], přejděte na položku [waveform browse] a poté stiskněte klávesu OK pro vstup do náhledu miniatur průběhu Interface, kde je miniatura průběhu. Pomocí navigační klávesy vyberte miniaturu a poté kliknutím na tlačítko [OK] zobrazte průběh na celé obrazovce, přičemž v dolní části je možné ovládat (RET) návrat, (SEL) vše, (DEL), (poslední), (další) další ovládací tlačítko.

Odstranění uloženého tvaru vlny: klikněte na tlačítko [menu], přejděte na položku [waveform browse],

a poté stisknete tlačítko OK pro vstup do rozhraní náhledu miniatur průběhu, kde je miniatura průběhu. Vyberte miniaturu pomocí navigační klávesy a poté kliknutím na klávesu [del] v dolní části vymažte průběh nebo kliknutím na klávesu vymažte průběh v celoobrazovkovém zobrazení.

Připojení počítače pro zobrazení snímků obrazovky: klikněte na tlačítko [menu], navigačním tlačítkem přejděte na položku [sdílení USB] a poté stisknutím tlačítka OK otevřete sdílení USB. Poté připojte počítač pomocí připojeného kabelu USB a počítač zobrazí vyměnitelný disk nebo U-disk. V počítači najdete snímky obrazovky uložené na disku. Všimněte si, že je nemůžete opravit přímo na disku. Změňte název souboru obrázku, jinak správce obrázků osciloskopu nebude schopen obrázek zobrazit.

návod k obsluze (část generátoru signálu)

Přepnutí typu průběhu: klikněte na tlačítko [Gen], v pravém dolním rohu obrazovky se objeví rozhraní pro ovládání generátoru signálu a poté kliknutím na tlačítko [OK] přepněte zelené výběrové pole do polohy [typ průběhu] a poté kliknutím na tlačítko [nahoru] nebo [dolů] v navigačním tlačítku nebo na tlačítko v levém horním rohu navigačního tlačítka přepněte typ průběhu.

Nastavení frekvence průběhu: klikněte na tlačítko [Gen], v pravém dolním rohu obrazovky se zobrazí rozhraní pro ovládání generátoru signálu a poté kliknutím na tlačítko [OK] přepněte zelené výběrové pole do polohy [frekvence] a poté kliknutím na tlačítko [vlevo] nebo [vpravo] v navigačním tlačítku nastavte pozici kurzoru, tj. nastavte dělení, které se má nastavit. Po potvrzení stisknete tlačítko [nahoru] nebo [dolů] nebo [nahoru] v levém horním rohu navigačního tlačítka. Knoflíkem můžete zvýšit nebo snížit hodnotu aktuálního bitu, čímž změníte kmitočet.

Nastavení pracovního cyklu čtvercové vlny: nastavení pracovního cyklu je účinné pouze pro čtvercovou vlnu. Lze jej nastavit pouze tehdy, když je typem vlny čtvercová vlna. Ostatní průběhy nemají koncept pracovního cyklu. Klepněte na tlačítko [Gen], v pravém dolním rohu obrazovky se objeví rozhraní pro ovládání generátoru signálu a poté klepnutím na tlačítko [OK] přepněte zelené výběrové pole do polohy [duty cycle] a poté otočte navigačním tlačítkem v levém horním rohu. Můžete zvýšit nebo snížit duty cycle pomocí knoflíku 1'Xo - 99 %.

Zachycení průběhu: Výstup Capture waveform slouží k zachycení části nebo celé části aktuálního zobrazeného průběhu jako výstupu generátoru signálu. Zachycený signál lze uložit do systému a lze uložit až 1000 skupin zachycených signálů.

Nejprve klikněte na tlačítko [menu], na levé straně obrazovky se zobrazí rozhraní funkcí a poté jej pomocí navigační klávesy vyhledejte na pozici výstupu zachycení a otevřete jej na obrazovce. Objeví se dvě fialové ohraničující čáry. Průběh uvnitř těchto dvou hraničních čar je segment průběhu, který má být zachycen. slovo select (vybrat) označuje, že hraniční čára je hraniční čára ovládaná aktuálním knoflíkem. Aktuální ovládací linii můžete přepínat a vybírat pomocí tlačítek [vlevo] a [vpravo] navigačního tlačítka. Po nastavení hraniční čáry můžete přejít doleva nahoru prostřednictvím navigační klávesy. Při nastavování můžete kliknutím na klávesu [pomalu] nastavit hrubé a jemné nastavení; uprostřed dvou hraničních čar je slovo "kanál 1 / kanál 2", což znamená, že aktuálně zachycený signál je signál kanálu 1 / kanálu 2, a kanál můžete vybrat prostřednictvím kláves [nahoru] [dolů] navigační klávesy; levá ohraničující čára je označena stupnicí napětí, která se používá pro odkaz na zachycenou vlnu. Pokud chcete upravit polohu úrovně sekání, můžete nastavit posun nastavením polohy Y kanálu. Například pokud jste zachytili stejnosměrný signál a nastavíte stejnosměrný průběh do polohy + 1V, pak je na výstupu napětí + 1V a nastavíte do polohy - 1V, pak je na výstupu napětí - 1V; Pokud chcete nastavit amplitudu vzorkování sekání, můžete nastavit vertikální citlivost kanálu pro vertikální škálování průběhu. Doporučuje se nejprve zesílit amplitudu signálu na maximum, ale neseكات nahoře, a pak zachytit, takže výstupní signál bude mít dostatek vzorkovacích dat, zkrácení výstupního průběhu bude menší a rozlišení bude vyšší. Pokud zachytíte pouze velmi malý signál a poté jej zachytíte. Výstup a poté jej prostřednictvím měření osciloskopem zvětšíte, objeví se na průběhu velmi závažný žebříčkový jev, protože vzorkování je nedostatečné, efektivní signál je příliš malý, stejně jako původní obrázek je velmi malý, ale nuceně zvětšený, obraz bude určitě rozmazaný; po určení všech parametrů klikněte na klávesu [OK], výřez se uloží na systémový disk.

Výstup zachyceného průběhu jako generátor signálu: nejprve kliknutím na tlačítko [Gen] otevřete rozhraní generátoru signálu, poté kliknutím na tlačítko [OK] přepnete zelené výběrové pole na pozici [typ průběhu] a poté kliknutím na tlačítko [nahoru] a [dolů] v navigačním klíči přepnete na "vlastní definici", poté kliknutím na tlačítko [Gen] ukončete rozhraní pro ovládání generátoru signálu a poté klikněte na tlačítko [MENU], na levé straně obrazovky se zobrazí rozhraní funkcí a poté jej navigujte na pozici [prohlížení výstupu] a otevřete jej. Na obrazovce se zobrazí seznam všech uložených zachycených signálů a poté se výběrové pole přesune na požadovanou pozici signálu pomocí navigačního tlačítka. Klikněte na klávesu [OK] a v levém horním rohu průběhu se objeví žlutý nápis "output", což znamená, že aktuální vlastní bit výběru signálu průběhu. Pak klikněte na [menu] pro ukončení a průběh výstupu generátoru signálu je zachycený signál. Je třeba poznamenat, že pokud je zachycený průběh jednocyklovým průběhem, to znamená, že ve dvou ohraničených cyklech je pouze jeden cyklus

pak je výstupní frekvence generátoru signálu rovna frekvenci nastavené generátorem signálu. Pokud zachycená frekvence tvaru vlny obsahuje N cyklů, pak je výstupní frekvence generátoru signálu n-násobkem nastavené frekvence a spouštěcí napětí by mělo být nastaveno na minimální hranu tvaru vlny. Jinými slovy, průsečík mezi tvarem vlny a spouštěcí čarou je nejmenší, jinak může být zobrazená frekvence několikanásobkem skutečné frekvence, protože vypočtená frekvence osciloskopu je frekvence získaná výpočtem počtu hran ze spouštěcí čáry, takže nesprávná hrana polohování může vést i ke zdvojení frekvence

1: Proč nemohu přístroj po obdržení zapnout?

Odpověď: Zkontrolujte, zda je napájecí kabel připojen k osciloskopu a zda je zásuvka napájena. Pokud je vše v pořádku, vyměňte nabíjecí hlavu mobilního telefonu a otestujte ji. Pokud je stále nelze spustit, obraťte se na zákaznický servis a požádejte o výměnu.

2: Proč v testu není žádný průběh, na obrazovce je stále jen jeden řádek?

Odpověď: Zkontrolujte, zda byla stisknuta pauza. Pokud ne, stiskněte jednou tlačítko [auto]. Pokud ne, může být problém v tom, že zdroj signálu nemá žádný výstupní signál, nebo může být vedení sondy zkratované nebo rozpojené. Zkontrolujte multimetrem, zda jsou sonda a zdroj signálu v pořádku.

3: Proč je hodnota napětí 0?

Odpověď: Nastavte vertikální citlivost a časovou základnu (vzorkovací frekvenci) nebo stiskněte obrazovku [auto], aby se zobrazil alespoň jasný a úplný periodický průběh, a horní a dolní část průběhu by se měla na obrazovce zobrazit úplně bez odříznutí horní části. Údaje o hodnotě napětí jsou v tomto okamžiku správné

4: Proč je údaj o hodnotě frekvence 0?

Odpověď: Nejprve je nutné zajistit, aby byl režim spouště automatická spoušť. Pokud je v režimu automatické spouště stále 0, stiskněte jednou tlačítko [auto]. Na obrazovce se zobrazí alespoň jasný a úplný periodický tvar vlny a měl by se spustit (zelená šipka znamená, že poloha je pevně nastavena mezi tvarem vlny a tvarem vlny bez otřesů). Údaje o hodnotě frekvence jsou správné

5: Proč je pracovní cyklus 0?

Odpověď: Nejprve je nutné zajistit, aby byl režim spouště automatická spoušť. Pokud je v režimu automatického spouštění stále 0, může to být tím, že spoušť není nastavena na automatické spouštění.

průběh. Po nastavení spouštěcí linky na průběh se průběh zafixuje. Kromě toho budou údaje o pracovním cyklu správné až poté, co se na obrazovce zobrazí alespoň jeden jasný periodický průběh.

6: Proč je průběh střídavé vazby stejný jako průběh stejnosměrné vazby?

Odpověď: Pokud je vstupním signálem symetrický střídavý signál (např. domácí 220 V), je průběh střídavé vazby nebo stejnosměrné vazby stejný. Pokud se jedná o nesymetrický střídavý signál nebo stejnosměrný pulzní signál, bude se průběh při přepnutí spojky pohybovat nahoru a dolů.

7: Proč při testování signálu běží průběh nahoru a dolů a nelze vidět průběh pouze několik online a offline kmitů?

Odpověď: Nastavte režim spouště na automatickou spoušť a poté jednou stiskněte tlačítko [auto]. Pokud se to nepodaří, nemusí být svorka na sondě uzemněná nebo je konec svorky sondy rozpojený. Pomocí multimetru zkontrolujte, zda je sonda v pořádku.

8: Proč se testovací průběh chvěje a nelze jej opravit?

Odpověď: Je třeba nastavit spouštěcí napětí, to znamená, že zelená šipka vpravo musí nastavit zelený indikátor na horní a dolní část křivky. Průběh se spustí a zafixuje, nebo se v nabídce nastavení zapne "automatických 50 %".

9: Proč nemůžeme zachytit náhlé pulzní vlny nebo digitální logické signály?

Odpověď: Nastavte režim spouštění na "Normal" nebo "Single", poté nastavte napětí spouštění a časovou základnu a vertikální citlivost a nakonec se dotkněte tlačítka pauzy.

1 0: Proč nereaguje regulace spouštěcího napětí? Odpověď:

Klikněte na nabídku - Auto 50% a zavřete ji.

1 1: Proč měříte napětí baterie nebo jiné stejnosměrné napětí bez průběhu?

Odpověď: Signál napětí baterie je stabilní stejnosměrný signál, nemá žádný průběh křivky, v režimu stejnosměrné vazby a pak nastavte vertikální citlivost, dojde k posunu nahoru nebo dolů přímky, pokud se jedná o střídavou vazbu, bez ohledu na to, jak se nastavuje, není žádný průběh.

1 2: proč měříme vlnu 220 V o frekvenci 50 Hz?

Odpověď: Pokud osciloskop zobrazuje nízkofrekvenční signál 50 Hz, musí být vzorkovací frekvence velmi nízká, aby zachytil 50Hz signál. Pokud je vzorkovací frekvence nízká, osciloskop se dostane do čekání, takže zobrazí "změnu karty". Všechny osciloskopy na světě budou při měření 50Hz signálů měnit karty, nikoliv proto, že by se osciloskop sám zasekl

1 3: Proč je špičková hodnota VPP větší než 600 V a ne 220 V nebo 310 V při měření průběhu napětí městského napájení?

Odpověď: Městský výkon 220 V je symetrický střídavý signál, kladná špička napětí (maximální hodnota) je +310 V, záporná špička napětí (minimální hodnota) je -310 V, takže špičková hodnota je 620 V, parametr spínání je efektivní hodnota. V této době se často uvádí, že napětí 220V, efektivní hodnota obecního napětí kolísá od 180 do 260V, takže špičkové VPP je v rozmezí 507-733V

14: Proč není naměřené napětí 220 V standardní sinusovka, dochází ke zkreslení?

Odpověď: V městské rozvodné síti dochází obecně ke znečištění a je zde více harmonických složek vysokého řádu. Tyto harmonické se projeví zkreslenou sinusovkou a normálním jevem při superpozici na sinusovku. Obecně je tvar městské elektrické vlny zkreslený a pro samotný osciloskop je to irelevantní.

1 5: Proč je na obrazovce bez vstupního signálu velký posun mezi základní linií (0 V) a levou šipkou (indikace 0 V)?

Odpověď: Nejprve vytáhněte sondu, poté klikněte na tlačítko [menu], přejděte na položku [kalibrace základní linie], poté stiskněte tlačítko OK a počkejte na dokončení kalibrace základní linie, základní linie a šipka se shodují.

16: Proč je napětí signálu nad 5MHz měřeno s výrazným útlumem a šířka pásma je pouze 5MHz?

Odpověď: Při měření 5MHz a více je nutné přesunout sondu na 10x převod a osciloskop by měl být nastaven na vstupní režim 10x, protože vedení sondy osciloskopu má kapacitu až 100-300pF, což je velká kapacita pro vysokofrekvenční signál! Signál byl značně zeslaben, když se přes sondu dostal na vstupní konec osciloskopu, a ekvivalentní šířka pásma je 5 MHz. Takže aby se vyrovnaly stovky PF vedení sondy, bude na vstupním konci vedení sondy desetkrát rozkmitán (přepínač je v 10x), takže tyto stovky PF kapacit se používají právě pro vyrovnání impedance. V tomto okamžiku je šířka pásma 100 MHz. Všimněte si, že lze použít pouze podpurnou 100MHz sondu

zkušební metody společného obvodu

Měření napětí baterie nebo stejnosměrného napětí

Volba převodového stupně: napětí baterie je obvykle nižší než 40 V, ostatní stejnosměrné napětí je nejisté, proto je nutné nastavit převodový stupeň podle aktuální situace. Pokud je

je vyšší než 40 V (sonda i osciloskop jsou nastaveny na stejný převod).

1: Nejprve je osciloskop nastaven na režim automatického spouštění (režim automatického spouštění je výchozí po spuštění) a režim automatického spouštění se používá k testování signálu cyklu (stejnoseměrné napětí patří k periodickému signálu).

2: Násobitel sondy osciloskopu je nastaven na odpovídající stupeň (výchozí hodnota je 1x po spuštění).

3: Režim vazby osciloskopu je nastaven na režim stejnosměrné vazby.

4: Vložte sondu a přepněte přepínač na rukojeti sondy na odpovídající stupeň.

5: Ujistěte se, že je baterie napájena nebo že je na výstupu stejnosměrné napětí.

6: Připojte svorku sondy k záporné baterii nebo záporné elektrodě stejnosměrného proudu a sondu k baterii nebo ke kladnému pólu stejnosměrného proudu.

7: Stiskněte jednou tlačítko [auto], zobrazí se stejnosměrný elektrický signál. Poté se podívejte na parametr průměrné hodnoty. Všimněte si, že napětí baterie nebo jiné stejnosměrné napětí patří ke stejnosměrnému signálu a není zde žádný křivkový průběh, pouze čára s posunem nahoru a dolů, a špičková hodnota a frekvence tohoto signálu jsou 0

Měření **vibrací** krystalů

Volba převodu: krystalový oscilátor snadno zastaví oscilaci, když narazí na kapacitu. Vstupní kapacita 1x sondy je až 100-300pF, 10x převod je asi 10-30pF a při 1x převodu se snadno zastaví kmitání, proto je nutné nastavit 10x převod, tj. sonda i osciloskop by měly být přepnuty na 10x převod (sonda i osciloskop jsou nastaveny na 10x převod).

1: Nejprve je osciloskop nastaven na režim automatického spouštění (režim automatického spouštění je po spuštění výchozí) a režim automatického spouštění se používá k testování periodického signálu (sinusový signál krystalové rezonance patří k periodickému signálu).

2: Násobič sondy osciloskopu je nastaven na 10x (po spuštění je výchozí hodnota 1x).

3: Režim vazby osciloskopu je nastaven na režim střídavé vazby.

4: Vložte sondu a přepněte přepínač na rukojeti sondy do polohy 10x.

5: Ujistěte se, že je krystalová deska zapnutá a funguje.

6: Připojte svorku sondy k zemnímu vodiči desky krystalového oscilátoru (záporný pól napájení), vytáhněte krytku sondy a uvnitř je hrot jehly, který se dotýká jednoho z pinů krystalového oscilátoru.

7: Jedním stisknutím tlačítka [auto] zobrazíte průběh testovaných vibrací krystalu. Pokud je průběh po automatickém nastavení příliš malý nebo příliš velký, lze velikost průběhu nastavit ručně pomocí knoflíku

Výběr převodovky: napětí signálu PWM přímého pohonu MOS trubice nebo IGBT je obecně v rozmezí 10V-20V, řídicí signál předního stupně PWM je také obecně v rozmezí 3-20V a stačí maximální test 40V v převodovce 1x. Proto stačí testovat PWM signál s 1x převodem (sonda i osciloskop jsou nastaveny na 1x převod).

1: Nejprve je osciloskop nastaven na režim automatického spouštění (režim automatického spouštění je výchozí po spuštění) a režim automatického spouštění se používá k testování signálu cyklu (PWM patří k signálu cyklu).

2: Násobič sondy osciloskopu je nastaven na převod 1x (výchozí je 1x převod po spuštění)

3: Režim vazby osciloskopu je nastaven na režim stejnosměrné vazby.

4: Vložte sondu a přepněte přepínač na rukojeti sondy do polohy 1x 5: Ujistěte se, že hlavní deska PWM má v tomto okamžiku výstup signálu PWM.

6: Připněte sondu k pólu S trubice MOS a sondu k pólu g trubice MOS.

7: Jedním stisknutím tlačítka [auto] zobrazíte naměřený průběh PWM. Pokud je průběh po automatickém nastavení příliš malý nebo příliš velký, lze velikost průběhu nastavit ručně pomocí knoflíku

Měření výstupu generátoru signálu

Volba převodového stupně: výstupní napětí generátoru signálu je v rozmezí 30 V a maximální testovací hodnota 1x převodu je 40 V, takže výstup generátoru testovacího signálu je v 1x převodu (sonda a osciloskop jsou nastaveny na 1x převod).

1: Nejprve je osciloskop nastaven do režimu automatického spouštění (výchozí režim je režim automatického spouštění po spuštění) a režim automatického spouštění se používá k testování periodického signálu (signál vycházející z generátoru signálu patří k periodickému signálu).

2: Násobič sondy osciloskopu je nastaven na převod 1x (výchozí je 1x převod po spuštění)

3: Režim vazby osciloskopu je nastaven na režim stejnosměrné vazby.

4: Vložte sondu a přepněte přepínač na rukojeti sondy do polohy 1x 5: Ujistěte se, že je generátor signálu zapnutý a vysílá signál.

6: Připojte svorku sondy k černé svorce výstupního vedení generátoru signálu a sondu k červenému výstupnímu vedení generátoru signálu.

7: Stiskněte jednou tlačítko [auto], zobrazí se průběh výstupu generátoru. Pokud je tvar vlny po automatickém nastavení příliš malý nebo příliš velký, lze velikost tvaru vlny nastavit ručně pomocí knoflíku

Výběr převodovky: nejprve je třeba zakoupit 100x sondu; elektrická energie v domácnosti je obecně 180-260 V, špičkové špičkové napětí je 507-733 V, maximální měření 1x je 40 V, nejvyšší hodnota 10x je 400 V, 100x je 4000 V a standardní standardní sonda je 10x vysokonapěťová sonda a špičkovou hodnotu 400 V lze měřit pouze. Proto musí být sonda 100x dodána sama o sobě a poté nastavena na převod 100x, to znamená, že sonda i osciloskop musí být přepnuty na převod 100x.

1: Nejprve je osciloskop nastaven na režim automatického spouštění (režim automatického spouštění je výchozí po spuštění) a režim automatického spouštění se používá k testování cyklického signálu (50 Hz domácí elektrické energie patří k periodickému signálu).

2: Násobič sondy osciloskopu je nastaven na 100x (po spuštění je výchozí hodnota 1x).

3: Režim vazby osciloskopu je nastaven na režim střídavé vazby.

4: Vložte sondu a přepněte přepínač na rukojeti sondy do polohy

100X. 5: Ujistěte se, že testovaný konec má domácí výstupní napětí.

6: Připojte svorku sondy a sondu ke 2 vodičům domácího elektrického napájení bez rozlišení kladného a záporného pólu.

7: Jedním stisknutím tlačítka [auto] zobrazíte průběh elektrické energie v domácnosti. Pokud je průběh po automatickém nastavení příliš malý nebo příliš velký, lze velikost průběhu upravit ručně pomocí knoflíku

Měření zvlnění výkonu

Volba převodového stupně: pokud je výstupní napětí zdroje nižší než 40 V, je nastaven převodový stupeň 1x (sonda i osciloskop jsou nastaveny na převodový stupeň 1x) a 10x (sonda i osciloskop jsou nastaveny na stejný převodový stupeň, pokud jsou 40-400 V).

1: Nejprve je osciloskop nastaven na režim automatického spouštění (režim automatického spouštění je výchozí po spuštění) a režim automatického spouštění se používá k testování signálu cyklu (stejnoseměrné napětí patří k periodickému signálu).

2: Násobitel sondy osciloskopu je nastaven na odpovídající převod (výchozí hodnota je 1x po spuštění).

3: Režim vazby osciloskopu je nastaven na režim vazby AC, všimněte si, že režim vazby AC AC

4: Vložte sondu a přepněte přepínač na rukojeti sondy na odpovídající stupeň.

- 5: Ujistěte se, že je napájení zapnuté a výstupní napětí je k dispozici.
- 6: Připojte svorku sondy k zápornému konci výstupu napájení a sonda je připojena ke kladnému konci výstupu napájení a počkejte asi 3 sekundy. Když jsou žlutá čára a levá poloha žluté šipky ve stejné poloze.
- počkejte, dokud se pozice nedostane do stejné polohy.
- 7: Stiskněte jednou tlačítko [auto] a zobrazí se zvlnění výkonu.

Měření výkonu měniče

Volba převodového stupně: Výstupní napětí měniče je podobné jako u elektrické energie v domácnosti, se špičkovým napětím nad SOOV, nejvyšší naměřené napětí 40 V u 1X, 400 V u 10x a 4000 V u 100x převodového stupně. Výchozí standardní sonda je 10x sonda vysokého napětí a špičkovou hodnotu 400V lze měřit pouze při nejvyšším. Proto je třeba zajistit samotnou sondu 100x a poté ji nastavit na převod 100x, tj. sondu osciloskop přepnout na převod 100x.

1: Nejprve je osciloskop nastaven do režimu automatického spouštění (výchozí režim je režim automatického spouštění po spuštění) a režim automatického spouštění se používá k testování periodického signálu (signál vycházející z měniče patří k periodickému signálu).

2: Násobič sondy osciloskopu je nastaven na 100x (výchozí hodnota je 1x za spuštění)

3: Režim vazby osciloskopu je nastaven na režim stejnosměrné vazby.

4: Vložte sondu a přepněte přepínač na rukojeti sondy do polohy 100X

5: Zkontrolujte, zda je měnič zapnutý a zda je k dispozici výstupní napětí.

6: Připojte svorku sondy a sondu k výstupnímu konci měniče bez rozlišení kladného a záporného pólu.

7: Jedním stisknutím tlačítka [auto] zobrazíte průběh měniče. Pokud je průběh po automatickém nastavení příliš malý nebo příliš velký, lze velikost průběhu nastavit ručně pomocí knoflíku

Měření výkonového zesilovače nebo audio signálu

Volba převodového stupně: Výstupní napětí výkonového zesilovače je obecně nižší než 40 V a stačí maximální test 40 V při převodu 1x (sonda i osciloskop jsou nastaveny na převod 1x).

1: Nejprve nastavte osciloskop do režimu automatického spouštění (výchozí je režim automatického spouštění po spuštění).

2: Násobič sondy osciloskopu je nastaven na stupeň 1x (po spuštění je výchozí stupeň 1x).

3: Režim vazby osciloskopu je nastaven na režim střídavé vazby.

4: Vložte sondu a přepněte přepínač na rukojeti sondy do polohy 1x 5:

Zkontrolujte, zda je zesilovač zapnutý a zda vysílá zvukové signály.

6: Připojte svorku a sondu k výstupnímu konci 2 linek zesilovače bez rozlišení kladného a záporného pólu.

7: Jedním stisknutím tlačítka [auto] zobrazíte průběh měniče. Pokud se po automatickém nastavení je tvar vlny příliš malý nebo velký, lze velikost tvaru vlny nastavit ručně pomocí knoflíku.

Měření komunikačního signálu vozidla / signálu sběrnice

Volba převodového stupně: komunikační signál automobilu je obecně nižší než 20 V a maximální test pro 1x převod je 40 V, takže stačí testovat signál komunikačního signálu vozidla s 1x převodem (sonda i osciloskop jsou nastaveny na 1x převod).

1: Nejprve je osciloskop nastaven na normální režim spouštění (po spuštění je výchozí režim automatického spouštění). Režim normálního spouštění se používá speciálně pro měření neperiodického digitálního signálu. Pokud se použije režim automatického spouštění, není možné zachytit neperiodický signál.

2: Násobič sondy osciloskopu je nastaven na převod 1x (po spuštění je výchozí hodnota 1x) 3: Režim vazby osciloskopu je nastaven na režim střídavé vazby.

4: Vložte sondu a přepněte přepínač na rukojeti sondy do polohy 1x.

5: Připojte svorku sondy a sondu ke dvěma signálovým linkám komunikační linky, bez ohledu na kladný a záporný signál. Pokud je signálních linek více, je třeba předem posoudit signální linku nebo zkusit vybrat dvě z nich pro několikanásobné testování. 6: Ujistěte se, že na komunikační lince je v tuto chvíli komunikační signál.

7: Nastavte vertikální citlivost na 50 mV

8: Nastavte časovou základnu na 20us

9: Stiskněte jednu tlačítko [50%].

10: Pokud je na komunikační lince komunikační signál, osciloskop jej zachytí a zobrazí na obrazovce. Pokud jej nelze zachytit, je nutné zkusit nastavit časovou základnu (1ms-100ns) a spouštěcí napětí (zelená šipka) na vícekrát

Měření infračerveného dálkového přijímače

Volba převodového stupně: infračervený signál dálkového ovládání je obecně 3-5 V a maximální test pro 1x převod je 40 V, takže stačí testovat signál komunikačního signálu vozidla s 1x převodem (sonda i osciloskop jsou nastaveny na 1x převod).

1: Nejprve je osciloskop nastaven na normální režim spouštění (po spuštění je výchozí režim automatického spouštění). Režim normálního spouštění se používá speciálně pro měření neperiodického digitálního signálu. Pokud režim automatického spouštění není schopen zachytit neperiodický signál, patří infračervený signál dálkového ovládání k neperiodickému digitálnímu kódovacímu signálu.

2: The násobitel sondy je nastaven na převod 1x (výchozí hodnota je 1x po spuštění).

3: Režim vazby osciloskopu je nastaven na režim stejnosměrné vazby.

4: Vložte sondu a přepněte přepínač na rukojeti sondy do polohy 1x.

5: Připojte svorku sondy k zemnicímu konci (zápor) desky infračerveného přijímače a sondu k datovému pinu infračerveného přijímače.

6: Nastavte vertikální citlivost na 500 mv

7: Nastavte časovou základnu na 20us

8: Otočte spouštěcí červenou šipku do levé polohy žluté šipky a přibližně o 1 velkou mřížkovou vzdálenost.

9: V tomto okamžiku je infračervený signál pro příjem vlasů vyslán dálkovým ovládáním a na osciloskopu se objeví průběh.

Měření **zesilovacího obvodu** se senzory (**teplota, vlhkost, tlak, hala atd.**)

Volba převodového stupně: signál snímače je obecně poměrně slabý, přibližně několik milivoltů. Tento malý signál nelze přímo detekovat osciloskopem. Na hlavní desce tohoto snímače je část pro zesílení signálu. Když se najde výstupní konec zesilovače, může osciloskop měřit signál po zvětšení. Lze jej použít při převodu 1x (sonda i osciloskop jsou nastaveny na převod 1x).

1: Nejprve nastavte osciloskop do režimu automatického spouštění (výchozí je režim automatického spouštění po spuštění).

2: Násobič sondy osciloskopu je nastaven na převod 1x (po spuštění je výchozí hodnota 1x) 3: Režim vazby osciloskopu je nastaven na režim stejnosměrné vazby.

4: Vložte sondu a přepněte přepínač na rukojeti sondy do polohy 1x.

5: Připojte svorku sondy k uzemňovacímu konci základní desky senzoru (záporné napájení), najděte výstupní konec zesilovací části a připojte sondu k výstupnímu konci.

6: Nastavte vertikální citlivost na 50 mV.

7: Nastavte časovou základnu na 500 ms a vstupte do režimu pomalého skenování velké časové základny 8: Přesuňte základní linii na spodní stranu

9: Pokud se linka signálu objeví nahoře, vertikální citlivost se sníží, což je 100 mV, 200 mV, 500 mV atd. zase když aktualizovaný signál vpravo nezačíná nahoře (obecně nejlépe uprostřed horní a dolní části), signál přijatý snímačem lze detekovat

Dodavatel/Distributor

Sunnysoft s.r.o.

Kovanecká 2390/1a

190 00 Praha 9

Česká republika

www.sunnysoft.cz



FNIRSI

Product instructions

FNIRSI-1014D

Two in one digital oscilloscope

YOUR GOOD TEST TOOL

Product introduction

FNIRSI-1014D is a two in one oscilloscope and signal generator launched by FNIRSI, with comprehensive functions and high practicability. It is a cost-effective dual channel desktop oscilloscope for the maintenance industry and R & D industry. The oscilloscope has a real-time sampling rate of 1GSa/s , $100\text{MHz} \times 2$ analog bandwidth; complete trigger function (single time / normal / automatic), both for periodic analog signal and aperiodic digital signal can be used freely; built in DDS function signal generator and the industry's original chopping output ($@ 2.5\text{VPP}$), all signal frequency step is 1Hz , support 14 kinds of standard function signal and a customizable chopping signal, chopping The output device intercepts part or the whole part of the complex signals measured by the oscilloscope as the output signal of the signal generator, which can store up to 1000 customized cut-off signals; the built-in high-voltage protection module can tolerate up to 400V continuous voltage, without worrying about the oscilloscope burning accident caused by the probe not moving to $10\times$ gear. Large time base scrolling mode, which can monitor the slow level change; equipped with efficient one button auto, self-adaptive 25%, 50%, 75% trigger, which can display the measured waveform without complicated adjustment; the display is equipped with 7-inch 800×480 resolution high-definition LCD screen; cursor measurement function, which can read the amplitude and frequency parameters manually without reading the background scale unit and quantity, and without conversion To get the peak and frequency directly; extremely convenient screen capture and waveform storage function, built-in 1GB storage space, can store up to 1000 screen capture pictures + 1000 groups of waveform data, the storage process is simple and fast, save the current waveform, just a click to save the current data, very convenient; powerful waveform image manager, support thumbnail browsing, view, view details The functions of page turning, deleting and waveform enlarging, reducing and moving are convenient for secondary analysis. The fuselage is equipped with USB interface, which can be connected with the computer to realize the sharing of its own screen capture pictures and the computer, which is convenient for secondary analysis; Lissajous graphic display function can be used to compare and judge the amplitude, frequency and phase of two groups of signals; FFT viewing function can roughly estimate the harmonic component of the signal; Li Shayu's graphic display function can be used to compare and judge the amplitude, frequency and phase of two groups of signals;

Serious warning !

1: When the two channels are used at the same time, the ground clamps of the two probes must be connected together. It is strictly forbidden to connect the ground

clamps of the two probes to different potentials, especially the different potential terminals of high-power equipment or 220 v. otherwise, the oscilloscope motherboard will be burned. Because the two channels are grounded together, connecting to different potentials will lead to the short circuit of the internal ground wires of the motherboard, and all oscilloscopes are same;

2: The BNC input of oscilloscope can withstand 400V voltage at most. It is strictly forbidden to input more than 400V voltage in the position of 1x probe


3: The original power supply must be used. It is strictly forbidden to use the power supply or USB of other devices under test. Otherwise, the motherboard ground wire may be short circuited during the test

4: 100x probe (such as ultrasonic welding machine, ultrasonic cleaning machine, etc.) or even 1000x probe (such as high-voltage end of high-frequency transformer, coil of induction cooker, etc.) must be used to measure high-frequency and high-voltage signal

Solemnly remind

the bandwidth of 1x probe is 5MHz, and the bandwidth of 10x probe is 100MHz. When the measurement frequency is higher than 5MHz, the switch on the probe handle needs to be moved to 10x, and the oscilloscope also needs to be set to 10x. Otherwise, the signal will be greatly attenuated, which is the case with all oscilloscopes. Because the probe line of the oscilloscope itself has a capacitance as high as 100 ~ 300pf, which is a big capacitance for high frequency signal! The signal has been greatly attenuated when it reaches the input end of the oscilloscope through the probe, and the equivalent bandwidth is 5MHz. Therefore, in order to match the hundreds of PF of the probe line, the input end of the probe line will be attenuated 10 times (the switch is in the 10x gear), so that the hundreds of PF capacitor is just used for impedance matching. At this time, the bandwidth is 100MHz. Note that only probes with 100MHz bandwidth or above can be used

Interface function indicator diagram

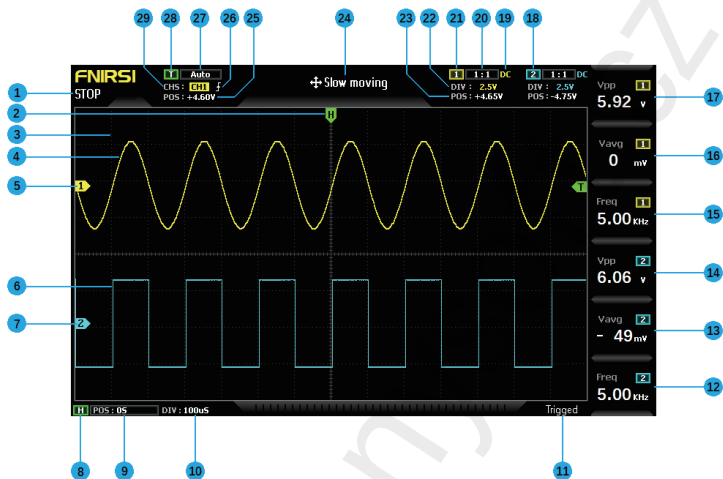

- 1: Run pause indicator
- 2: The trigger x position indication arrow indicates that this is the trigger x point
- 3: Background grid tick marks
- 4: Waveform data of channel 1
- 5: The baseline position of channel 1 indicates the arrow, that is, the position of 0V potential
- 6: Waveform data of channel 2
- 7: The baseline position of channel 2 indicates the arrow, that is, the position of 0V potential
- 8: Horizontal time base control bar flag
- 9: Trigger the position of the X arrow relative to the system coordinate system
- 10: Horizontal time base refers to the length of time represented by a large grid in the horizontal direction, which is determined by the sampling rate. The larger the time base is, the slower the sampling rate is, and vice versa
- 11: Trigger status flag
- 12: Column 6 measurement parameters, press F6 to select measurement parameters freely
- 13: Column 5 measurement parameters, press F5 to select measurement parameters freely
- 14: Column 4 measurement parameters, press F4 to select measurement parameters freely

- freely
- 15:** Column 3 measurement parameters, press F3 to select measurement parameters freely
- 16:** Column 2 measurement parameters, press F2 to select measurement parameters freely
- 17:** Column 1 measurement parameters, press F1 to select measurement parameters freely
- 18:** Channel 2 control bar sign
- 19:** The input coupling mode of channel 1 has two options: DC and ac. DC means DC coupling and AC means AC coupling
- 20:** Channel 1 probe magnification
- 21:** Channel 1 control bar sign
- 22:** vertical sensitivity of channel 1 refers to the voltage represented by a large grid in the vertical direction
- 23:** Channel 1 baseline arrow position relative to the system coordinate system
- 24:** movement speed of waveform operation, fast movement is used for coarse adjustment, and slow movement is used for fine adjustment
- 25:** trigger voltage arrow position relative to the system coordinate system
- 26:** trigger edge indicator, arrow up to rising edge trigger, arrow down to falling edge trigger
- 27:** trigger mode indicator, divided into auto, single and normal; auto is automatic trigger, single is single trigger and normal is normal trigger
- 28:** trigger control bar flag
- 29:** trigger channel, divided into ch1 and CH2 options

Button function indication diagram



- 1:** Run / pause button. Click this button to pause sampling at any time
- 2:** One key automatic adjustment button, click this button, the system will automatically identify the signal and set the system to the best parameters to display this waveform
- 3:** Function menu button, click here to pop up the function menu
- 4:** One click screen capture button. Click this button to take a screen capture of the whole screen and save it to the internal storage space automatically
- 5:** One button save waveform button, click this button will save all waveform data of the two channels to the internal storage space
- 6:** Time cursor switch button, click this button to turn on and off the cursor measurement function
- 7:** Press the voltage cursor switch key to turn on and off the cursor measurement function
- 8:** System [right] navigation key
- 9:** System navigation key
- 10:** System [OK] navigation key
- 11:** System navigation key
- 12:** System [left] navigation key
- 13:** Move speed button. Click this button to switch between fast move and slow move
- 14:** Channel 1 vertical position adjustment knob, rotate clockwise to move up, rotate counterclockwise to move down
- 15:** Channel 1 switch button. Click this button to turn on or off the waveform display of channel 1
- 16:** Channel 1 control bar button. Click this button to pop up the control parameters related to channel 1, which can be selected according to the navigation key or the knob next to it
- 17:** Channel 1 vertical sensitivity adjustment knob, clockwise vertical amplification, counterclockwise vertical reduction
- 18:** Channel 1 signal input port, the measurement range is 0 ~ 40V peak to peak, pay attention to the maximum tolerance of 400V peak to peak withstand voltage
- 19:** Channel 2 vertical position adjustment knob, rotate clockwise to move up, rotate counterclockwise to move down
- 20:** Channel 2 switch button. Click this button to turn on or off the waveform display of channel 2
- 21:** Channel 2 control bar button. Click this button to pop up the control parameters related to channel 2, which can be selected according to the navigation key or the knob next to it
- 22:** Channel 2 vertical sensitivity adjustment knob, clockwise vertical amplification, counterclockwise vertical reduction
- 23:** Channel 2 signal input port, the measurement range is 0 ~ 40V peak to peak, pay

attention to the maximum tolerance of 400V peak to peak withstand voltage

24: the system triggers the x position adjustment knob to move clockwise to the right and counterclockwise to the left

25: one key return to center button, after clicking this button, channel 1, channel 2 vertical position, trigger x horizontal position, trigger y vertical position will return to center

26: the time base adjustment knob is rotated clockwise to reduce the time base, that is, to enlarge the waveform horizontally, and counterclockwise to increase the time base, that is, to reduce the waveform horizontally

27: DDS signal generator output

28: trigger voltage y position adjustment knob, rotate clockwise to move up, rotate counterclockwise to move down

29: trigger mode switch button, divided into auto, single and normal

30: trigger edge switch button, divided into rising edge and falling edge

31: trigger channel switch button, divided into channel 1 and channel 2

32: 50% trigger button, click this button, the system will automatically set the current trigger voltage to 25%, 50%, 75% according to the signal characteristics to trigger

33: the first column measurement parameter selection button, after the measurement block diagram pops up, you can select according to the navigation key or the knob next to it

34: the second column measurement parameter selection button, after the measurement block diagram pops up, you can select according to the navigation key or the knob next to it

35: the measurement parameter selection button in column 3, after the measurement block diagram pops up, you can select according to the navigation key or the knob next to it

36: the measurement parameter selection button in column 4, after the measurement block diagram pops up, you can select according to the navigation key or the knob beside it

37: the measurement parameter selection button in column 5 pops up the measurement block diagram, which can be selected according to the navigation key or the knob beside it

38: the measurement parameter selection button in column 6, after the measurement block diagram pops up, you can select according to the navigation key or the knob beside it

39: signal generator control bar button, click this button will pop up the signal generator parameter control bar, you can select according to the navigation key or the knob next to it

40: next page of the control button on the next page of picture / waveform / chopping Manager

41: picture / waveform / chopped wave manager next page control button [previous

page]

42: [delete] of the control button on the next page of picture / waveform / chopping Manager

43: select all of the control buttons on the next page of picture / waveform / chopping Manager

44: [return] of the control button on the next page of picture / waveform / chopping Manager

45: USB port for sharing screenshots

46: power switch, click to start or shut down operation

Operating instructions (oscilloscope part)

Open or close channel 1 / Channel 2: click [ch1] / [CH2] to open or close ch1 / CH2
Turn FFT on or off: click the [conf] button under ch1 or CH2, the parameter control bar of channel 1 / Channel 2 will pop up, and then turn FFT on / off through the navigation key

Setting input coupling mode: click [conf] under ch1 or CH2 to pop up the parameter control bar of channel 1 / Channel 2, and then switch DC / AC through the navigation key

Set the probe input ratio: click [conf] under ch1 or CH2, the parameter control bar of channel 1 / Channel 2 will pop up, and then switch to 1x / 10x / 100x through the navigation key

Scaling waveform: rotate the large knob at the bottom left corner of vertical frame to scale the waveform of channel 1 vertically, and rotate the large knob at the bottom right corner to scale the waveform of channel 2 vertically; rotate the large knob at the bottom of horizontal frame to scale the waveform of channel 1 and channel 2 horizontally, clockwise to enlarge, counterclockwise to reduce

Moving waveform: rotate the small knob in the upper left corner of vertical frame to move the waveform of channel 1 vertically, and rotate the small knob in the upper right corner to move the waveform of channel 2 vertically, which moves clockwise upward and counterclockwise downward; rotate the small knob in the upper horizontal frame to move the waveform of channel 1 and channel 2 horizontally, which moves clockwise to the right and anticlockwise to the left In the process, you can click the [slow] button to select coarse adjustment or fine adjustment

Adjust trigger voltage: rotate the small knob under the trigger frame to adjust the

trigger voltage. In this process, you can click the [slow] button to select coarse adjustment or fine adjustment. Pay attention to turn off the [automatic 50%] trigger in the menu first, otherwise the trigger voltage cannot be adjusted

Set trigger edge: click edge to switch rising edge / falling edge

Set auto trigger: click mode to switch between auto / single / normal, where auto is auto trigger

Set single trigger: click mode to switch between auto / single / normal, where single is single trigger

Set normal trigger: click mode to switch between auto / single / normal, where normal is normal trigger

Pause display: click the red [run / stop] button in the upper right corner to pause or run

Automatic waveform adjustment: click the blue [auto] button in the upper right corner to adjust automatically

Set the slow scan scrolling mode: rotate the big knob under the horizontal frame counterclockwise. When the base reaches 100ms, the system will enter the slow scan scrolling mode. 100ms ~ 50s belong to the time base of the scrolling mode

Time cursor measurement: click the [H cur] button to turn on the time cursor, and then select the left and right light markings by the left and right keys of the navigation key, and finally adjust them by the small knob in the upper left corner of the navigation key, in which the light markings are moved to the right by clockwise rotation and to the left by counterclockwise rotation

Voltage cursor measurement: click the [v cur] button to turn on the voltage cursor, and then select the up and down light marking lines by the up and down keys of the navigation key, and finally adjust them by the small knob in the upper left corner of the navigation key, in which the light marking lines are moved upward by clockwise rotation and downward by counterclockwise rotation

Set the parameters to be displayed: click F1 ~ F6 to pop up the parameter measurement control bar, and select the currently required parameters through the navigation key or the nearby knob

Full screen capture: click the [s pic] button to capture the current display. The captured image is saved to the local disk in BMP format

Save current waveform data: click the [s wav] button to save all waveform data of the opened channel to the local disk

Adjust the screen brightness: click the [menu] button, navigate to the [screen brightness], press the OK key, and finally adjust the screen brightness through the small knob in the upper left corner. 100 is the brightest and 0 is the darkest

Adjust the background grid brightness: click the [menu] key, navigate to the [grid brightness], press the OK key, and finally adjust the grid brightness through the small knob in the upper left corner. 100 is the brightest, and 0 is to turn off the grid display

Setting automatic 50% trigger all the time: click the [menu] key, navigate to [automatic 50%], press the OK key, and then select [on] through the navigation key. After setting, in the automatic trigger mode, each measurement system will automatically set the trigger voltage to 25% / 50% / 75% of the peak to peak value according to the waveform characteristics

Horizontal baseline offset calibration: when the probe has been pulled out, when the left yellow / cyan indicator arrow and the Yellow / cyan horizontal baseline of either channel are not in the same position, calibration is required; first pull out the probe, then click the [menu] key, navigate to [baseline calibration], and then press the OK key to calibrate the baseline

View the saved screen capture: click [menu], navigate to [picture browse], and then press the OK key to enter the picture thumbnail preview interface, which is the thumbnail of the captured waveform. Select the thumbnail through the navigation key, and then click [OK] to view the screen capture of the waveform in full screen, with (RET) return at the bottom, (SEL) All), (DEL), (last), (next) the next control button can be operated

View the saved waveform data: click [menu] key, navigate to [waveform browse], and then press the OK key to enter the waveform thumbnail preview interface, where is the waveform thumbnail. Select the thumbnail through the navigation key, and then click [OK] to view the waveform in full screen, with (RET) return at the bottom, (SEL) All), (DEL), (last), (next) the next control button can be operated

Delete the saved waveform: click the [menu] key, navigate to [waveform browse],

and then press the OK key to enter the waveform thumbnail preview interface, where is the waveform thumbnail. Select the thumbnail through the navigation key, and then click the [del] key at the bottom to delete the waveform, or click the key to delete it in full screen view

Connect the computer to view the screen capture pictures: click the [menu] button, navigate to the [USB share] through the navigation key, and then press the OK key to open the USB share. Then connect the computer with the attached USB cable, and the computer will pop up the removable disk or U-disk. You can find the screen capture pictures saved in the disk in the computer. Note that you can't repair them directly in the disk Change the file name of the picture, otherwise the oscilloscope picture manager will not be able to display the picture

Operation instruction (signal generator part)

Switch the waveform type: click the [Gen] button, the signal generator control interface will pop up in the lower right corner of the screen, and then click the [OK] button to switch the green selection box to the [waveform type] position, and then click the [up] or [down] in the navigation key or the button in the upper left corner of the navigation key to switch the waveform type

Adjust the waveform frequency: click the [Gen] button, the signal generator control interface will pop up in the lower right corner of the screen, and then click the [OK] button to switch the green selection box to the [frequency] position, and then click the [left] or [right] in the navigation key to set the position cursor, that is, to set the division to be adjusted. After confirming, press the [up] or [down] or the [up] button in the upper left corner of the navigation key The knob can increase or decrease the value of the current bit, thus changing the frequency

Adjust the duty cycle of square wave: the duty cycle setting is only effective for square wave. It can only be set when the waveform type is square wave. Other waveforms have no concept of duty cycle. Click the [Gen] button, the signal generator control interface will pop up in the lower right corner of the screen, and then click the [OK] button to switch the green selection box to the [duty cycle] position, and then rotate the navigation key in the upper left corner You can increase or decrease the duty cycle with the knob of 1% ~ 99%

Capture waveform: Capture waveform output is to capture part or the whole part of the current displayed waveform as the output of signal generator. The captured signal can be saved to the system, and up to 1000 groups of captured signals can be saved.

First, click the [menu] button, the function interface will pop up on the left side of the screen, and then locate it to the capture output] position through the navigation key and open it on the screen Two purple boundary lines will pop up. The waveform within the two boundary lines is the waveform segment to be captured .The word select indicates that the boundary line is the boundary line operated by the current knob. You can switch and select the current operation line through the [left] and [right] keys of the navigation key. After setting the boundary line, you can go up to the left through the navigation key When adjusting, you can click the [slow] key to set coarse and fine adjustment; there is a word "channel 1 / Channel 2" in the middle of the two boundary lines, which means that the current captured signal is channel 1 / Channel 2 signal, and you can select the channel through the [up] [down] of the navigation key; the left boundary line is marked with voltage scale, which is used to refer to the captured wave If you want to adjust the chopping level position, you can adjust the offset by adjusting the Y position of the channel. For example, if you captured a DC signal and adjust the DC waveform to + 1V position, then the output is + 1V voltage, and adjust to - 1V, then the output is - 1V voltage; If you want to adjust the sampling amplitude of chopped wave, you can adjust the vertical sensitivity of the channel to scale the waveform vertically. It is recommended to first amplify the signal amplitude to the maximum, but not to cut the top, and then capture so that the output signal will have enough sampling data, the output waveform distortion will be smaller, and the resolution will be higher. If you only capture a very small signal, and then capture it Output, and then through the oscilloscope measurement to enlarge it, the waveform will appear a very serious ladder phenomenon, because the sampling is insufficient, the effective signal is too little, just like the original image is very small, but forced to enlarge, the image is bound to be fuzzy; after all the parameters are determined, click the [OK] key, the cut-off will be saved to the system disk

Output the captured waveform as the signal generator: first click the [Gen] button to open the signal generator interface, then click the [OK] button to switch the green selection box to the [waveform type] position, and then click the [up] and [down] in the navigation key to switch it to "self definition", then click the [Gen] button to exit the signal generator control interface, and then click the [MENU] button , the function interface will pop up on the left side of the screen, and then navigate it to the [output browsing] position and open it. All saved captured signals will be listed on the screen, and then the selection box will be moved to the desired signal position through the navigation key. Click the [OK] key, and the Yellow word "output" will pop up in the upper left corner of the waveform, which means that the current custom signal selection bit of the waveform Then click [menu] to exit, and the waveform output by the signal generator is the captured signal. It should be noted that if the captured waveform is a single cycle waveform, that is, there is only one cycle in the two bound

ary lines, then the output frequency of the signal generator is equal to the frequency set by the signal generator. If the captured waveform frequency contains N cycles, then the output frequency of the signal generator is n times of the set frequency, and the trigger voltage should be adjusted to the minimum edge of the waveform. In other words, the intersection point between the waveform and the trigger line is the least, otherwise the displayed frequency may be several times of the actual frequency, because the calculated frequency of the oscilloscope is the frequency obtained by calculating the number of edges from the trigger line, so the wrong edge of the positioning may also lead to frequency doubling.

Analysis of common problems

1: Why can't I turn on the machine after receiving it?

Answer: please check whether the power cord is connected to the oscilloscope and whether the socket is powered. If all are correct, please replace a mobile phone charging head and test it. If it is still unable to start, please contact customer service for replacement.

2: Why is there no waveform in the test, only one line on the screen is still?

Answer: please check whether the pause has been pressed. If not, press the [auto] button once. If not, it may be a problem that the signal source has no signal output, or the probe line may be short circuited or open circuit. Please check whether the probe and signal source are normal with multimeter.

3: Why is the voltage value data 0?

Answer: please adjust the vertical sensitivity and time base (sampling rate), or press [auto] screen to display at least a clear and complete periodic waveform, and the top and bottom of the waveform should be displayed on the screen completely without cutting the top. The voltage value data is correct at this time.

4: Why is the frequency value data 0?

Answer: first, it is necessary to ensure that the trigger mode is auto automatic triggering. If it is still 0 in auto mode, press [auto] button once. At least a clear and complete periodic waveform is displayed on the screen, and the waveform should be triggered (the green arrow indicates that the position is fixed between the wave shape and the wave shape without shaking). The data of frequency value is correct.

5: Why is the duty cycle 0?

Answer: first, it is necessary to ensure that the trigger mode is auto automatic triggering. If it is still 0 in auto mode, it may be that the trigger is not adjusted to the

waveform. After the trigger line is adjusted to the waveform, the waveform will be fixed. Moreover, the data of duty cycle will be correct only after at least one clear periodic waveform is displayed on the screen

6: Why is AC coupling the same as DC coupling waveform?

Answer: if the input signal is a symmetrical AC signal (such as domestic 220V), the AC coupling or DC coupling waveform are the same. If it is an asymmetric AC signal or a DC pulse signal, the waveform will move up and down when the coupling is switched

7: Why does the waveform run up and down when testing the signal, and can't see the waveform only see multiple online and offline beats?

Answer: set trigger mode to auto auto trigger, and then press [auto] button once. If it is not solved, the clamp on the probe may not be grounded or the probe clamp end is open circuit. Please check whether the probe is normal with multimeter

8: Why does the test waveform shake around and cannot be fixed?

Answer: the trigger voltage needs to be adjusted, that is, the green arrow on the right needs to adjust the green indicator to the top and bottom of the waveform. The waveform is triggered and fixed, or the setting menu is entered to turn on "automatic 50%."

9: Why can't we capture sudden pulse waves or digital logic signals?

Answer: adjust the trigger mode to "Normal" or "Single", then adjust the trigger voltage and time base and vertical sensitivity, and finally touch the pause.

10: Why does trigger voltage regulation not respond?

Answer: click menu - Auto 50% to close it

11: Why do you measure a battery or other DC voltage without waveform?

Answer: battery voltage signal is stable DC signal, there is no curve waveform, in DC coupled mode, and then adjust vertical sensitivity, there will be an upward or downward offset straight line waveform, if it is AC coupling, no matter how to adjust, there is no waveform.

12: why do we measure the 220V power frequency 50Hz wave?

Answer: if the oscilloscope displays 50Hz low frequency signal, the sampling rate needs to be very low to capture 50Hz signal. If the sampling rate is low, the oscilloscope will enter the waiting, so it will show "card change". All oscilloscopes in the world will change their cards when measuring 50Hz signals, not because the oscilloscope itself is stuck

13: Why is the peak value of VPP more than 600 V and not 220V or 310V when measuring the voltage waveform of the city power?

Answer: the city power 220V is a symmetrical AC signal, the positive peak voltage (maximum value) is +310v, the negative peak voltage (minimum value) is -310v, so the peak peak value is 620V, the switching parameter is the effective value. At this time, it is often said that the voltage of 220V, the effective value of the municipal voltage fluctuates from 180 to 260V, so the peak VPP is in the range of 507-733v

14: Why is the measured voltage of 220V not a standard sine wave, there is distortion?

Answer: in the municipal power grid, there are generally pollution, and there are more high-order harmonic components. These harmonics will show a distorted sine wave and normal phenomenon when superimposed on the sine wave. Generally, the shape of the city electric wave is distorted, and it is irrelevant to the oscilloscope itself

15: Why is there a large offset between the baseline (0V) and the left arrow (0V indication) on the screen under no signal input?

Answer: first pull out the probe, then click [menu] button, navigate to [baseline calibration], then press OK, and wait for baseline calibration to complete, the baseline and arrow coincide

16: Why is the signal voltage above 5MHz measured attenuated significantly, and the bandwidth is only 5MHz?

Answer: when measuring 5MHz or more, it is necessary to move the probe to 10x gear and the oscilloscope should be set to 10x input mode, because the probe line of the oscilloscope has a capacitance of up to 100-300pf, which is a big capacitance for high frequency signal! The signal has been greatly attenuated when it reaches the input end of the oscilloscope through the probe, and the equivalent bandwidth is 5MHz. So in order to match hundreds of PF of probe line, it will be decayed 10 times at the input end of probe line (switch is in 10x), so that these hundreds of PF capacitors are just used for impedance matching. At this time, the bandwidth is 100MHz. Note that only the supporting 100MHz probe can be used

Test methods of common circuits

Battery or DC voltage measurement

Gear selection: the battery voltage is generally below 40V, other DC voltage is uncertain, so it is necessary to adjust the gear according to the actual situation. If it

is higher than 40V (both probe and oscilloscope are set to the same gear)

1: Firstly, the oscilloscope is set to auto trigger mode (auto trigger mode is default after startup), and auto trigger mode is used to test the cycle signal (DC voltage belongs to the periodic signal)

2: The oscilloscope probe multiplier is set to the corresponding gear (default is 1x after startup)

3: Oscilloscope coupling mode is set to DC coupling mode

4: Insert the probe and move the switch on the probe handle to the corresponding gear

5: Make sure the battery is powered or the DC voltage is voltage output

6: Connect the probe clip to the negative battery or the negative DC electrode, and the probe to the battery or DC positive pole

7: Press [auto] once, the DC electrical signal will be displayed. Then, look at the parameter of average value. Note that battery voltage or other DC voltage belong to DC signal, and there is no curve waveform, only a line with up and down offset, and the peak value and frequency of this signal are 0

Crystal vibration measurement

Gear selection: crystal oscillator is easy to stop oscillation after encountering capacitance. Input capacitance of 1x probe is up to 100-300pf, 10x gear is about 10-30pf, and it is easy to stop vibration in 1x gear, so it is necessary to set 10x gear, that is, both probe and oscilloscope should be switched to 10x gear (probe and oscilloscope are set to 10x gear)

1: Firstly, the oscilloscope is set to auto trigger mode (auto trigger mode is default after startup), and auto trigger mode is used to test the periodic signal (the sine signal of crystal resonance belongs to the periodic signal)

2: The oscilloscope probe multiplier is set to 10x (default is in the 1x gear after startup)

3: Oscilloscope coupling mode is set to AC coupling mode

4: Insert the probe and move the switch on the probe handle to 10x

5: Make sure the crystal board is powered on and running

6: Connect the probe clip to the ground wire of the crystal oscillator board (negative pole of power supply), pull the probe cap out, and inside it is the needle tip, which contacts one of the pins of the crystal oscillator

7: Press the [auto] button once to display the waveform of the crystal vibration tested. If the waveform after automatic adjustment is too small or too large, the waveform size can be adjusted manually by knob

PWM signal measurement of MOS tube or IGBT

Gear selection: the PWM signal voltage of direct drive MOS tube or IGBT is generally within 10v-20v, the control signal of PWM front stage is also generally within 3-20v, and the maximum test of 40V in the 1x gear is enough. Therefore, it is enough to test the PWM signal with the 1x gear (both probe and oscilloscope are set to the 1x gear).

1: Firstly, the oscilloscope is set to auto trigger mode (auto trigger mode is default after startup), and auto trigger mode is used to test cycle signal (PWM belongs to cycle signal)

2: The oscilloscope probe multiplier is set to the 1x gear (default is 1x gear after startup)

3: Oscilloscope coupling mode is set to DC coupling mode

4: Insert the probe and move the switch on the probe handle to the 1x position

5: Make sure that the PWM main board has PWM signal output at this time

6: Clip the probe to the S-pole of the MOS tube and the probe to the g-pole of the MOS tube

7: Press the [auto] button once to display the measured PWM waveform. If the waveform after automatic adjustment is too small or too large, the waveform size can be adjusted manually by knob

Signal generator output measurement

Gear selection: the output voltage of signal generator is within 30V, and the maximum test value of 1x gear is 40V, so the output of test signal generator is in the 1x gear (probe and oscilloscope are set to be 1x gear).

1: Firstly, the oscilloscope is set to auto trigger mode (the default mode is auto trigger mode after startup), and auto trigger mode is used to test the periodic signal (the signal output by the signal generator belongs to the periodic signal)

2: The oscilloscope probe multiplier is set to the 1x gear (default is 1x gear after startup)

3: Oscilloscope coupling mode is set to DC coupling mode

4: Insert the probe and move the switch on the probe handle to the 1x position

5: Make sure the signal generator is on and is outputting the signal

6: Connect the probe clip to the black clip of the signal generator output line, and the probe to the red output line of the signal generator

7: Press the [auto] button once, the waveform output by the generator will be displayed. If the waveform after automatic adjustment is too small or too large, the waveform size can be adjusted manually by knob

Measurement of domestic electricity at 220V or 110V

Gear selection: first, you need to buy 100x probe; household electric power generally 180-260V, peak peak voltage is 507-733v, the maximum measurement of 1x is 40V, the highest value of 10x is 400V, 100x is 4000V, and the default standard probe is 10x high voltage probe, and the peak value of 400V can only be measured. Therefore, 100x probe shall be provided by itself, and then set to 100x gear, that is, both probe and oscilloscope shall be switched to 100x gear

1: Firstly, the oscilloscope is set to auto trigger mode (auto trigger mode is default after startup), and auto trigger mode is used to test the cycle signal (50Hz of household electric power belongs to the periodic signal)

2: The oscilloscope probe multiplier is set to 100x (default is in the 1x gear after startup)

3: Oscilloscope coupling mode is set to AC coupling mode

4: Insert the probe and move the switch on the probe handle to 100X

5: Ensure that the tested end has a home power output

6: Connect the probe clip and probe to 2 wires of household electric power without distinguishing the positive and negative poles

7: Press the [auto] button once to display the waveform of the household electric power. If the waveform after automatic adjustment is too small or too large, the waveform size can be adjusted manually by the knob

Power ripple measurement

Gear selection: if the output voltage of power supply is below 40V, it is set to the 1x gear (both probe and oscilloscope are set to 1x gear), and 10x gear (both probe and oscilloscope are set to the same gear if they are 40-400v)

1: Firstly, the oscilloscope is set to auto trigger mode (auto trigger mode is default after startup), and auto trigger mode is used to test the cycle signal (DC voltage belongs to the periodic signal)

2: The oscilloscope probe multiplier is set to the corresponding gear (default is 1x after startup)

3: The oscilloscope coupling mode is set to AC coupling mode, note that AC AC coupling mode

4: Insert the probe and move the switch on the probe handle to the corresponding gear

5: Make sure the power is powered on and voltage output is available

6: Connect the probe clip to the negative extreme of the power output, and the probe is connected to the positive extreme of the power output, and wait for about 3 seconds. When the yellow line and the left yellow arrow position are in the same

position, wait until the position is in the same position

7: Press the [auto] button once, and the power ripple will be displayed

Inverter output measurement

Gear selection: the output voltage of inverter is similar to that of household electricity, with peak peak voltage above 500V, the highest measurement of 40V in 1X, 400V in 10x and 4000V in 100x gear. The default standard probe is 10x high voltage probe, and the peak value of 400V can only be measured at the highest. Therefore, 100x probe shall be provided by itself, and then set to 100x gear, that is, both probe and oscilloscope shall be switched to 100x gear

1: Firstly, the oscilloscope is set to auto trigger mode (the default mode is auto trigger mode after startup), and auto trigger mode is used to test the periodic signal (the signal output by the inverter belongs to the periodic signal)

2: The oscilloscope probe multiplier is set to 100x (default is in the 1x gear after startup)

3: Oscilloscope coupling mode is set to DC coupling mode

4: Insert the probe and move the switch on the probe handle to 100X

5: Ensure inverter is powered on and voltage output is available

6: Connect the probe clamp and probe to the output end of the inverter without distinguishing the positive and negative poles

7: Press the [auto] button once to display the waveform of the inverter. If the waveform after automatic adjustment is too small or too large, the waveform size can be adjusted manually by knob

Measurement of power amplifier or audio signal

Gear selection: the output voltage of power amplifier is generally below 40V, and the maximum test of 40V in the 1x gear is enough (both probe and oscilloscope are set to the 1x gear).

1: First, set the oscilloscope to auto trigger mode (the default is auto trigger mode after startup)

2: The oscilloscope probe multiplier is set to the 1x gear (default is 1x gear after startup)

3: Oscilloscope coupling mode is set to AC coupling mode

4: Insert the probe and move the switch on the probe handle to the 1x position

5: Ensure that the amplifier is on and is outputting audio signals

6: Connect the probe clip and probe to the output end of 2 lines of the amplifier without distinguishing the positive and negative poles

7: Press the [auto] button once to display the waveform of the inverter. If the

waveform after automatic adjustment is too small or too large, the waveform size can be adjusted manually by knob

Measurement of vehicle communication signal / bus signal

Gear selection: the communication signal of automobile is generally lower than 20V, and the maximum test for 1x gear is 40V, so it is enough to test the vehicle communication signal with the 1x gear (both probe and oscilloscope are set to the 1x gear).

1: Firstly, the oscilloscope is set to normal trigger mode (auto trigger mode is default after startup). Normal trigger mode is specially used to measure the non periodic digital signal. If Auto trigger mode is used, it is impossible to grasp the non periodic signal

2: The oscilloscope probe multiplier is set to the 1x gear (default is 1x after startup)

3: Oscilloscope coupling mode is set to AC coupling mode

4: Insert the probe and move the switch on the probe handle to the 1x position

5: Connect the probe clip and probe to two signal lines of communication line, regardless of positive and negative. If there are multiple signal lines, you need to judge the signal line in advance, or try to select two of them for testing several times

6: Make sure that there is a communication signal on the communication line at this time

7: Adjust the vertical sensitivity to 50mV

8: Time base to 20us

9: Press [50%] once

10: When there is communication signal on the communication line, the oscilloscope will capture and display it on the screen. If it can not be captured, it is necessary to try to adjust the time base (1ms-100ns) and trigger voltage (green arrow) for multiple times

Infrared remote receiver measurement

Gear selection: the infrared remote control signal is generally 3-5v, and the maximum test for 1x gear is 40V, so it is enough to test the vehicle communication signal with the 1x gear (both the probe and oscilloscope are set to the 1x gear).

1: Firstly, the oscilloscope is set to normal trigger mode (auto trigger mode is default after startup). Normal trigger mode is specially used to measure the non periodic digital signal. If the auto trigger mode is not able to grasp the non periodic signal, the infrared remote control signal belongs to the non periodic digital coding signal

2: The oscilloscope probe multiplier is set to the 1x gear (default is 1x after startup)

- 3: Oscilloscope coupling mode is set to DC coupling mode
- 4: Insert the probe and move the switch on the probe handle to the 1x position
- 5: Connect the probe clip to the ground end (negative) of the infrared receiver board, and the probe to the data pin of the infrared receiver
- 6: Adjust the vertical sensitivity to 500mv
- 7: Time base to 20us
- 8: Turn the trigger red arrow position to the left yellow arrow position and approximately 1 large grid distance
- 9: At this time, the infrared receive hair signal is sent by remote control, and the waveform will appear on the oscilloscope

Measurement of amplification circuit with sensors (temperature, humidity, pressure, hall, etc.)

Gear selection: generally, the sensor signal is relatively weak, about a few millivolts. This small signal cannot be detected directly by oscilloscope. There is signal amplification part on the main board of this sensor. When the output end of the amplifier is found, the oscilloscope can measure the signal after being enlarged. It can be used in the 1x gear (both probe and oscilloscope are set to the 1x gear)

- 1: First, set the oscilloscope to auto trigger mode (the default is auto trigger mode after startup)
- 2: The oscilloscope probe multiplier is set to the 1x gear (default is 1x after startup)
- 3: Oscilloscope coupling mode is set to DC coupling mode
- 4: Insert the probe and move the switch on the probe handle to the 1x position
- 5: Connect the probe clip to the ground end of the sensor motherboard (negative power supply), find the output end of the amplification part, and connect the probe to the output end
- 6: Adjust the vertical sensitivity to 50mV
- 7: Adjust the time base to 500ms and enter the slow scan mode of large time base
- 8: Move baseline to bottom
- 9: If the signal line appears at the top, the vertical sensitivity shall be reduced, which is 100mV, 200mV, 500mv, etc. in turn, when the updated signal on the right starts not at the top (generally the best in the middle of the upper and lower part), the signal received by the sensor can be detected