



LASEROVÁ DISTANČNÍ PÁSKA


Ruční laserová páska
pro měření vzdálenosti

Pokyny k výrobku

• Indikátor



• Tlačítka

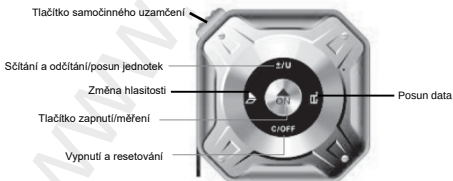

Základní operace

1. Spustíte přístroj a zavřete jej

Stiskněte klávesu $\blacktriangle$ ve vypnutém stavu, laser a přístroj se spustí současně, přístroj přejde do stavu čekání na měření.

Tento přístroj se automaticky vypíná, automatické vypnutí nastane, pokud se do 45 s neprovede žádná operace.

2. Základní měření

Jednorázové měření

Stisknutím klávesy $\blacktriangle$ spustíte laser v režimu čekajícího měření, uzamknete měřící body a poté stisknutím klávesy $\blacktriangle$ provedete jednorázové časové měření vzdálenosti, naměřený výsledek se zobrazí na hlavní indikační ploše.

Pokračujte v měření

Dlouze stiskněte klávesu $\blacktriangle$ v režimu čekání na měření a poté přejděte do stavu pokračování v měření, na hlavním ukazateli plochy se v reálném čase zobrazí aktuální hodnota měření, krátce stiskněte klávesu C/OFF a poté ukončete pokračování v měření.

3. Nastavení datového údaje měření

Krátce stiskněte klávesu $\square$, abyste zpracovali vzájemný posun mezi předním a koncovým datovým bodem návrhu, výchozí nastavení systému je koncový datový bod.

4. Nastavení jednotky

Dlouhým stisknutím klávesy $\pm/U$ zpracujete měření, můžete resetovat aktuální jednotku, přístroj poskytuje 6 typů jednotek na výběr.

Jednotka měření:

S/N	Jednotka délky
1	0,000 m
2	0,0 in (stopa)
3	0,00 stop
4	01/16 in (stopa)
5	0'00"1/16

5. Funkce vypnutí

Dlouze stiskněte tlačítko C/OFF a poté přístroj zavřete.

6. Samokalibrační funkce

Poskytuje funkci samokalibrace, která zaručuje přesnost přístroje.

Způsob kalibrace: pokračujte stisknutím tlačítka , aby se přístroj spustil ve vypnutém stavu, uvolněte tlačítko , dokud se na obrazovce neobjeví „boot“, a přejděte do režimu automatické kalibrace.

Uživatelé mohou kalibrovat tento číselný údaj pomocí klávesy  podle chyby přístroje. Rozsah nastavení je -7 ~ 7 mm.

Po dokončení nastavení uložte kalibrační údaje stisknutím tlačítka .

Popis funkce


Funkce samočinného uzamčení

Vytáhněte pásku, automaticky se uzamkne a zabrání odskoku, který by mohl poranit ruku.



Metoda měření: měření háčkem

Zahákněte měřený objekt, vlevo posuňte háček pásky a odstraňte chybu háčku pásky, použijte spodní konec háčku pásky jako nulový bod.

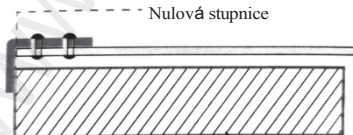

Technické parametry

Položka	
Maximální vzdálenost měření	0.05-40/60/80m
Přesnost měření vzdálenosti	±2mm
Páska	5m
Automatická kalibrace přesnosti	Ano
Funkce pokračování měření	Ano
Výběr jednotky měření	m/in/ft
Měření plochy a objemu	Ano
Hlasové upozornění	Ano
Typy laserů	650nm<1mW Level 2, 650nm<1mW
Automatické vypnutí laseru	15s
Automatické vypnutí	45s
Maximální provozní životnost baterie	5000 měření
Rozsah pracovních teplot	0°C~40°C/32~104°F
Teplota skladování	-20°C~60°C/-4~104°F
Velikost	73*73*40

Dodavatel/Distributor

Sunnysoft s.r.o.
Kovanecká 2390/1a
190 00 Praha 9
Česká republika
www.sunnysoft.cz




LASER **DISTANCE TAPE**


**Manual laser distance
measurement tape**

Product instruction

• Indicator

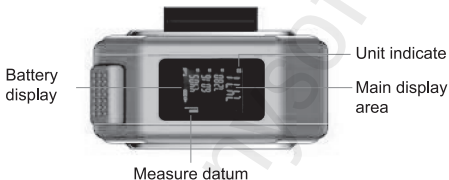

• Keys

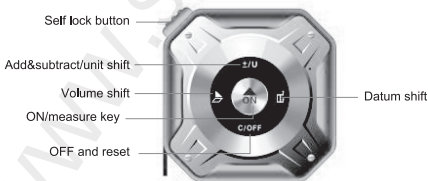

Basic operations

1. Start instrument and close instrument

Press **ON** key under the power off status, laser and instrument start at the same time, the instrument enter into waiting measure status.

This instrument is automatic power off, automatic power off if no operation within 45s.

2. Basic measurement

Single time measurement

Press **ON** key to start laser under waiting measure mode, lock measure points then press **ON** key to process single time distance measurement, the measured result display on the mainly indicate area.

Continue measurement

Long time press **ON** key under waiting measurement mode then enter into continue measurement status, the mainly indicate area real time display the current measurement value, short time press C/OFF key then withdraw the continue measurement.

3. Measurement datum setting

Short time press **↔** key to process the mutually shift between design front datum and end datum, system default as the end datum.

4. Unit setting

Long time press **±/U** key to process measurement, can reset current unit, the instrument provided 6 types units for choice.

Measurement unit:

S/N	Length unit
1	0.000m
2	0.0in
3	0.00ft
4	01/16in
5	0'00"1/16

5. Power off function

Long time press C/OFF key then instrument closed.

6. Self calibrating function

Provide self calibrating function to guarantee precision of instrument.

Calibrating method: continue press  key to start machine under power off status, loose  key till the screen occur "boot" and enter into automatic calibrating mode.


The users can calibrate this numeric by  key according to the error of instrument. The adjustment range is -7~7mm.

Press  key to save the calibrating data after adjustment finished.

Function description


Self lock function

Pull out tape band, automatically lock and avoid rebound to hurt hand.

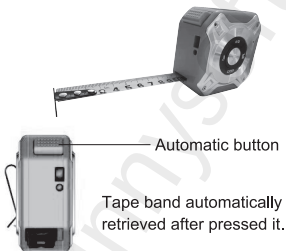

Measure method: hook measurement

Buckled the measured body to measure, left move the tape hook and remove the tape hook error, use the bottom end of tape hook as zero point.

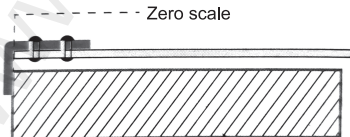

Technical parameters

Item	
The max measure distance	0.05-40/60/80m
Measure precision of distance	±2mm
Tape	5m
Automatically calibrate the precision	Yes
Continue measurement function	Yes
Select measurement unit	m/in/ft
Area and volume measurement	Yes
Voice reminding	Yes
Laser types	650nm<1mW Level 2, 650nm<1mW
Automatically cut off laser	15s
Automatic power off	45s
The max working life of battery	5000 times (single time measurement)
Working temperature range	0℃~40℃/32~104 ℉
Storage temperature	-20℃~60℃/-4~104 ℉
Profile size	73*73*40