


Felhasználói kézikönyv

M330

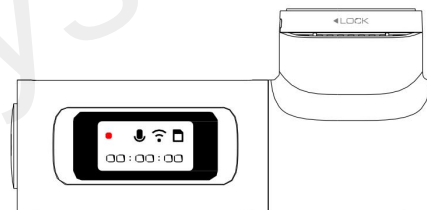

AZDOME

www.azdomes.com

Élvezze az okos életet

Index

1. Ügyfélszolgálat	2
2. Fontos biztonsági tudnivalók.....	3
3. A dobozban.....	5
4. Műszaki adatok.....	6
5. Termékdiagram.....	7
6. Kezdő lépések	9
7. Telepítés.....	11
8. videó okostelefon használata	14
9. Általános beállítások	23
10. számítógép használata.....	30
11. Firmware frissítés.....	31
12. Hangutasítások.....	33
13. GYAKRAN FELTETT KÉRDÉSEK.....	33
14. Értesítések	35

1.Ügyfélszolgálat



service@azdome.hk

Válasz mindössze 12 órán belül



Jegyzet:

1. A műszerfal használatához U3 -as microSD-kártya szükséges

(nem része a szállításnak). Az első alkalommal formázza meg

a microSD-kártyát a műszerkamerával együtt.

hatalomkártya, amely a kondenzátor van beépítve a (tárolásra használt

kártya

2.Fontos biztonsági információk

hogyan megvásárolta ezt az AZDOME műszerfalat.

Ez a felhasználói kézikönyv információkat tartalmaz arról, hogyan kell irányítani a műszerkamerát.

használja a műszerfalat a ezt az útmutatót, megfelelő használat érdekében.

A termék teljesítményének javítása érdekében a tartalom ingyenes

- Ne szerelje szét és ne javítsa saját maga a terméket . ne szerkessze.

Ez tűz, áramütés vagy meghibásodás. szolgáltatásért
azért van ellenőrzés és javítás

- Ha idegen tárgy kerül a termékbe, azonnal húzza ki a tápkábelt.

a szolgáltatáshoz és kérjen javítást.

- Vezetés közben állítsa be a terméket.

Ez egy baleset. állítsa le vagy állítsa le a járművet a termék felszerelése és beállítása közben

- Ne telepítse a terméket olyan helyre, ahol zavarhatja a vezető látóterébe.

Ez egy baleset.

- Ne használjon sérült vagy módosított tápegységet. kábel. Csak a gyártó által szállított kábeleket használja.

A sérült vagy módosított tápkábel robbanást, tüzet vagy hibás működést okozhat.

- Ne kezelje a terméket nedves kézzel.

Ez áramütés.

-Ne telepítse a terméket magas páratartalmú környezetbe, ill gyúlékony gázok vagy folyadékok.

Ez robbanást és/vagy tüzet okozhat.

- Ne hagyja a terméket csecsemők, gyermekek vagy háziállatok közelében. állatokat. Fennáll a veszélye a kis és/ vagy lenyelésnek

nyáluk a termékre kerül, ami rövidzárlatot okoz. robbanás.
be

-Az autó belsejének tisztítása során ne permetezzen vizet vagy viaszt közvetlenül a terméken.

Azt tűz, áramütés vagy meghibásodás.

- Ha a tápkábel füstöl vagy szaga van szokatlan szagú, azonnal húzza ki a konnektorból.

Forduljon a szervizközponthoz vagy a forgalmazóhoz.

- Tartsa tisztán a tápkábel érintkezőit.

IN megtörténni és tűz.

- Használja a megfelelő bemeneti feszültséget.

IN robbanás, tűz vagy meghibásodás léphet fel.

- Csatlakoztassa szorosan a tápkábelt, hogy ne lehessen húzni.

könnyen leválasztható.

IN tűz keletkezhet.


- Ne takarja le a terméket semmilyen anyaggal.

Ez a termék deformálódását vagy tüzet okozhat. Termék és
kerületi használd tovább


3. A dobozban

az alábbi elemek
műszerfalának felszerelésével.

mindegyikhez



kamera ×1



Elektrosztatikus fóliák x2



C típusú autós töltő 3,5 m-es
kábelrel × 1



Kábelbilincsek x 5
x 1



Felhasználó

x 1




Jegyzet:

1. A termék teljesítményének javítása érdekében a jelen
nélkül

4. Műszaki adatok

Modell	M330
Nyílás	F=1,8
Szín	fekete
Nyelv	/ japán / német / francia / spanyol / olasz /
Memóriakártya	Micro SD kártya Class 10, U3 sebesség, maximális támogatás 128 GB (nem tartozék)
Videó kód	H.264
Fotó formátum	JPG
Videó tömörítés Rezsím	MP4
Videó felbontás	1920 x 1080P 30 képkocka másodpercenként
WiFi	Beépített
Akkumulátor	Beépített szuperkondenzátor
Teljesítmény interfész	5V/1A
Üzemi hőmérséklet	-20°C és 70°C között (-4°F és 158°F között)


5. Termékdiagram

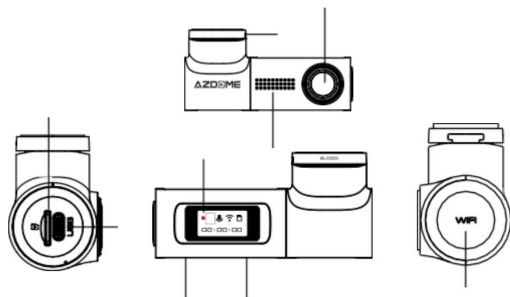

#	Leírás
1	db matricatartó
2	Lencse
3	Micro-SD kártyanyílás
4	USB Type-C töltőport
5	WiFi kulcs Rövid megnyomás: Dupla kattintás: Hosszú megnyomás (3 mp): Videó zárolása Hosszan lenyomva (8 másodperc): Formázás és alapértelmezett beállítások visszaállítása.

kártya és

6	Hangszóró
7	0,96 hüvelykes kijelző
8	Mikrofon
9	Reset gomb

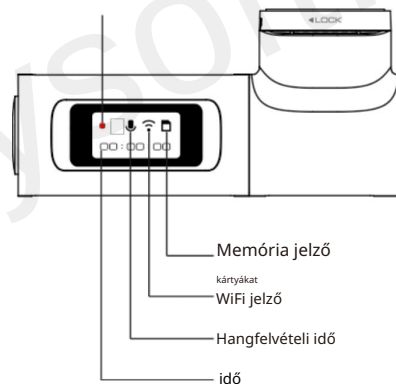

Jegyzet:

Normál felvétel közben az óra látható, míg
Vészhelyzeti felvétel közben a videó szegmens rögzítési
hossza jelenik meg.

	Szín	Állami
REC	 Blinging	Normál videó rögzítése
	 Blinging	Rögzített videó rögzítése

6. Kezdjük

A fényképezőgépet úgy tervezték, hogy automatikusan bekapcsoljon és rögzítsen, amint hatalmat kap. Ezután automatikusan menti a videót kikapcsolja a jármű leállítását.

1. Automatikus be-/kikapcsolás:

Dugja be az autó konnektorába, és a cigaretta. Amikor a motor műszerfal automatikusan bekapcsol, és elkezd a felvételt.

A kulcs LOCK állásba fordítása után a felvétel automatikusan mentésre kerül és kikapcsol.

2. Kézi be-/kikapcsolás

bekapcsolás: egyszer tápegység.
kikapcsolás: és tartsa időtartamú áramellátás
2 másodperc.




Jegyzet:

1. A műszerfal használatához U3 microSD kártya (nem tartozék) szükséges. Az első alkalommal formázza meg a kártya microSD-kártyát a műszerkamerával együtt.

2. MINDIG használd az áramellátáshoz. Mivel benne van beépített szuperkondenzátor (emlékezzon használják csak lítium fém akkumulátor o 1 mAh).
 3. A műszerfal automatikusan frissül, amikor az AZDOME APP-ba a telefonján WiFi.
 4. U teherautók/személygépjárművek a 12 V-os szivargyújtó aljzat mindig FORRÓ, azaz folyamatosan áram alatt van még kikapcsolt állapotban is, és a jármű, majd Ha az az autó
- Az ON/OFF funkció nem működik. És ha elhagyja a kamerát rögzítse, ha az autó ki van kapcsolva, akkor lemerül az akkumulátorod és lehet, hogy nem elegendő energiát ahhoz, hogy sípál beindítsa az autót. Erre a helyzetre jogorvoslat, tegyen egyet a két dolog közül:
- a műszertárat a biztosítékdobozhoz autó
- a Change automatikus kiegészítők.
- használatával a biztosítékdobozban 12 V-os aljzatok aljzatonként, amely csak energiát szolgáltat a járműből a pozícióba ACC vagy ON.

7. Telepítés


Szerelje be a kamerát mögé
mind külföldi és és szárazra telepítés
üveg.

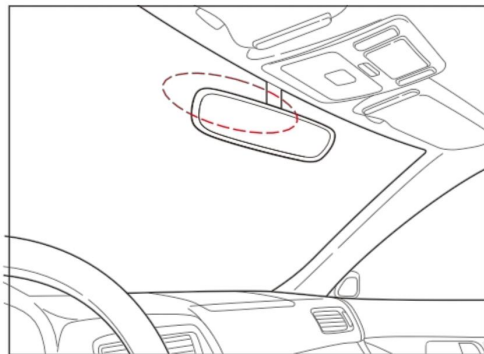

1. a helyére a kártyát a nyílásba, amíg a motor
nem kattan (használjon nagy sebességű, 10-es vagy újabb micro-SD-kártyát).

2. -on üveg alkalmas hely, amely nem akadályozza be
nézet, és meg az idegen elektrosztatikus védőréteg és
és felhelyezését
üvegmatricák, elektrosztatikus üveg matrica,
valamint a kialakulásának megakadályozása -on pohár utána

3. Húzza le a védőfóliát a kétoldalas szalagról, és állítsa be az elektrosztatikus kamera
lencséjének szögét.

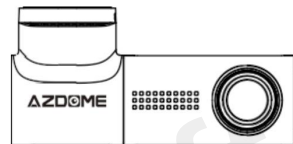


4. Csatlakoztassa a szivargyújtó
tápkábelét és

cigaretta a konnektorban
lift
tápkábel.

élek

üveg és


tápkábel.

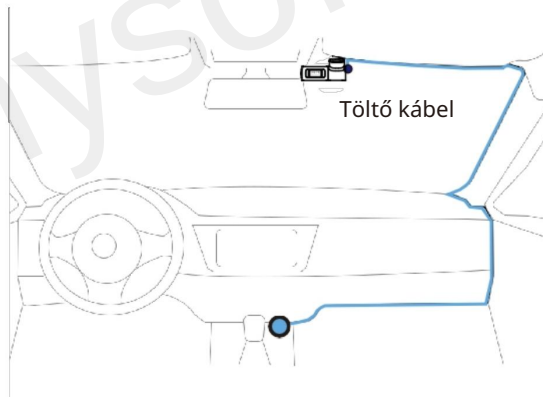

5. A kamera bekábelezés és rögzít. A videofájlok a motorkártyára kerülnek. kamera automatikusan


vel.

rögzíti és kikapcsol

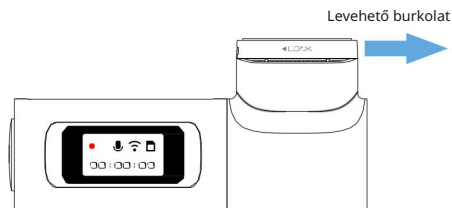

8. Videofájl lejátszása a segítségével

8.1 Valós idejű videó ellenőrzése okostelefon segítségével

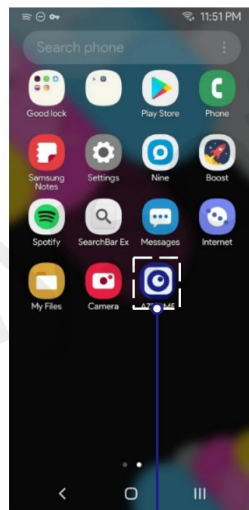

1 Keresse meg az AZDOME-ot


alkalmazások a Google Play áruházban vagy Apple App Store és telepítse a sajátjába okostelefon.

Download on the
App Store




GET IT ON
Google Play



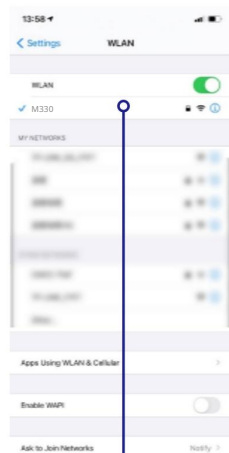


2

Lépjen a Telefonbeállítások > WiFi > Válassza a Dash Cam WiFi lehetőséget. A WiFi-hez való csatlakozás után megjelenik a „Nincs internetkapcsolat” üzenet, ami normális volt. Mivel a dash cam WiFi-je CSAK videó-/fényképtovábbítási funkcióra szolgál, NEM felhőn vagy interneten keresztül sugározhat felvételeket, kérjük, hagyja figyelmen kívül ezt a felszólítást.

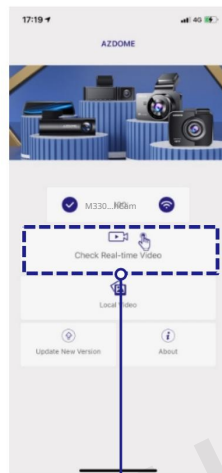

3


Az M330 dash cam modell akkor jelenik meg, ha sikeresen csatlakozik. Nyomja meg a „Check Live Video” gombot az élő videó előnézetének megtekintéséhez.

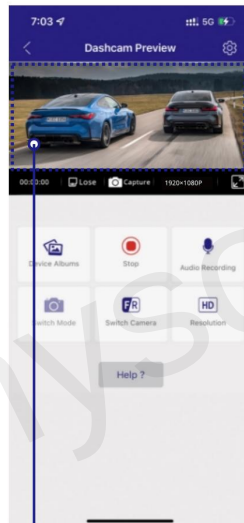

4

Most nézze meg a rögzített videóit valódi után okostelefon

Wi-Fi Direct.

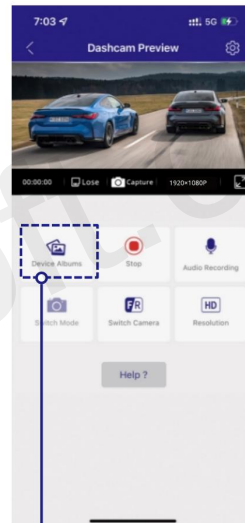


5


Kérjük, először állítsa le a felvételt, majd küldje vissza az albumot.

a Photo, Video, Emergency Files beszerzéséhez.

8.2 Videófájlok letöltése okostelefonjára

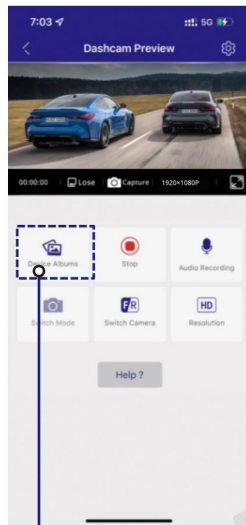


Lépjön a dash cam előnézeti felületére. Először állítsa le a felvételt, majd nyomja meg az „Eszközalbum” gombot a fényképek, ”videók és vészhelyzeti fájlok letöltéséhez.

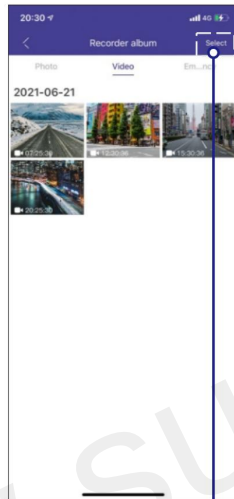

Válassza ki az okostelefonra letölteni kívánt videófájlokat



A videófájlok letöltéséhez nyomja meg az ikont. Egy videófájl letöltése azonban eltart egy ideig.

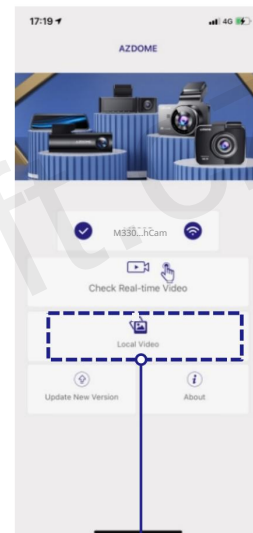

Ezután ezeket a letöltött videófájlokat megtalálhatja az eredeti APP felület „Downloaded File” nevű menüjében .

Az alkalmazás nem jelenít meg élő videót a telefonon. Megjeleníti csak egy kép a strandról?

A mobil adatforgalom nem jelenít meg élő videót, mobil adatátvitel „AZDOME” be van kapcsolva. hogy az élő videó nem jelenik meg. Ha az APP a telefonját. hogy a helyi „AZDOME” be van kapcsolva.

1. iOS esetén: „Vezeték nélküli adatok”
Válassza a „WLAN” lehetőséget.

-on

2. Régebbi iOS esetén: Beállítások>AZDOME>Letiltható
"Mobil adat".

Jegyzet:

1. WiFi Direct funkció a telefon 2. okos
az AZDOME APP-hoz automatikusan frissül
után és 3. WiFi 10 méteren belül.
AZDOME elérhető magasabb vagy iOS Android 5.0 és
9.0 és újabb.

Mi az a WiFi funkció?

A WiFi funkciót úgy alakították ki, hogy használhassa a műszerfalat párosítsa okostelefonjával, és azonnali használatot biztosít rögzíteni a műszerkameráról. Itt könnyű böngészni, Tölts le és ossza meg videóit családjával. mintha te Bluetooth hangszóró vezetékek nélküli okostelefonhoz zene, az autós műszerkamerák is WiFi jelet használnak (Bluetooth helyett) az okostelefon és az AZDOME párosításához M330.

Megnézhetek távolról videókat az autóm körül?

NEM. Az AZDOME M330 műszerfal NEM sugárzásra alkalmas felhő vagy internet. Ez NEM felhasználható.

sem IP kamera, és NEM lehet élő videót A műszerkamera APP-ban, és 10 láb hatótávolságot kapni a műszerfaltól. ha be

Mi a WiFi hatótávolsága?


A WiFi jel hatótávolsága 10 láb, ha nem olyan, mint az otthoni nincs, WiFi, akkor a WiFi hatótávolsága 10 láb-otthonon kívül nincs WiFi jel, ez a kicsi tól van

Android telefonokhoz:


Az AZDOME alkalmazás telepítése során a rendszer "alkalmazáshasználat" előugró kérti fogja: válassza ki a lehetőséget ablakok, amelyek lehetővé teszik az alkalmazás számára, OTTHON hogy hozzáférjen ennek helyéhez és válassza ki a fényképek „Engedélyezze” az AZDOME alkalmazást az Ön és a média beállítását készülékén

Első alkalommal muszáj lesz még egy lépés.
Után a WiFi hálózatra Az M330 a „No

Internet”. Ami körülbelül 10-15 másodpercen belül van, amíg nem jeleníti meg az alábbi előugró ablakot vagy értesítést. koppintson a másodperceken belül megjelenő felugró értesítésre, és válassza a folytatást akkor is, ha nem elérhető nincs internet elérhető. Miután kiválasztotta ezt a lehetőséget, OK

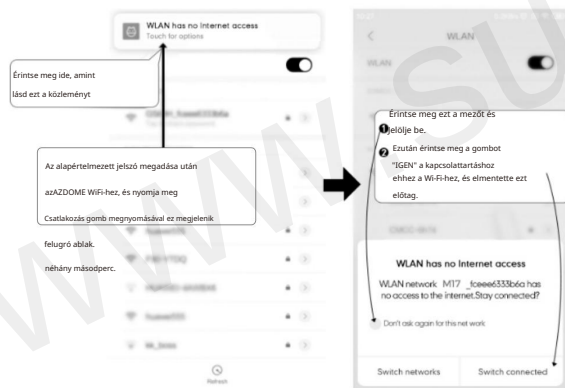

iPhone készülékekhez:

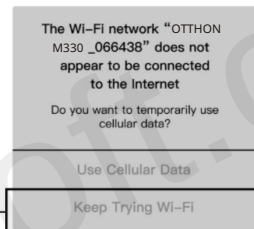

Ha ezt az ablakot látja iPhone-ján, használja WiFi funkciót, érintse meg a lehetőséget a WiFi tesztelés alatt a kamera megszakad WiFi-ról, és akkor el kell felejtene az AZDOME-ot WiFi, majd működőhogy újra párosítsa


8.3 A Micro-SD kártya formázása

Két Micro-SD kártyaformátum létezik

1. Nyomja meg és tartsa lenyomva a WiFi gombot 8-nál hosszabb ideig másodpercig, és visszaáll a gyári beállításokra és formázza a kártyát. A formázás után egy üzenet jelenik meg a képernyőn a dash cam 2 WiFi-jéhez való csatlakozásról.

AZDOME APP, majd az -on alkalmazás előnézeti oldal felső sarkában a lap valódi formázási beállítások a jobb oldalon hol talál

9. Általános beállítások

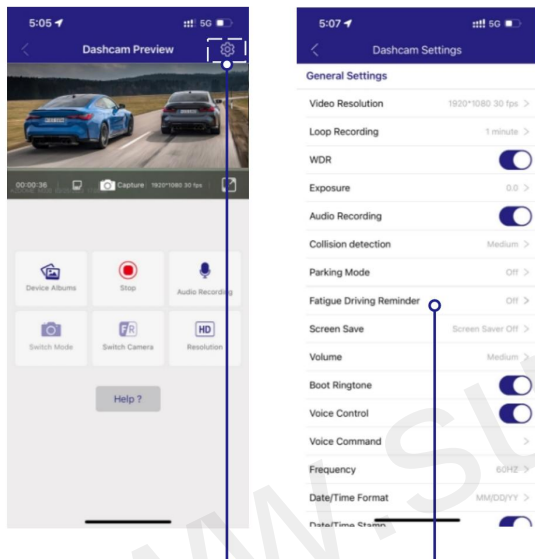

Lépjön az előnézeti felületre dash cam először állítsa le a felvételt, majd nyomja meg a beállítások ikont.

Válassza ki, mit szeretne beállítani.

9.1 Videobeállítások

Videó felbontás

A kamera videofelbontása 1920 x 1080P 30 képkocka/másodperc.

Hurokfelvétel - 1 perc/ 3 perc (alapértelmezett)/ 5 perc

Percben történő rögzítéshez válassza ki az egyes videóklipek hosszát (1/3/5 egy műszerkamera. felvétel bekapcsolva hogy a kártyák után

A műszerfal automatikusan törli a legrégebbi fájlokat helyet adott az új felvételeknek. Ez azt jelenti, hogy a felvételnél anélkül hogy

WDR - be (alapértelmezett)/ki

A WDR a "Wide Dynamic Range" rövidítése, ami azt jelenti

A kamera vagy a kijelző képes kezelni a nagy jeleneteket a fényerő és a kijelző különbségei sötétben és területeken.

Expozíció --3.0/ -2.0/ -1.0/ +0.0 (alapértelmezett)/ +1.0/ +2.0/ +3.0

Módosítsa a videó megvilágítási beállításait ízlése szerint. vagy sötétebb videó

Hangfelvétel - be (alapértelmezett)/ki

A műszerkamera rendelkezik mikrofon hang és videó rögzítéséhez. Videofelvétel Az Off opció kiválasztásával némítás.

G-érzékelő - Ki / Alacsony / Közepes (alapértelmezett) / Magas

A G-szenzor egy fizikai ütközésérzékelő gyorsulásmérő és kapcsolja be a műszer kamerát. Egyszer G-érzékelő be fizikai

vagy kapcsolja be a kamerát, az aktuális videofájl lesz
vészfájlként, hogy ne legyen funkció
ciklus Minél nagyobb a G-érzékelő érzékenysége, annál kisebb
teljesítménye lesz hogy automatikusan védje a fájlt.

Parkolási mód

Ez a funkció CSAK akkor működik, ha a 3-Lead Hardwire Kit telepítve
van. Ez a parkolási mód rendelkezik
-on opciók.



Jegyzet:

Ennek az új funkciónak a használatához egyedi tervezésű JYX05 Type-C 3-Lead
Hardwire Kit szükséges. Nem az Amazonon: JYX05 csomagolás,

[Type-C 3-Lead Hardwire Kit ehhez](#)

[M330 műszerfal](#)

*Kapcsolódó parkolási mód:

- Amikor leállítja a motort, és a videofelvételi Majd
fényképezőgép LEÁLL pozícióba, és automatikusan rögzít 1
módba képkocka/mp sebességgel.
- Ha eltalálja az autóját, és az ütközés eléri a készletet
G-szenzor, kamera felvétel 1 perc folyamatos
videót, elmenti és zárja ezt a videót az Események mappában, majd visszatér ide
1 fps felvétel.
- Most, amikor legközelebb elindítja a járművet, a kamera automatikusan bekapcsol
parkolási mód. Aztán automatikusan hogy
normál video módban, és elindul videofelvétel.

* Parkolási mód ütközésérzékelővel:

- Amikor leállítja a motort, és pozicionálni Majd
a fényképezőgép LEÁLL videofelvétel és módba
ütközésérzékelés, és a kamera kikapcsol.
- Amikor a kamera ütközésérzékelő módban, ha
eltalálja az autóját, és az ütközés eléri a készletet G-
érzékelő, a kamera bekapcsol > ekkor rekord 1 perc
folyamatos videót, elmenti és zárja ezt a videót az Események mappában, majd a
kamera kikapcsol.
- a kamera automatikusan visszatér a jármű következő indításakor
normál video módba, és indítsa el a videókat. felvétel

*Normál parkolási felvételi mód:

- Amikor leállítja a motort és pozicionálni
A kamera fog normál felvételnél.
- Most a kamera ütközésérzékelő módban, ha
nekiütközik az autónak, és ha az ütközés eléri a beállított G-szenzort, a kamera
zárja az aktuális videoklipet, és ezt a videót az Események mappába
zárja, majd a kamera
normál felvételnél.

Vezetési fáradtság emlékeztető - ki (alapértelmezett)/ 2H

Amikor aktiválja ezt a funkciót, a műszerfal 2 óránként hangjelzést ad, jelezve, hogy
fáradt. maradsonment

Képernyővédő – képernyővédő
kikapcsolva (alapértelmezett)/képernyő kikapcsolva 1 perc után

Képernyő kikapcsolva: Ez a képernyő mindig bekapcsolva lesz.
Képernyő kikapcsolása 1 perc után: A képernyő 1 perc
után kikapcsol .

Hangerő - Ki / Alacsony (alapértelmezett) / Közepes / Magas
Ez a hang funkció készlet kötet
kamera hangszóró belső
hangereje.

Indítási csengőhang - Be (alapértelmezett)/Ki
Ez a kamera be/ki meghívott
funkció.

Hangvezérlés - be (alapértelmezett)/ki

Csak a felvétel WiFi bekapcsolása, kép, kikapcsolás
támogatja, WiFi kikapcsolva, felvétel, videókat

 Jegyzet:

hogya a hangvezérlés funkció 90%-os és
aktiválásához be

környező Tehát ha ez a funkció
deaktiválja az AZDOME APP beállítás menüjében.

Hangutasítás

Mondja de csak az angolt támogatják
azt, hogy • A Wi-Fi bekapcsolásához, [Kapcsolja be a WiFi-t](#)

• A Wi-Fi kikapcsolásához [kapcsolja ki a WiFi-t](#)

• Fénykép készítéséhez válassza a Kép készítése lehetőséget

• Az aktuális videofájlok zárolásához, videó.

Zár

• Felvétel elindításához, • Felvétel
leállításához, • Képernyőhöz,

[Felvétel megnyitása](#)

[Kapcsolja ki a felvételt](#)
[Nyissa meg a képernyőt](#)

• A képernyő kikapcsolásához

[Kapcsolja ki a kijelzőt.](#)

Frekvencia - 50 Hz / 60 Hz (alapértelmezett)

Itt kell kiválasztani a frekvenciát a tápegység specifikációjának megfelelően
használja az Ön országában, az Ön tartózkodási helyén.

Dátum/idő formátum

Ez a funkció

válassza ki a dátumformátumot.

9.2 Videobélyegek

Dátum/idő

Kapcsolja be/ki a dátum/idő megjelenítését a rögzített fájlokon.

LOGO

A feltöltéskor megjelenő AZDOME logó bélyegző be- és kikapcsolása
fájlokat.

Modell

A feltöltött képeken megjelenő modellbélyegző be- és kikapcsolása
fájlokat.

9.3 Beállítások

rendszer mint

szinkronizálás

Szinkronizálás

telefon ezzel az M300 műszerfal kamerával.

www.sunnysoft.cz

Ingyenes tárhely

Tekintse meg a memóriakártyán fennmaradó helyet.

SD-kártya formázása

A formázási folyamat biztosítja, hogy a fájlrendszer formátuma megfelelő legyen kártya a kamerához van optimalizálva.



Jegyzet:

Megjegyzés: A stabil teljesítmény érdekében cserélje ki a kártyát minden 1-2

formátum

WiFi név

Itt
név: M300_***** WiFi név az APP-ban, az alapértelmezett érték

WiFi jelszó

Itt
12345678. WiFi jelszó az APP-ban, alapértelmezett jelszó:

Alapértelmezett beállítások

Állítsa vissza a műszerfal alapbeállításait. A rekordjaid nem fognak

Firmware verzió

Itt
ellenőrizze a firmware aktuális verzióját
van telepítve a kamerába. Ezt az információt megtalálja a
a jövőben ellenőrizze, hogy elérhető-e

firmware verzió.

10. Videóájl lejátszása a segítségével

1. microSD kártya a műszerkamerából.

2. Helyezze be a kártyát microSD kártyák és neki gróf.

3. Attól függően merevlemezeket
hogyan meg tudjam találni flash meghajtó meghajtóként

"D", "E" vagy más néven. Miután megkereste a meghajtót,
kétszer és megkapod az alkatrészekhez melyik


Normál, Esemény és Fénykép mappa. Normál A normál felvételi mód a
videófájlokat a tárhelyükre menti. Esemény Eseményrögzítés módban a
videóájl a következő lesz melyik be


törlésével a felvételi funkció használatával és PhotoEz az
tároló mappa fényképeket.

Ha videókat akarsz kattintson duplán az n-re.

használat VLC Media Player, amely ingyenesen

letölthető: www.videolan.org.

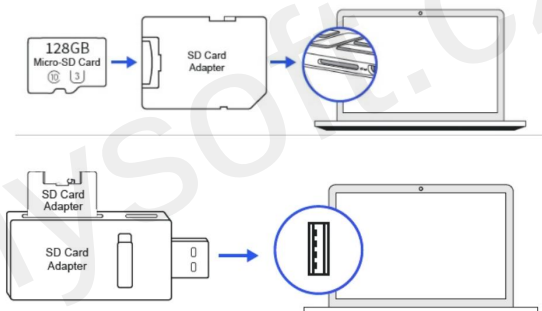

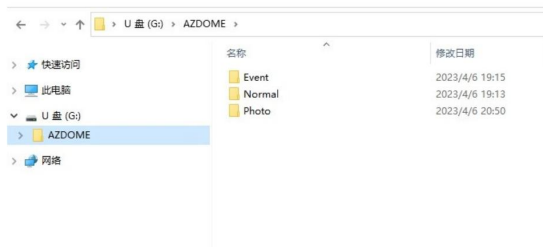


Fájl neve *****.MP4 = Videofájl innen

műszerfal büttyök

11. Firmware frissítés

1. microSD kártya a műszerkamerából.
2. Helyezze be a kártyát microSD kártyák és őt a számítógéphez.

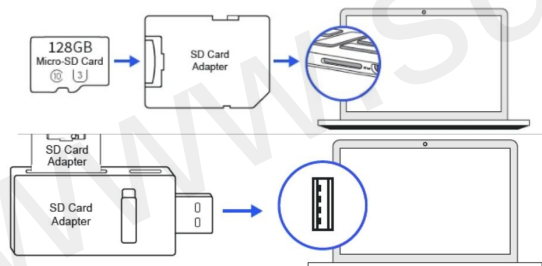

3. te M330 firmware a www.azdomes.com webhelyről

> Támogatás > Letöltött fájlok a számítógépen.

4. Csomagolja ki a letöltött firmware-t (Zip fájl), és másolja ki a fájlt

"*****.bin" nevű firmware-t a kártyára

microSD.

5. kamerát a be a kocsiba és folyamat

firmware frissítéséhez. Látnia kell egy folyamatjelző sávot

frissítést, ami az M330 műszerfalat jelenti

frissíti az új firmware-t.

Firmware frissítés legfeljebb 1 percet vesz igénybe. Kérem

hogy firmware frissítés nem történik meg

az áramellátás leválasztása. A firmware frissítése után a fényképezőgép

automatikusan kikapcsol.

6. firmware verzió kapcsolja be és jelentkezzen be

APP beállítások > Firmware verzió.

12. Hanqutasítások

Gyors hang	Leírás
Vészhelyzeti videó	felvétel, amint a G elindul érezkelő
WiFi BE	Alapértelmezett BE, bekapcsolás után azt
WiFi kikapcsolva	Nyomja meg és tartsa lenyomva Fi 3 másodpercre kikapcsol, Wi-to.
Memóriakártya hiba	Rossz/rossz/hamis memória kártya
Indítsa el a felvételt	Az alkalmazás meghívott bekapcsolása és/vagy futtatása után azt
A rögzítés leállt Vezérlés	alkalmazás, azt
Úgy hangzik, mint "kattintás"	kép az alkalmazás segítségével, neki
Sikeres formázás Sikeres formázás	kártyákat
A formázás nem sikerült	Formázás kártyák vannak sikertelen
A parkolási mód be van kapcsolva	A parkolási mód be van kapcsolva
A parkolási mód ki van kapcsolva	A parkolási mód ki van kapcsolva

13. A LEGBIZONYOSBB KÉRDÉSEK

Q1: A kamera automatikusan be/ki kapcsol?

hogy a kimenő áramot az
a miénk autóból.
elérje az 5V/1A-t, és használja

2. kérdés: A videó kép elmosódott?

védőfólia és
üveg zsírmentes,
és
hogyan

3. kérdés: A kamera felfelemelegszik?

Normális, hogy a kamera felforrósodik használat közben. Mivel a videó nagy sebességgel készül, a műszerfal felforrósodhat használat közben. (legfeljebb 158°F/70°C).

4. kérdés: A videofájlokat nem lehet lejátszani a számítógépen?

A műszerkamera videofájlok MP4 formátumúak, és előfordulhat, hogy nem kompatibilis a
ha nincs megfelelően telepítve
szoftverrel

5. kérdés: A videóknak nincs hangja?

Győződjön meg arról, hogy a „Hangfelvétel” beállítás be van kapcsolva.

6. kérdés: A videó homályos?

A Dash Cam minimális gyújtótávolsága méter. Az ennél az értéknél
közelebbi objektumok lesznek

7. kérdés: Hangutasítás Memória hiba?

Nem minősített SD-kártyák vagy kártyák használata
befolyásolja a műszerfel teljesítményét,
és a műszerfel újraindítja a felvételt. Ha
dolgozni, kb
követelményeinek megfelelő minősítésű TF kártya
dashcam felvétel. vegye fel velünk a kapcsolatot és szerezzen újat
kártya.

hegyoldal

14. Értésítés

 Ezt a terméket
európai követelményeknek
a rádió interfészhez.

 Ez a szimbólum azt jelenti, hogy a terméket nem szabad kidobni.
háztartási hulladékként, és újra kell hasznosítani az erőforrások,
az emberi egészség és a környezet védelme érdekében.

További információk a termék ártalmatlanításáról és újrahasznosításáról
elérhető a helyi önkormányzati hivatalban
at
szolgáltatások vagy in

 hol vásárolta ezt a terméket?
vagy olyan módosítások, amelyek nem
jóváhagyott
a
a megfelelés miatt vezethet
felhasználó által működtetni

Ezt a tesztelést követően megállapították, hogy megfelel a digitális B
15 FCC-szabályoknak. Ezeket a határértékeket úgy alakították ki, hogy ésszerű védelmet
nyújtsanak a káros interferencia ellen lakossági telepítés során. Ez energiát termel, használ
fel, és ha nem az utasításoknak megfelelően telepítik és használják, káros
interferenciát okozhat a rádiókommunikációban.
Nincs azonban garancia arra, hogy egy adott telepítés során nem lép fel interferencia.


Ha ez a tévé
káros interferencia a rádió vagy
amely a felhasználó ki- és bekapcsolásával
határozható meg, hogy megpróbálja kiküszöbölni az egyik interferenciát
vagy több az alábbiak közül vagy a
-- közötti antennák.
-- távolság és megkapjuk.
-- az áramkörtől eltérő aljzatba
--
Forduljon a kereskedőhöz vagy egy tapasztalt technikushoz
rádió/televízió.

Ez 15 FCC-szabály előírása. Művelet
az alábbi feltételeknek megfelelően: (1) ez nem okozhat káros
interferenciát, és (2) ennek kötelező
fogadjon el minden olyan interferenciát, amely nem kívánt működést
okozhat.
Ez az FCC expozíciós határértékei ellenőrizetlen Ezt legalább 20
cm távolságra kell felszerelni és üzemeltetni
legyen
között és az Ön Ezt nem szabad más antennával vagy antennával együtt működtetni

Elosztó
Sunnysoft sro
Kovanecka 2390/1a
190 00 Prága 9
Csehország
www.sunnysoft.cz

User Manual

M330

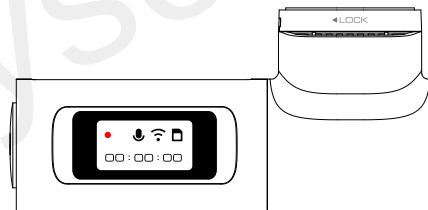

AZDOME

www.azdome.com

Enjoy Your Smart Driving

Index

1. Customer Service.....	2
2. Important Safety Information	3
3. In The Box.....	5
4. Specification.....	6
5. Product Diagram.....	7
6. Getting Started	9
7. Installation	11
8. Playing Video Files Using Your Smartphone	14
9. General Setting.....	23
10. Playing Video Files Using Your Computer	30
11. Firmware Update.....	31
12. Voice Prompts	33
13. FAQ.....	33
14. Notice	35

1. Customer Service

-  Defective or damaged item?
Inaccurate description?
Missing parts or accessories?
Performance or quality not adequate?
Wrong item was sent?

 **service@azdome.hk**
Response in just 12 hours

Contact us before returning the item.
We will help you resolve any issue asap.

Note:

1. **A U3 type microSD card (Not included)** is required to use this Dash Cam. Be sure to format your microSD card with your dash cam for the first time use.
2. Please ALWAYS connect with power when using. As it is built in Super Capacitor (Only has a 1mAh Lithium Metal Battery used to memorize time).

2. Important Safety Information

Thank you for purchasing this AZDOME dashcam.

This instruction manual contains information on how to operate your dashcam.

Before using your dashcam, we recommend that you read through this manual to ensure correct usage.

To improve the performance of the product, the contents of this manual are subject to change without prior notice.

·Do not disassemble, repair, or modify the product yourself.

Doing so may cause fire, electric shock, or malfunction. For internal inspection and repair, contact the service center.

·If any foreign matter gets inside the product, detach the power cord immediately.

Contact the service center for repair.

·Do not adjust the product while driving.

Doing so may cause an accident. Stop or park your car in a safe place before installing and setting up the product.

·Do not install the product in a location where the product can interfere with the driver's field of vision.

Doing so may cause an accident.

·Do not use a damaged or modified power cord. Only use the cords provided by the manufacturer.

Damaged or modified power cords may cause an explosion, fire, or malfunction.

·Do not operate the product with wet hands.

Doing so may cause electric shock.

·Do not install the product in an environment with high humidity, or combustible gases or liquids.

Doing so may cause an explosion and/or fire.

·Do not leave the product near infants, children, or pets.

There is a risk of them swallowing small components, and/or their saliva may get into the product, causing an explosion due to a short circuit.

·Do not spray water or wax directly onto the product while cleaning the inside of the car.

Doing so may cause fire, electric shock, or malfunction.

·If smoke or an unusual smell is emitted from the power cord, detach the power cord immediately.

Contact the service center or your distributor.

·Keep the terminals of the power cord clean.

Failure to do so may cause excessive heat and fire.

·Use the correct input voltage.

Failure to do so may cause explosion, fire, or malfunction.

·Plug in the power cord firmly so that it cannot easily be disconnected.


Failure to do so may cause fire.

·Do not cover the product with any material.


Doing so may cause external deformation of the product or fire. Use the product and peripherals in a well-ventilated location.

3. In The Box

Check the box for each of the following items before installing the dash cam.



Dash camera ×1



Electrostatic films ×2




Type-C car charger
with 3.5m/12ft cable ×1



Cable clips × 5

Pry tool × 1



User manual × 1




Note:

1. To improve the performance of the product, the contents of this manual are subject to change without prior notice.

4. Specification


Model	M330
Aperture	F=1.8
Color	Black
Language	English / 日本語 / Deutsch / Français / Español / Italiano / Русский.etc
Memory Card	Micro SD Card Class 10 , U3 Speed, Max Support 128 GB (Not included)
Video Code	H.264
Photo Format	JPG
Video Compression Mode	MP4
Video Resolution	1920 x1080P 30fps
WiFi	Built-in
Battery	Built-in Super Capacitor
Power Interface	5V/1A
Operation Temperature	-20°C to 70°C (-4°F to 158°F)

5. Product Diagram

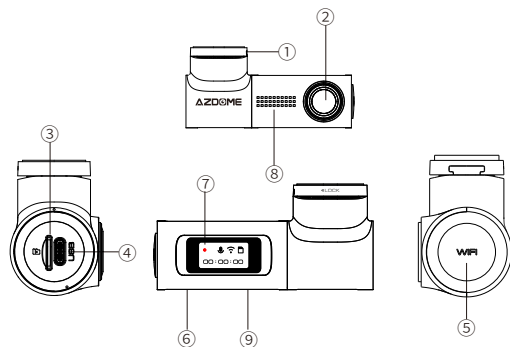

#	Description
1	Sticker mount
2	Lens
3	Micro-SD card slot
4	Type-C USB charging port
5	WiFi Key Short press: Turn on/off WIFI Double click: Turn on/off audio Long press (3s): Lock video Long press (8s): Format memory card and restore default settings.

6	Speaker
7	0.96 inch display
8	Microphone
9	Reset button

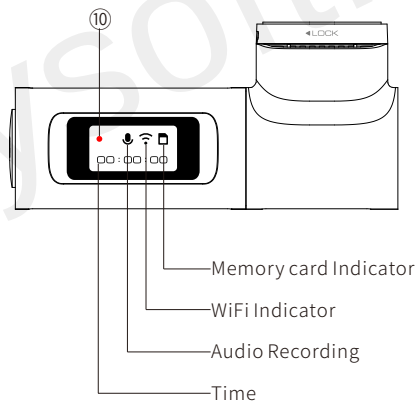

Note:

The clock is displayed during normal recording, while the recording duration of the locked video segment is displayed during emergency recording.

	Color	Status
⑩ REC	 Blinking	Recording normal video
	 Blinking	Recording locked video

6. Getting Started

The camera is designed to power up and record automatically when it receives power. Then saves the video record and turns off automatically when the car shuts off.

1. Auto Power ON/OFF:

Plug car charger to cigarette lighter socket. When the car engine is on, dash cam will turn ON and start recording automatically. When the car key is turned to LOCK position, dash cam automatically saves the recording and turns OFF.

2. Manual Power ON/OFF

Manually Turn ON: Press the power button once.

Manually Turn OFF: Press and hold the power button for at least 2 seconds.



Note:

1. A U3 type microSD card (Not included) is required to use this Dash Cam. Be sure to format your microSD card with your dash cam for the first time use.

2. Please ALWAYS connect with power when using. As it is built in Super Capacitor (Only has a 1mAh Lithium Metal Battery used to memorize time).

3. The dash cam will automatically update its time when it is connected to the AZDOME APP on a phone via WiFi.


4. Some trucks/cars's 12V cigarette outlet is always HOT, which means it provides constant power even when the car is turned off and locked. If this is the case for your vehicle, then the auto ON/OFF feature will not work. And if you leave the camera continuously recording when the car is turned off, then it will drain your car/truck's battery and you might not have enough power to start your car for next time. To remedy this situation, you can do one of the two options:

① Hardwire your dash cam to your car's fuse box with 3-Lead Auto Trigger Hardwire Kit.


② Change the connection in the fuse box for your 12V outlet to socket which only supplies power when car key is turned to ACC or ON position.

7. Installation


Install the front camera behind the rear view mirror. Remove any foreign matter and clean and dry the windshield before installation.

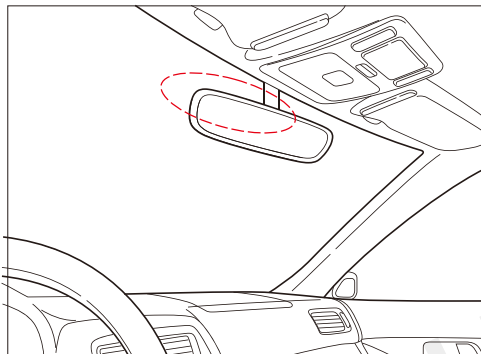


1. Turn off the engine, gently push the card into the slot until it locks into place. (Please using class 10 or above high-speed U3 micro-SD card)
2. Find a suitable place on windshield where don't obstruct the driver's field of vision and remove any foreign matter and clean and dry the windshield before installation. Tear off the protective layer of the electrostatic sticker and adhere the electrostatic sticker to the windshield to prevent mark/glue on your windshield after removing it.
3. Peel off the protective film from the double-sided tape and attach the front camera to the electrostatic sticker. Adjust the angle of the lens by rotating the body of the front camera.

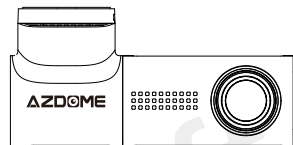

4. Plug the cigarette lighter power cable into the cigarette lighter socket and the front camera. Use the pry tool to lift the edges of the windshield trim/molding and tuck in the power cord.

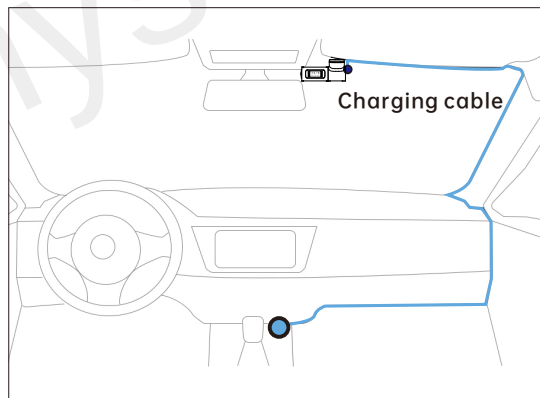


5. Turn on the engine. The dashcam will power up and start recording. Video files are stored on the microSD card. Turn off the engine. The dashcam will automatically stop recording and power down.

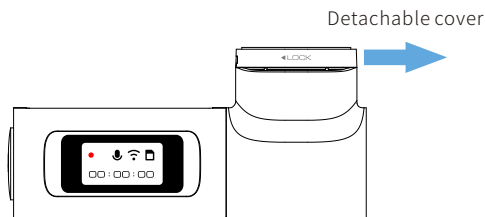


8. Playing Video Files Using Your Smartphone

8.1 Check real-time video using your smartphone

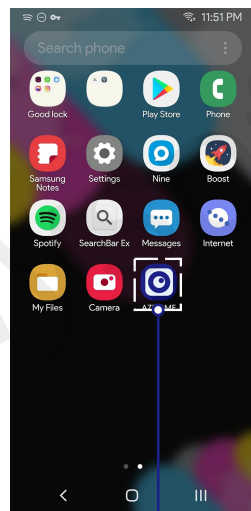


1 Search for the AZDOME app in the Google Play Store or Apple App Store and install it on your smartphone.




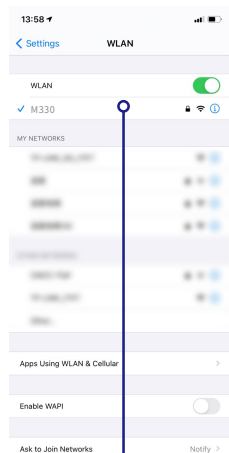


2 Go to Phone's Settings > WiFi > Select WiFi of the dash cam. After it's connected to the WiFi, it will say 'No Internet Connection' which was normal. Because dash cam WiFi is ONLY for video/photo transfer function, NOT made to broadcast footage over the cloud or internet, please ignore the prompt.
WiFi Name SSID: M330 *****
Default PASSWORD: 12345678

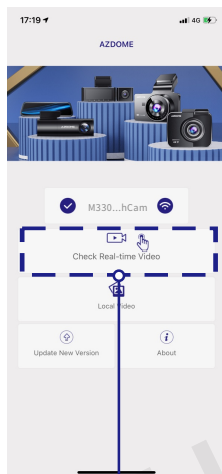

3 There will show dash cam model M330 when connect successfully. Press "Check Real-time Video" to live video preview interface.

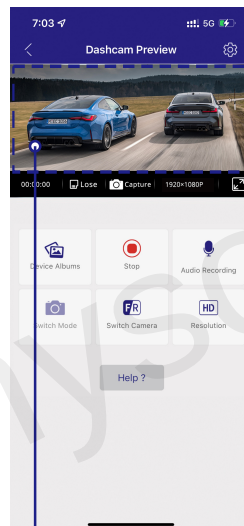


4 Now you can view the video currently being recorded real-time by connecting your smartphone to the dashcam via Wi-Fi Direct.

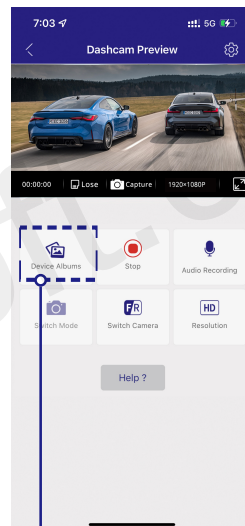


5 Please STOP recording first, then press the 'Device Albums' to get Photo, Video, Emergency files.

8.2 Download the video files into your smartphone

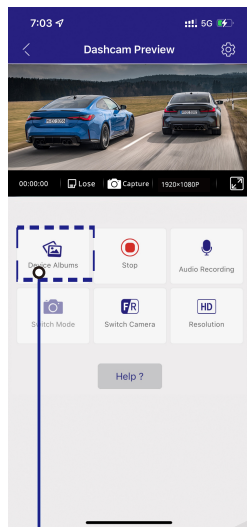


1 Go to Dashcam Preview interface. Please STOP recording first, then press the 'Device Album' to get Photo, Video, Emergency files.

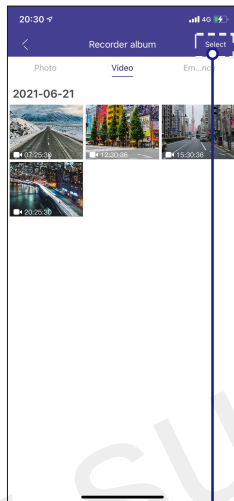

2 Select the video files to download into your smartphone.



3 Press the icon to download the video files. However, it will take a bit of time to download one video file.

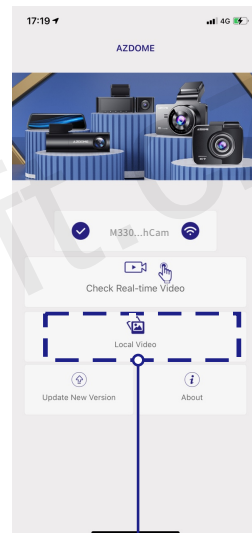



4 Then you can find these downloaded video files in APP original interface menu named 'Downloaded File'.

The app won't show the live video on your phone. It only shows a picture of the beach?

The cellular data will cause the live video not to be viewed. If the APP won't show the live video, please disable the 'AZDOME' cellular data of your phone. Sure that the Local Network of the 'AZDOME' is turned on.

1. For Latest iOS System: Setting→AZDOME→Click 'Wireless Data'→Select 'WLAN'.

2. For Older iOS System: Setting→AZDOME→Disable the 'Cellular Data'.

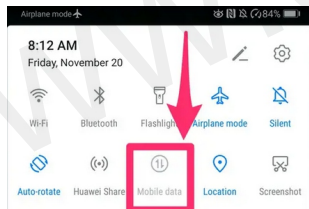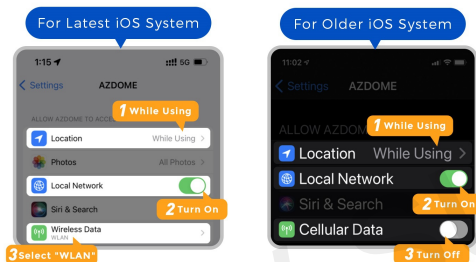

Note:

1. WiFi Direct lets you directly connect your smartphone to your dash cam via WiFi within a range of 10FT.
2. Once it is connected to the AZDOME APP it will automatically update the date/time.
3. The AZDOME is available for devices running Android 5.0 and higher, or iOS 9.0 and higher.

What is a WiFi Feature?

The WiFi feature has been designed so you can pair your dash camera wirelessly with your smartphone and access your recording instantly from the dash cam. Here you can view, download and share your videos easily with your friends and family. Just like how you would connect your Bluetooth speaker to your smartphone for wireless music play, the same way dash cameras use WiFi signal (instead of a Bluetooth) to pair your smartphone with AZDOME M330.

Can I watch the videos around my car remotely?


NO. AZDOME M330 dash cam is NOT made to broadcast footage over the cloud or internet. It is NOT a cloud or an IP camera and it is NOT meant to do that. You can get live video and footage on AZDOME dash cam's APP as long as you stay within the 10FT range from the dashcam.

What is the WiFi Range?


The WiFi signal range is about 10FT when there are NO obstructions in the middle. Please NOTE that just like your home WiFi network, you don't have WiFi signal outside your home, the same way, WiFi range is 10FT from this small device.

For Android phones:

When installing the AZDOME APP, it will have two pop-up prompts, select 'While using the APP' to allow AZDOME to access this device's location, and select 'Allow' to allow AZDOME to access photos and media on your device. There is one extra step you will have to take for the first time. Once you connect to the WiFi of M330, it will say 'No Internet'. Which is fine. Wait about 10-15 seconds until you see the below pop up or notification. You just have to tap on the pop up notification that will show up in few seconds to select that you still want to stay connected even though there is NO Internet. Once you select this OK, you are set to go.

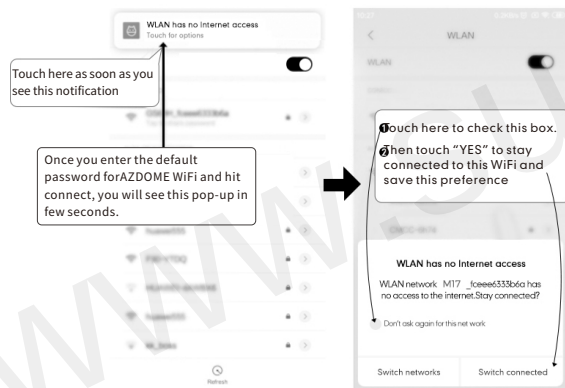

For iPhone:

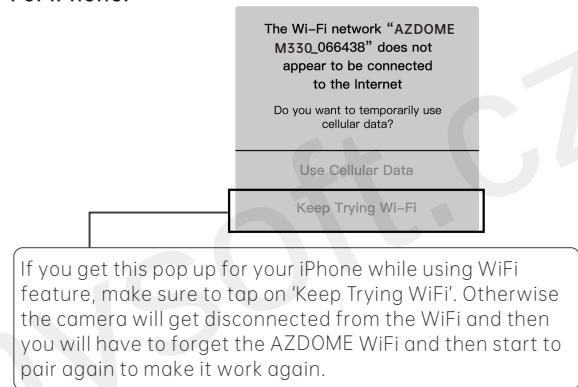


8.3 Format Micro-SD Card


There are two ways to format Micro-SD card

1. Press and hold the WiFi button for more than 8 seconds, then release it to restore factory settings and format the memory card. When formatting is successful, a message indicating success will appear on the screen.
2. Please connect to the WiFi of this dash cam through the AZDOME APP, and then click on the settings button in the upper right corner of the real-time preview page to find the formatting menu to format this memory card.

9. General Setting

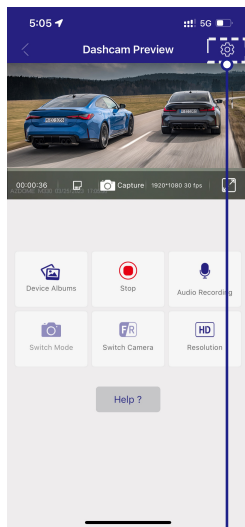

1 Go to Dashcam Preview interface.
Please STOP recording first, then press the settings icon.

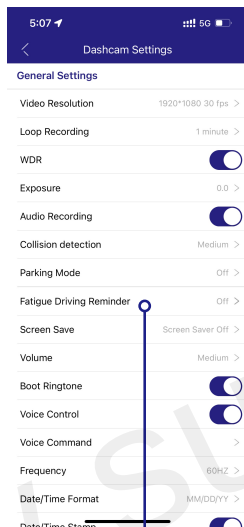

2 Select what you need to set.

9.1 Video Settings

Video Resolution

The video resolution of this camera is 1920 x1080P 30fps.

Loop Recording — 1min/ 3mins(Default)/ 5mins

Please select the length of each video clip (1/3/5 minutes) for loop recording. This function enables continuous recording on the dash cam. Please note that when the memory card becomes full, the dash cam will automatically delete the oldest files to make space for new recordings. This ensures that it can continue recording without interruption.

WDR— On(Default)/Off

WDR stands for "Wide Dynamic Range," which means the camera or display can adapt to scenes with large differences in brightness, allowing details in both dark and bright areas to be clearly displayed.

Exposure — -3.0/ -2.0/ -1.0/ +0.0(Default)/ +1.0/ +2.0/ +3.0

To adjust video exposure setting for either brighter or darker video according to your preference.

Audio Recording — On(Default)/Off

The dashcam has built-in microphone to record audio with video. You can choose to record mute video by choosing OFF.

G-Sensor — Off/ Low/ Medium(Default)/ High

G-sensor is a 3-axis impact gravitational accelerometer, designed to detect physical and gravitational forces on the dash cam. Once G-sensor has been triggered due to physical

or gravitational impact force on the camera, the current video file will be locked as an emergency file so it won't be deleted by loop cycle function. The higher the G-Sensor sensitivity is, the less force will be needed to trigger automatic file protection.

Parking Mode

This function will ONLY work when 3-Lead Hardwire Kit is installed properly. This parking mode has three options to choose from.



Note:

Custom-designed JYX05 Type-C 3-Lead Hardwire Kit is required to use this new feature. Not included in the packaging, on Amazon search: [JYX05 Type-C 3-Lead Hardwire Kit for M330 Dash Cam](#)

*Time-Lapse Parking Mode:

1. When you turn OFF the car's engine and turn the key to the lock position. Then the camera will STOP the continuous video recording and it will go into the timelapse 1fps recording mode automatically.
2. Now while this timelapse is being recorded, if someone hits your car and if the impact reaches the set G-Sensor level, then the camera will start to record 1-min continuous video, save & lock that video in Event folder > then return to the timelapse 1fps recording.
3. Now when you start your car for the next time, the camera will automatically STOP the timelapse parking mode. Then it will go into normal video mode automatically to start the continuous video recording.

*Collision Detection Parking Mode:

1. When you turn OFF the car's engine and turn the key to the lock position. Then the camera will STOP the continuous video recording and it will go into the impact detection mode and the camera will turn OFF.
2. Now while the camera stays in impact detection mode, if someone hits your car and if the impact reaches the set G-Sensor level, then the camera will turn ON > then it will start to record 1-min continuous video, save & lock that video in Event folder > then the camera will turn OFF.
3. Now when you start your car for the next time, the camera will automatically go back into normal video mode automatically to start the continuous video recording.

*Normal Recording Parking Mode:

1. When you turn OFF the car's engine and turn the key to the lock position. The camera will continue to record normally.
2. Now the camera stays in impact detection mode, if someone hits your car and if the impact reaches the set G-Sensor level, then the camera will lock the current looping video clip, save & lock that video in Event folder > then the camera will continue to record normally.

Fatigue Driving Reminder— Off(Default)/ 2H

When you activate this feature, the dash cam will beep every 2 hours to remind you if you are experiencing fatigue while driving.

Screen Save— Screen Saver Off(Default)/ Screen Off After 1-Min

Screen Saver Off: This screen will always be on.

Screen Off After 1-Min: The screen will turn off after 1 minute of inactivity.

Volume — Off/ Low(Default)/ MID/ High

This feature allows you to set the volume level for the boot sound volume, prompt volume through camera's internal built-in speaker.

Boot Ringtone — On(Default)/ Off

This feature allows you to turn ON/OFF the camera's Boot Ringtone.

Voice Control — On(Default)/ Off

ONLY support English: turn on WiFi, take picture, turn off recording, turn off WiFi, open recording, lock the video



Note:

Kindly be informed that the voice control feature has an accuracy of approximately 90%, and it may get activated unintentionally due to surrounding environmental noises. Hence, if you do not require this function, you can deactivate it from the settings menu in the AZDOME APP.

Voice Command

Say a command, but ONLY support English

- To turn on WiFi, say [Turn on WiFi](#)

- To turn off WiFi, say [Turn off WiFi](#)
- To take a picture, say [Take picture](#)
- To lock the current video files, say [Lock the video](#)
- To start recording, say [Open recording](#)
- To stop recording, say [Turn off recording](#)
- To open screen, say [Open screen](#)
- To turn of sreen, say [Turn off display](#)

Frequency — 50HZ/ 60HZ(Default)

Here you should choose the frequency accordingly to your power supply specification used in your country based on your geographical location.

Date/Time Format

Thie feature allows you to select the date format.

9.2 Video Stamps

Date/Time

Turn On/Off the Date/TimeStamp shown on recorded files.

LOGO

Turn On/Off the AZDOME logo Stamp shown on recorded files.

Model

Turn On/Off the Model Stamp shown on recorded files.

9.3 System Setting

Synchronization Time

Sync the time of the phone to this M300 dash cam.

Free Storage

Display remaining storage space on the memory card.

Format SD Card

The formatting process will make sure that the card's file system format is optimized for the camera.



Note:

Note: For stable performance, it is recommended that you format the memory card every 1-2 months.

WiFi Name

Here you can change the WiFi Name in APP, the default name: M300_*****

WiFi Password

Here you can change the WiFi Password in APP, the default password: 12345678

Default Settings


Reset the Dash Cam to default settings. Your recordings will not be affected.

Firmware Version

Here you can check the current firmware version installed on your camera. You will need this information in the future to check if newer version of firmware is available.

10. Playing Video Files Using Your Computer

1. Remove the microSD card from the dashcam.
2. Insert the card into a microSD card reader and connect it to your computer.

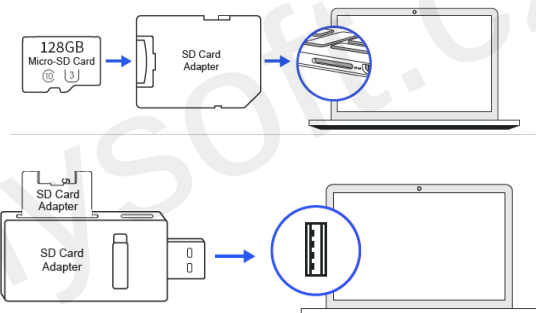

3. Depending on the pre-installed hard drives, you should be able to locate the added flash drive as drive "D," "E," or another name. Once you have located the drive, double-click it to access the file folders, which include Normal, Event, and Photo.


Normal: Normal recording mode saves video files in a loop, allowing them to be overwritten when storage space is needed.

Event: In Event recording mode, the video file will be locked and protected from deletion by the loop recording function.

Photo: This is the folder for storing captured photos.

To play the videos, simply double-click on them.


We recommend using VLC Media Player, which can be downloaded for free at: www.videolan.org.

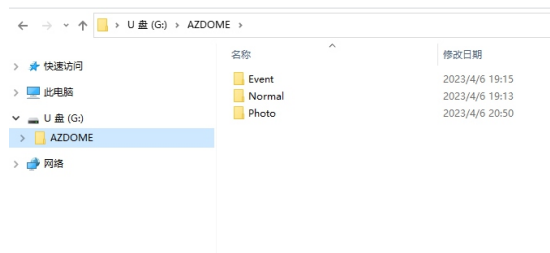

File named *****.MP4 = Dash cam video file

11. Firmware Update

1. Remove the microSD card from the dashcam.
2. Insert the card into the microSD card reader and connect it to a computer.

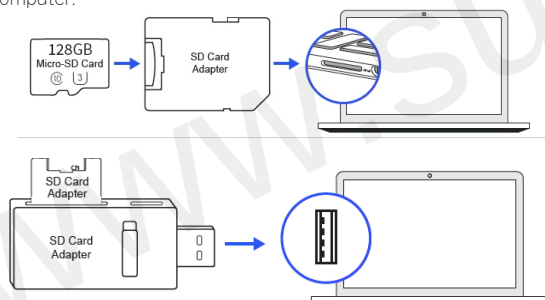

3. Download the latest M330 Firmware from www.azdomes.com > Support > Downloads on your computer.

4. Unzip the downloaded firmware (Zip file) and copy the firmware file named "*****.bin" to the root directory of microSD card.

5. Connect the camera to the car charger to start the firmware update process. You should see the upgrade progress bar which means your M330 dash camera is updating the new firmware. Please NOTE:

The firmware update may take up to about 1mins. So please be patient. Make sure the POWER does NOT get disconnected while the firmware is being updated. Once the firmware is updated, the camera will turn OFF automatically.

6. You can turn on and check the latest firmware version by going into the APP's settings > Firmware Version.

12. Voice Prompts

Prompt Voice	Description
Emergency Video	During recording once G-Sensor triggered
WiFi ON	Default ON, after powered on, say it
WiFi OFF	Press and hold Wi-Fi button for 3s to switch off, say it
Memory card error	Wrong/bad/fake memory card
Recording started	After powered on and boot ringtone /operate via App, say it
Recording stopped	Operate via App, say it
Sound as "Click"	Take picture via App, say it
Format Successfully	Format memory card successfully
Format Failed	Format memory card failed
Parking mode is on	Parking Mode has been turned on
Parking mode is off	Parking Mode has been turned off

13. FAQ

Q1: Camera turns ON / OFF automatically?

Ensure that the output current can reach 5V/1A and use our car charger.

Q2: Video Image is blurred?

Remove the protective lens film, clean the lens, make sure the windshield is clean and clear of grease, dirt, and debris.

Q3: Camera gets HOT?

It is normal for your camera to run slightly hot. Due to video being recorded at high speed, the dash cam may be hot during using. (No more than 158°F/70°C).

Q4: Video Files cannot be played on my computer?

The video files from the Dash Cam are in MP4 format and may not be compatible with your PC if suitable playback software is not installed.

Q5: Video has no sound?

Ensure that 'Audio Recording' setting is turned ON.

Q6: Video is blurred?

The Dash Cam has a minimum focal range of around 2 meters. Objects closer than this are likely to become blurred.

Q7: Voice prompt Memory Error?

Using unqualified SD or third party cards can affect dashcam's performance and in some cases, force the dashcam to reboot randomly during recording. If it still can not work normally, it should be that the TF card is unqualified and can not meet the recording requirements of the dash cam. Please contact us to get a new memory card.

14. Notice

CE This product complies with the radio interface requirements of the European Community.

X This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate and recycling helps protect natural resources, human health and the environment. For more information on disposal and recycling of this product, contact your local municipality, disposal service, or the shop where you bought this product.

FC Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.