

NFC digitální displej Bluetooth adaptér

Návod k obsluze V1.0



Režim: M8

Vážení uživatelé, děkujeme vám za zakoupení tohoto produktu. Před použitím výrobku si pečlivě přečtete tento návod k obsluze. Přejeme vám příjemný zážitek z používání.

Úvod

- Tento produkt integruje dvě funkce Bluetooth Receiving a Bluetooth Transmitting do jedné.
- Čip Bluetooth 5.0 je zařízení typu plug-and-play, které podporuje řadu zvukových zařízení.
- HD LED displej může zobrazovat pracovní režim a stav v reálném čase.
- Podpora audio vstupu a výstupu AUX 3,5 mm/RCA, podpora digitálního optického a koaxiálního vstupu.
- HD mikrofon podporuje bezdrátovou hudbu, hands-free volání a navigaci ve vozidle.
- Vestavěnou 500mAh polymerovou lithiovou baterii lze používat během nabíjení. Můžete jej použít k poslechu hudby po dobu 8-10 hodin.
- Produkt podporuje bezdrátové Bluetooth párování NFC (mobilní telefon/tablet musí podporovat funkci NFC)
- Produkt může vysílat soubory mnoha zvukových formátů na USB flash disku a TF kartě (režim příjmu/režim vysílání)
- Lze jej dálkově ovládat pomocí infračerveného signálu a zajistit efektivní vzdálenost 5~8 metrů (pouze pro verzi s dálkovým ovládáním)

Parametry

Název: NFC Bluetooth adaptér

Model: M8

Verze Bluetooth: V5.0+EDR

Frekvenční rozsah: 2400-2483,5 MHz

Frekvenční odezva: 10Hz-20KHz

Vstupní parametr: DC 5V-500mA

Hmotnost: Asi 70 g

Nabíjení: Type-C 1 hodina

Rozhraní: AUX/RCA/Optické/koaxiální

Vzdálenost: Asi 1,0 m

Baterie: 3,7V/500mAh

SNR: >90dB


Podpora periferií: USB/TF karta

Protokol: HFP/A2DP/AVRCP

Formát: MP3/WAV/WMA/APE/FLAC

Velikost: D86xŠ65xV22 (mm)

Schéma rozhraní

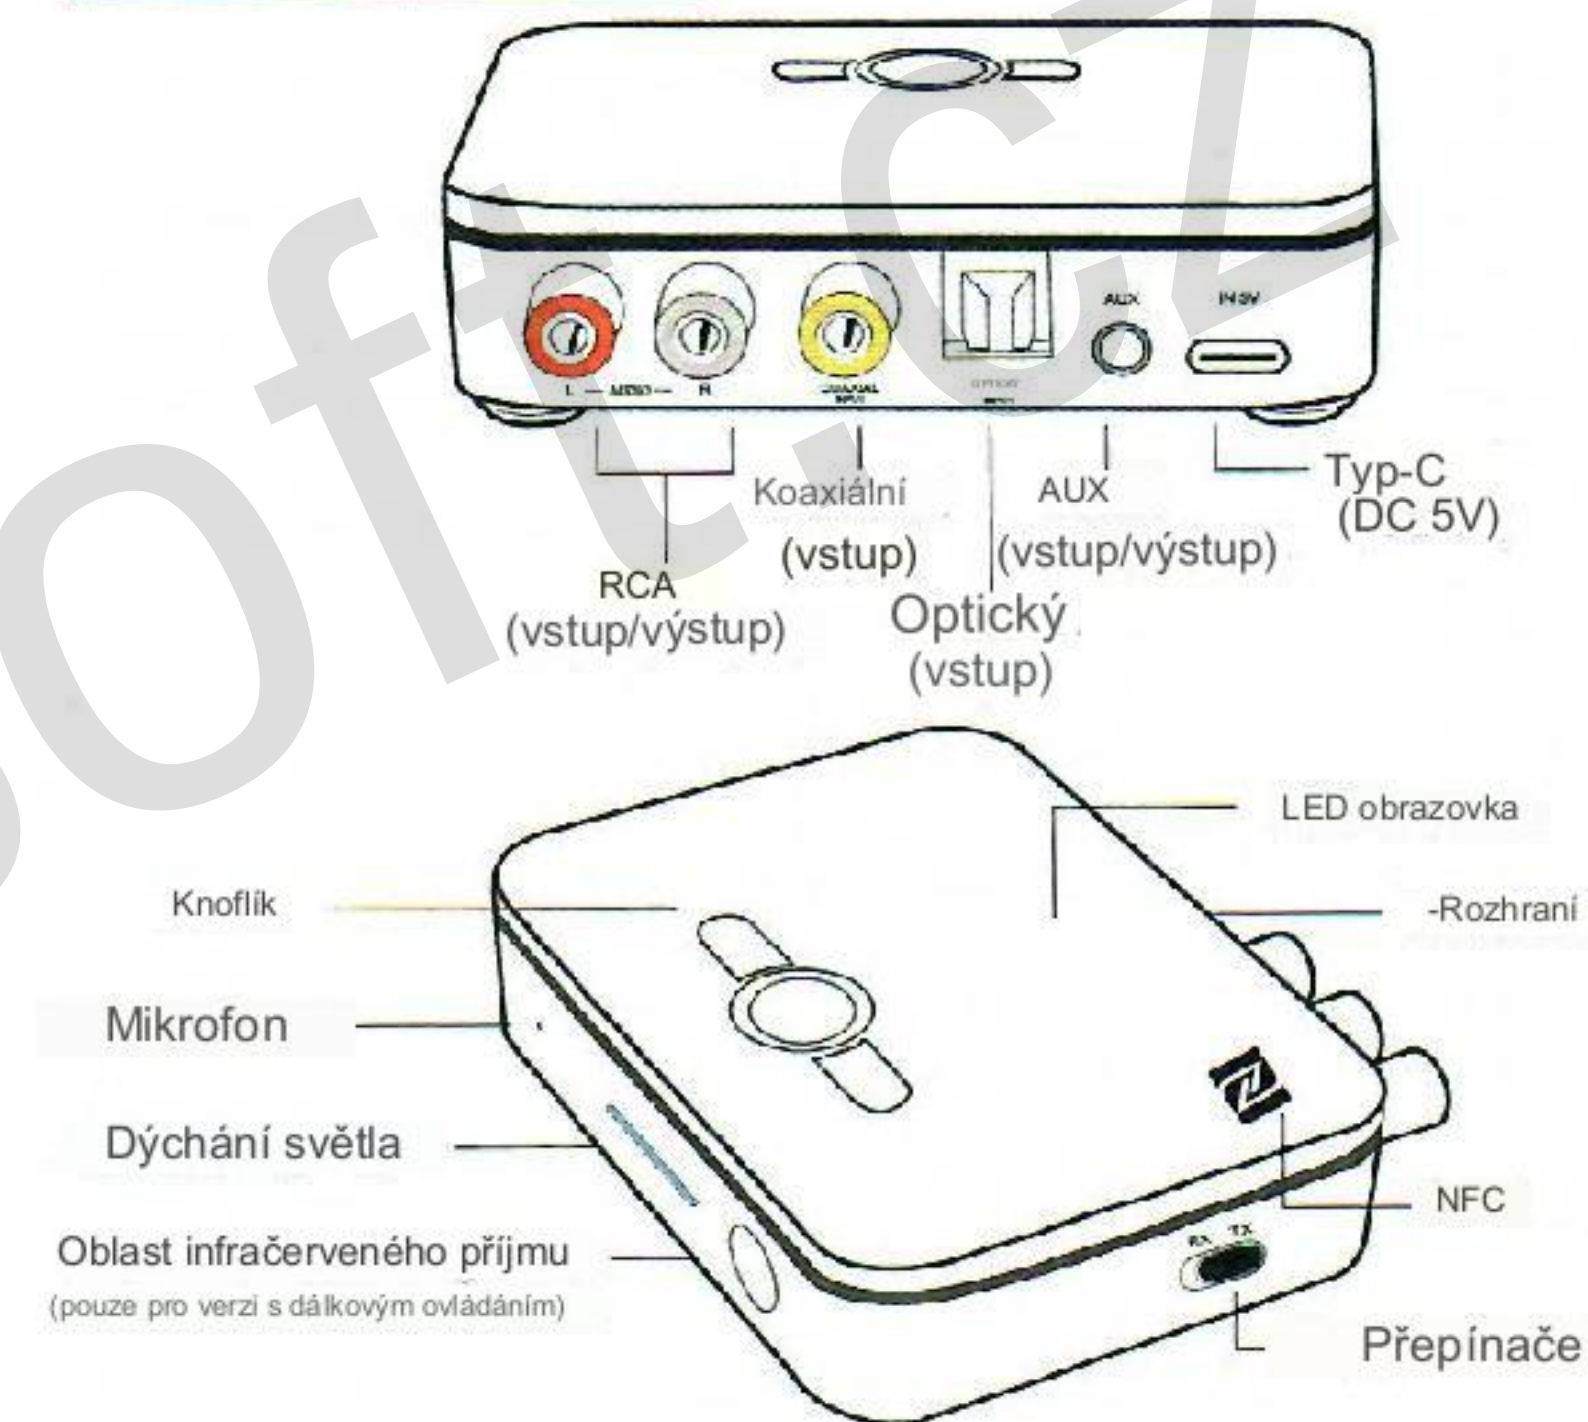


Provozní pokyny

- Dlouhé stisknutí 3s: Zapnuto/Vypnuto Dvojité kliknutí: Přepínací signál
Jediné kliknutí: Přehrát/Pozastavit
Dlouhé stisknutí při volání: Přijmout
Krátké stisknutí při volání: Odmítnout
- ⏮ Dlouhé stisknutí: Hlasitost Jedno kliknutí: Předchozí skladba
- ⏭ Dlouhé stisknutí: Hlasitost+ Jedno kliknutí: Další skladba

Režim RX (režim příjmu)

Lze jej použít pro všechna zařízení se vstupním audio rozhraním AUX (3,5 mm) nebo RCA, jako jsou aktivní reproduktory/staré reproduktory/reproduktory/sluchátka/zesilovače/reproduktory do auta. Tento produkt může upgradovat běžné bezdrátové reproduktory na Bluetooth stereo a bezdrátově přenášet hudbu z mobilních telefonů do reproduktorů a dalších zařízení.

Schéma připojení

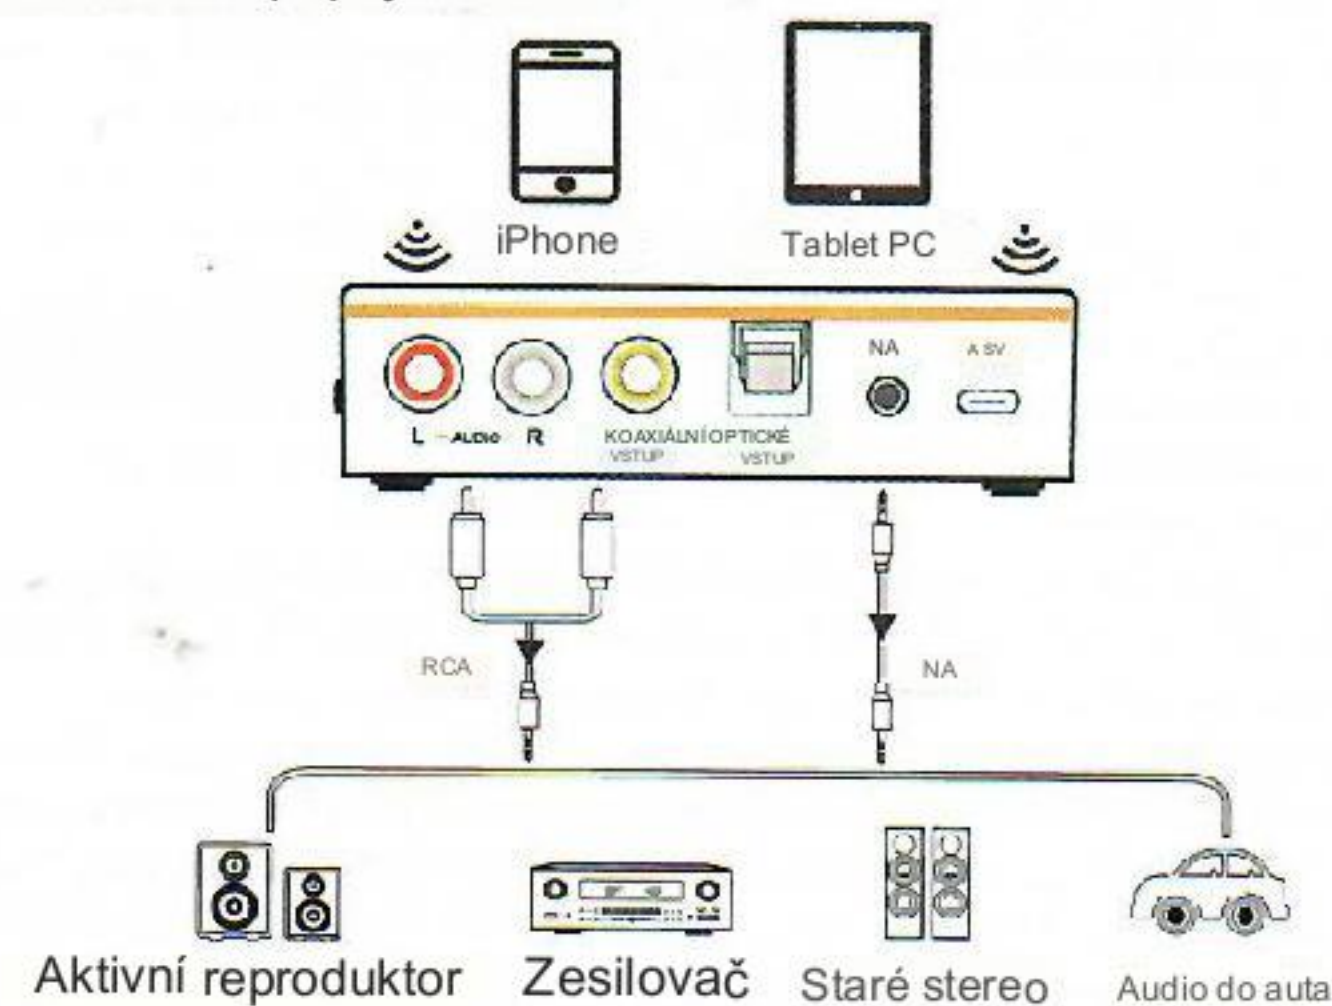

Krok 1: Připojte/zapněte

1. Zapojte jeden konec audio kabelu AUX/RCA do adaptéru a druhý konec do vstupního audio rozhraní aktivního reproduktoru.
2. Dlouhým stisknutím po dobu tří sekund otevřete zařízení. Obrazovka displeje bude MODRÁ a RX a modré světlo bude blikat, což ukazuje, že adaptér je v režimu příjmu (Pokud je aktuálně v režimu TX, můžete jej přepnout pomocí přepínače Switch to RX mode).

4

Krok 2: Spárování s mobilním telefonem (podpora NFC)

1. Zapněte Bluetooth svého telefonu a proveďte příslušný výběr ze seznamu a připojte „M8“. Po spárování bude RX a modrá kontrolka vždy svítit, což znamená, že adaptér byl úspěšně spárován s mobilním telefonem.
2. Otevřete hudební software mobilního telefonu a zvuk lze přenášet do aktivního reproduktoru přes Bluetooth. V tomto okamžiku bude blikat modré světlo. Podpora operací, jako je přehrávání/pozastavení/předchozí skladba/další skladba/hlasitost+/hlasitost-.

Názna:


1. S HD mikrofonom lze produkt automaticky přepnout do režimu CALL po úspěšném připojení mobilního telefonu nebo přehrávání hudby. Na obrazovce se zobrazí VOLÁNÍ a můžete přijmout/odmítnout/zavěsit (viz Seznam operací).
2. Produkt uloží spárovaná zařízení a automaticky připojí váš telefon nebo tablet, jakmile se znovu zapne poté, co byl předtím úspěšně spárován.
3. Podporuje připojení NFC. Po umístění mobilního telefonu nebo tabletu s vestavěnou funkcí NFC na 2 sekundy do blízkosti indukční oblasti NFC se zobrazí okno připojení NFC, klikněte na „OK“.
4. Tento režim podporuje přehrávání z USB disku a TF karty. dokáže automaticky identifikovat zdroje signálu a přehrávat související skladby. Dvojitým kliknutím můžete přepínat zdroje signálu. Zařízení bude vysílat aktuální zdroje signálu v hlasech. Není třeba odpojovat signál zdrojový řádek opakovaně.
5. Ujistěte se, že vstupní audio rozhraní (Input) zařízení je správně připojeno. Chyby rozhraní budou mít za následek žádný zvuk nebo jiné poruchy.
6. Pokud se spárování nezdaří, vypněte Bluetooth mobilního telefonu nebo vymažte seznam Bluetooth mobilního telefonu, než restartujete adaptér Bluetooth. Můžete opakovat výše uvedené párování a zkusit to znovu.

5

Režim TX (režim vysílání)

Tento režim je vhodný pouze pro zařízení s výstupním audio rozhraním (AUX/RCA/Optical/Coaxial), jako je stolní počítač/notebook/TV/přehrávač/projektor a další zařízení). Může okamžitě upgradovat funkci Bluetooth a bezdrátově připojit Bluetooth sluchátka nebo Bluetooth reproduktor.

Schéma připojení

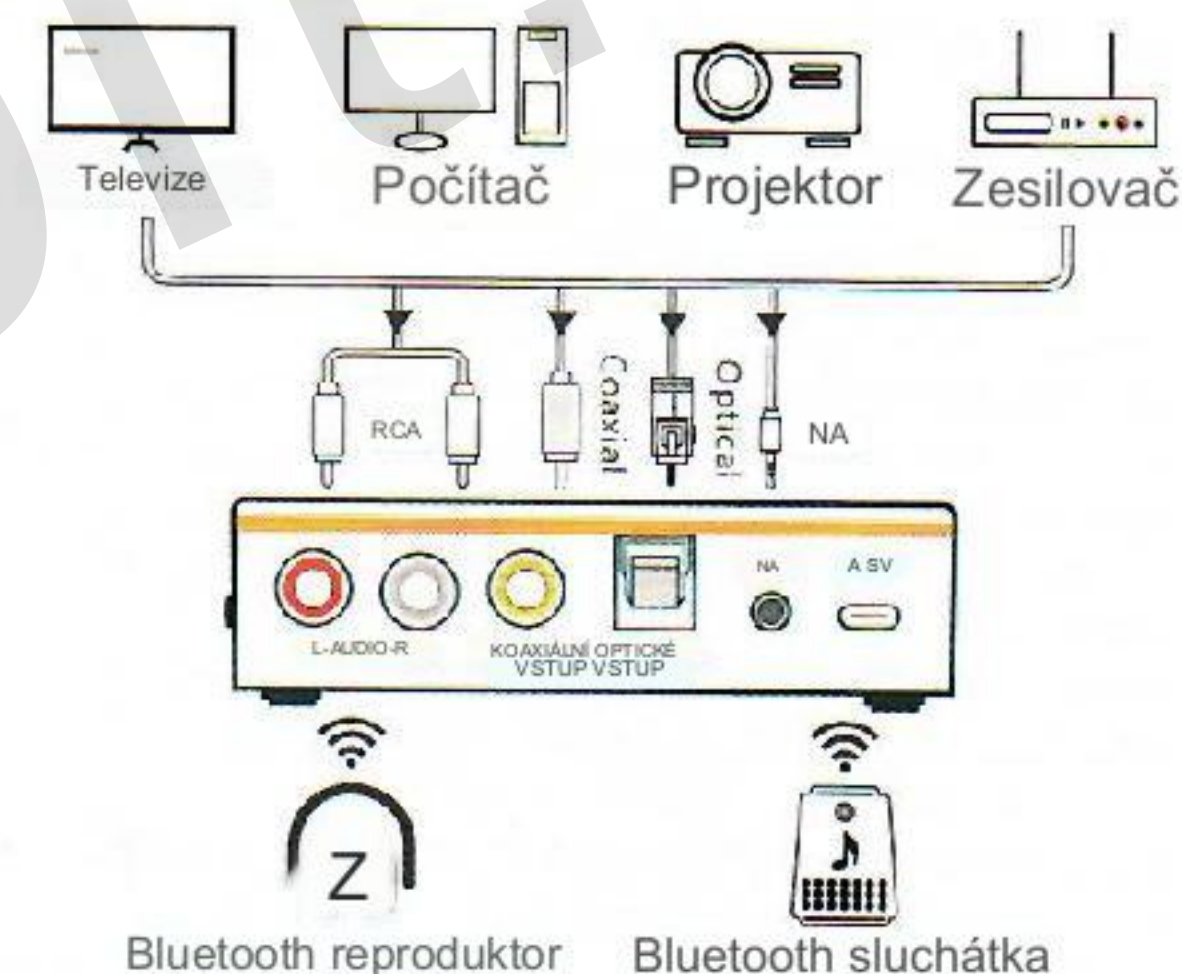

Krok 1: Připojte/zapněte

1. Zapojte jeden konec audio kabelu AUX/RCA do adaptéru a druhý konec do vstupního audio rozhraní počítače nebo TV.
2. Dlouhým stisknutím po dobu tří sekund zapněte zařízení a na displeji se zobrazí LINE. Současně bude blikat TX a červená kontrolka, což znamená, že adaptér je v režimu vysílání (Pokud je aktuální režim RX, v opačném případě můžete zapnout Přepnout do režimu TX.)

6

Krok 2: Párování Bluetooth

1. Umístěte produkt do blízkosti náhlavní soupravy Bluetooth (<10 m); ujistěte se, že je adaptér zapnutý a v režimu vysílání.
2. Zapněte náhlavní soupravu nebo reproduktor Bluetooth a ujistěte se, že čekají na spárování. Počkejte na jejich automatické spárování.
3. Po úspěšném spárování bude TX a červené světlo vždy svítit. V tuto chvíli lze zvuky počítače/TV přenášet do náhlavní soupravy Bluetooth nebo reproduktoru Bluetooth bezdrátově.

Náznak:

1. Zařízení automaticky uloží spárovaná zařízení. Po prvním úspěšném spárování náhlavní soupravy Bluetooth dojde k automatickému spárování při opětovném zapnutí produktu.
2. Tento režim podporuje pět způsobů přenosu AUX/USB-disk/karta TF/optický/koaxiální přenos. Po vložení odpovídajících zdrojů signálu můžete přepínat zdroje signálu dvojitým kliknutím na tlačítko. Současně bude zařízení vysílat aktuální zdroj signálu. Není potřeba opakovaně zapojovat a odpojovat zdroj/linky signálu.
3. Ujistěte se, že jsou výstupní audio rozhraní (Output) počítače TV a dalších zařízení správně připojena. Chyby rozhraní povedou k tichu nebo jiným poruchám.
4. Pokud se spárování nezdaří, restartujte náhlavní soupravu Bluetooth a toto zařízení a zkuste zopakovat výše uvedené kroky. Vzhledem k rozdílu v protokolech Bluetooth mezi různými zařízeními je normální mít různé doby párování.

Funkce NFC


Připojení NFC je k dispozici v režimu RX. Tuto funkci lze použít pouze pro mobilní telefon s funkcí NFC.

Operace je následující:

1. Otevřete funkci NFC mobilního telefonu nebo jiných zařízení.

2. Umístěte indukční oblast NFC mobilního telefonu do blízkosti indukční oblasti NFC adaptéru Bluetooth M8 do nulové vzdálenosti po dobu asi 2 sekund. Když se zobrazí okno připojení NFC, klikněte na něj pro další připojení.

Dálkové ovládání

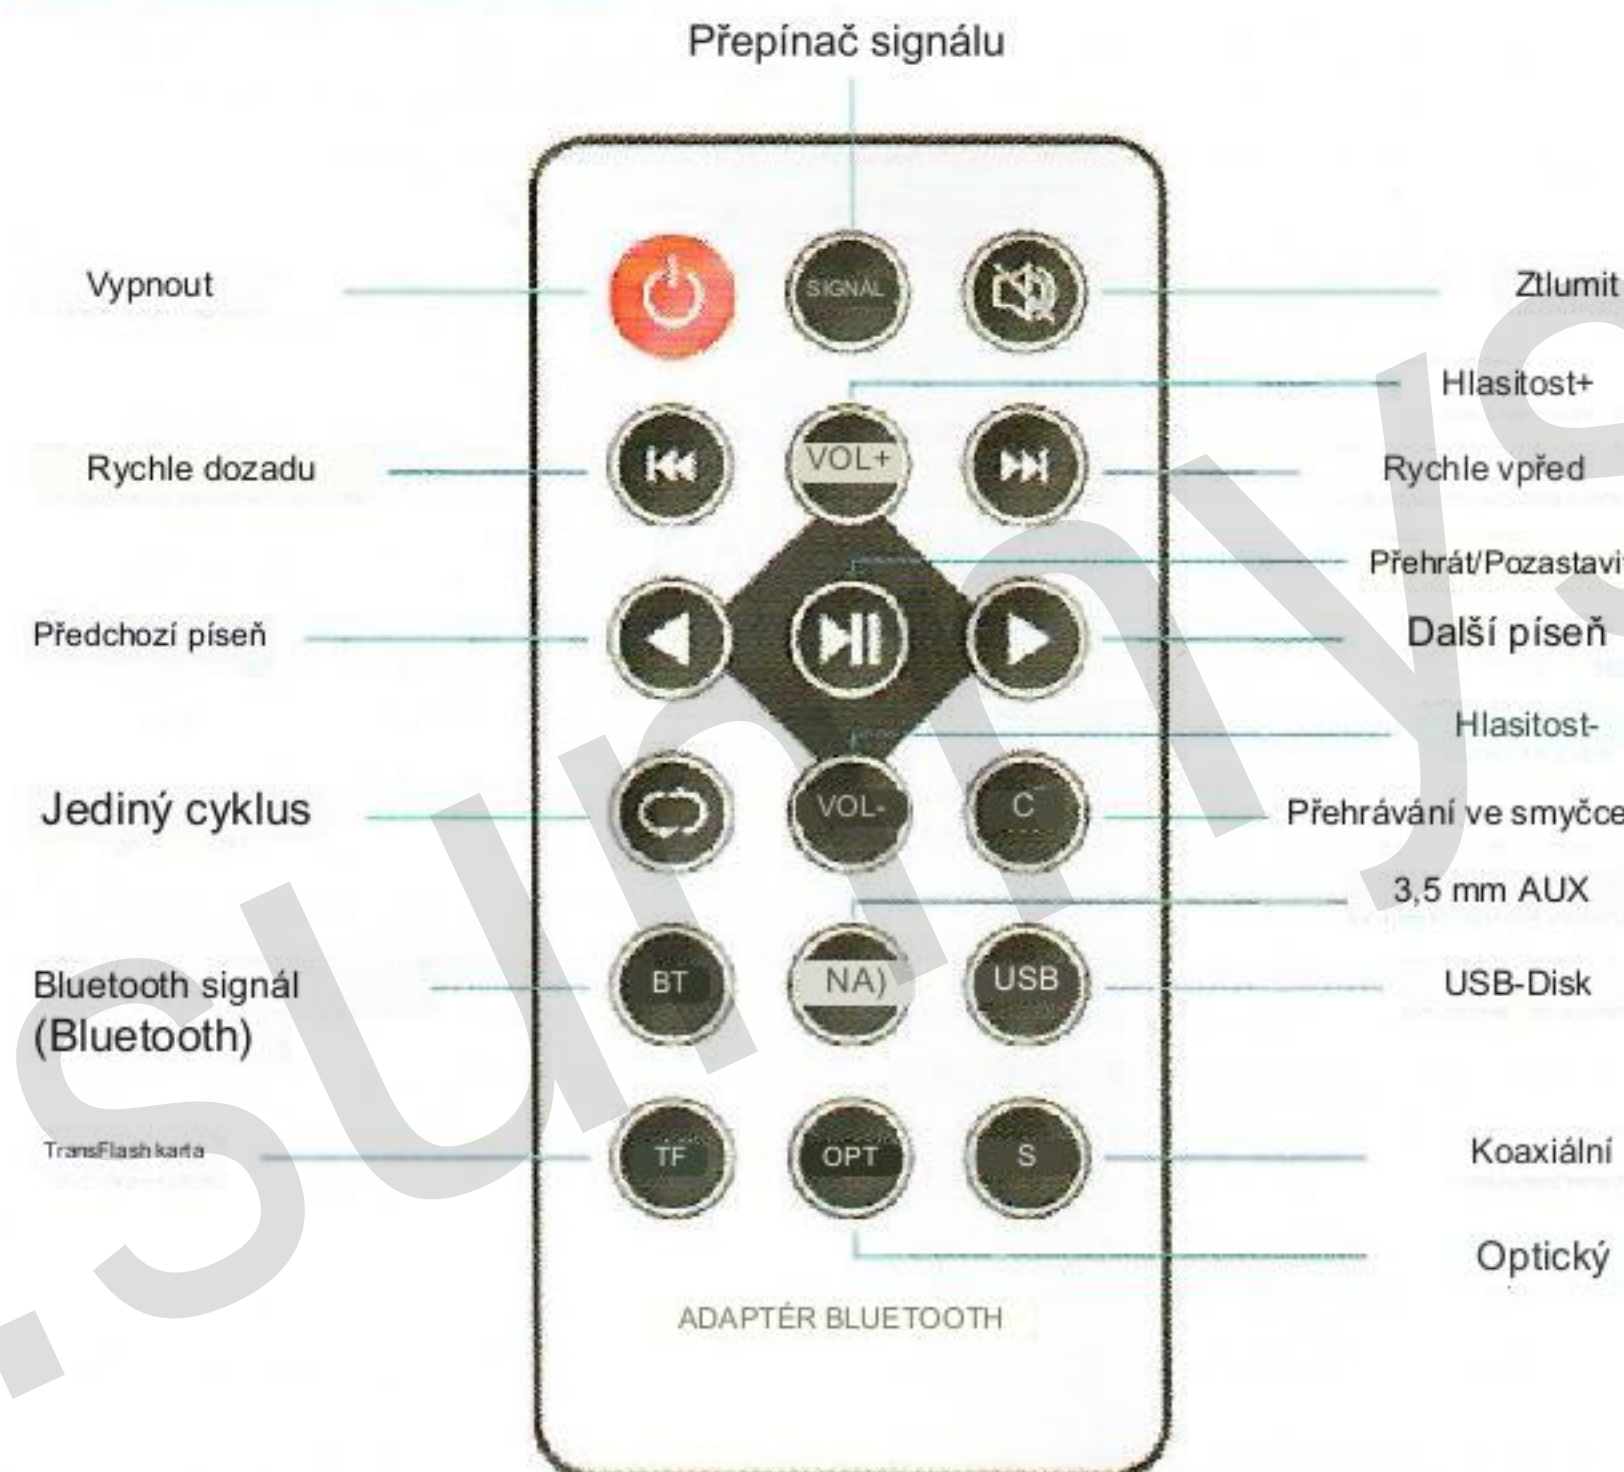

Poznámka: Tuto funkci lze použít pouze pro verzi s dálkovým ovládáním. Efektivní vzdálenost lineárního dálkového ovládání je asi 5-8 metrů.

Běžné problémy

V případě následujících problémů je můžete vyřešit pomocí následujících metod.

1. Displej zařízení není správně jasný?

Odpověď: Zkontrolujte, zda je zařízení správně zapojeno do nabíjecího kabelu typu C a zda funguje baterie.

2. Nepodařilo se zadat Příjem/Vysílání?

Odpověď: Přepnutím přepínače režimu v libovolném režimu přepnete do dalšího režimu a na LED obrazovce se zobrazí aktuální režim Bluetooth, jako je RX/TX.

3. Nepodařilo se vám připojit k zařízení Bluetooth (náhlavní souprava Bluetooth)? Odpověď: Přiložte adaptér Bluetooth blíže a znovu spusťte zařízení a znovu připojte náhlavní soupravu Bluetooth a další zařízení. Pokud to nefunguje, můžete restartovat adaptér a náhlavní soupravu Bluetooth, abyste se ujistili, že vstoupily do stavu čekání na spárování.

4. Žádný zvukový výstup?

Odpověď: Zkontrolujte, zda je správně připojena 3,5mm audio

linka; audio linka musí být vložena do audio výstupního rozhraní v režimu vysílání a audio linka musí být vložena do audio vstupního rozhraní v režimu příjmu. Zároveň prosím zkontrolujte, zda jsou všechny aktuální zdroje signálu správné. Pokud jsou nalezena nesprávná rozhraní, dvakrát stiskněte pro přepnutí na správné zdroje signálu.

5. Žádný zvuk po vložení digitálního optického/koaxiálního kabelu?

Odpověď: Určete aktuální pracovní režim; pokud je to režim příjmu RX, digitální vlákno/koaxiální vstup se přepne na analogové signály AUX/RCA, které budou vystupovat do běžného reproduktoru přes kabel. Pokud je použit režim vysílání TX, digitální optický/koaxiální vstup se přepne na analogové signály, které budou vystupovat do náhlavní soupravy Bluetooth Bluetooth reproduktor

6. Jaká zařízení lze použít?

Odpověď: Všechna zařízení s audio vstupními nebo výstupními rozhraními, jako je počítač, televize, aktivní osluchnice, domácí reproduktor, kancelářská akustika, vozidlo, výkonový zesilovač, projektor, kabelová sluchátka.

Displej LED

Popis stavu zobrazení na obrazovce

MODRÝ	ČÁRA	RX/TX	ČÁRA	OPT	COR	USB
Režim RX	Režim TX	RX/TX	V	Optický	Koaxiální	USB-Disk
TF	PRUS	U30	05:30	VOLÁNÍ	HIFI	VYPNUTO
TransFlash karta	Pauza	Hlasitost	Čas hraní	Režim volání	Zapnutí	Vypnout

Seznam operací

Návod k obsluze kláves

Funkce			
Zapnuto/vypnuto	dlouhý stisk 3S	/	/
Přepínač režimu	Přepínačem můžete přepínat doleva a doprava		
Přepínač signálu	dvojklik	/	/
Přehrát/Pozastavit	jediným kliknutím	/	/
Hlasitost	/	dlouhé stisknutí: hlasitost-	dlouhé stisknutí: hlasitost+
Přepínač písní	/	dlouhé stisknutí: předchozí skladba	krátké stisknutí: další skladba
Odpovědět/Zavěsit	krátké stisknutí: při příchozím hovoru	/	/
Odmítnout hovor	dlouhé stisknutí: při příchozím hovoru	/	/
Obnovit nastavení	/	Stiskněte: pět sekund	Stiskněte: pět sekund

10

Popis kontrolky

Modré světlo			Červené světlo		
Bliká	Vždy na	Dýchání	Bliká	Vždy na	Dýchání
Spojovací	Připojeno	Hraní	Párování	Spárováno	Hraní

Digitální optická/koaxiální funkce

- Zařízení podporuje digitální optický a koaxiální vstup a dokáže převádět digitální signály na analogové audio signály.
Poznámka: Optický/koaxiální výstup není podporován.
- V režimu RX nebo TX lze optický/koaxiální vstup převést na analogový signál AUX/RCA, který lze připojit k reproduktoru nebo přenést do náhlavní soupravy Bluetooth.

Teplé připomenutí

- Tento produkt může splňovat přepravní certifikaci UN38.3 a bezpečnostní certifikaci MSDS
- Tento produkt je napájen standardním 5V±5% napájením; pokud výkon překročí standardní rozsah napětí, dojde k jeho poškození a objeví se bezpečnostní rizika.
- Zařízení lze používat pouze v oblastech s nadmořskou výškou 2000 m a nižší a v oblastech s netropickými klimatickými podmínkami.
- Tento výrobek se nesmí používat v blízkosti magnetů nebo výrobků se silnými magnetickými poli, jinak budou ovlivněny jeho normální funkce nebo může dojít k poškození výrobku.
- Zabraňte pádu nebo silnému nárazu produktu; vaše hrubé používání může poškodit produkt.
- Nepoužívejte tento výrobek v extrémně vysokých nebo nízkých teplotách, vlhkém nebo korozivním prostředí.

11

- Tento produkt má vestavěnou lithiovou baterii. Nevyhazujte jej, neházejte jej do vody/ohně a nevystavujte jej slunci, ohni nebo podobnému přehřátému prostředí.

Resetovat

V libovolném režimu po spuštění stiskněte současně tlačítka "" a "" po dobu asi 5 sekund a na displeji se zobrazí Pokud se zobrazí 8888, znamená to, že tovární nastavení bylo úspěšně obnoveno.

Seznam balení

1. Adaptér Bluetooth x1
2. AUX 3,5mm audio kabel x1
3. Audio kabel RCA x1
4. Nabíjecí vedení typu C x1
5. Návod k použití x1

Distributor
Sunnysoft s.r.o.
Kovanecká
2390/1a
190 00 Praha 9
Česká republika
www.sunnysoft.cz

12

NFC Digital Display Bluetooth Adapter

Operation Manual V1.0



Mode:M8

Dear users, thank you for purchasing this product. Please read this operation manual carefully before you use the product. Wish you a pleasant usage experience.

1

Introduction

- This product integrates the two functions of Bluetooth Receiving and Bluetooth Transmitting into one.
- The Bluetooth 5.0 chip is a plug-and-play device which supports a variety of audio devices.
- HD LED display can display working mode and status in real time.
- Support AUX 3.5mm/RCA audio input and output, support digital optical and coaxial input.
- HD microphone supports wireless music, hands-free call and vehicle navigation.
- The built-in 500mAh polymer lithium battery can be used while it is charged. You can use it to listen to music for 8-10 hours.
- The product supports NFC wireless Bluetooth pairing (The mobile phone/tablet PC shall support NFC function)
- The product can broadcast files of many audio formats in USB flash disk and TF card (Receive mode/Transmit mode)
- It can be remotely controlled by infrared and ensure the effective distance of 5~8 meters (for Remote Control version only)

Parameters

Name: NFC Bluetooth Adapter

Model: M8

Bluetooth Version: V5.0+EDR

Frequency Range: 2400-2483.5MHz SNR: > 90dB

Frequency Response: 10Hz-20KHz

Input Parameter: DC 5V=500mA

Weight: About 70g

Charging: Type-C 1hour

Interface: AUX/RCA/Optical/Coaxial

Distance: About 10m

Battery: 3.7V/500mAh

SNR: > 90dB

Peripheral Support: USB/TF card


Protocol: HFP/A2DP/AVRCP

Format: MP3/WAV/WMA/APE/FLAC

Size: L86xW65xH22 (mm)

2

Interface diagram

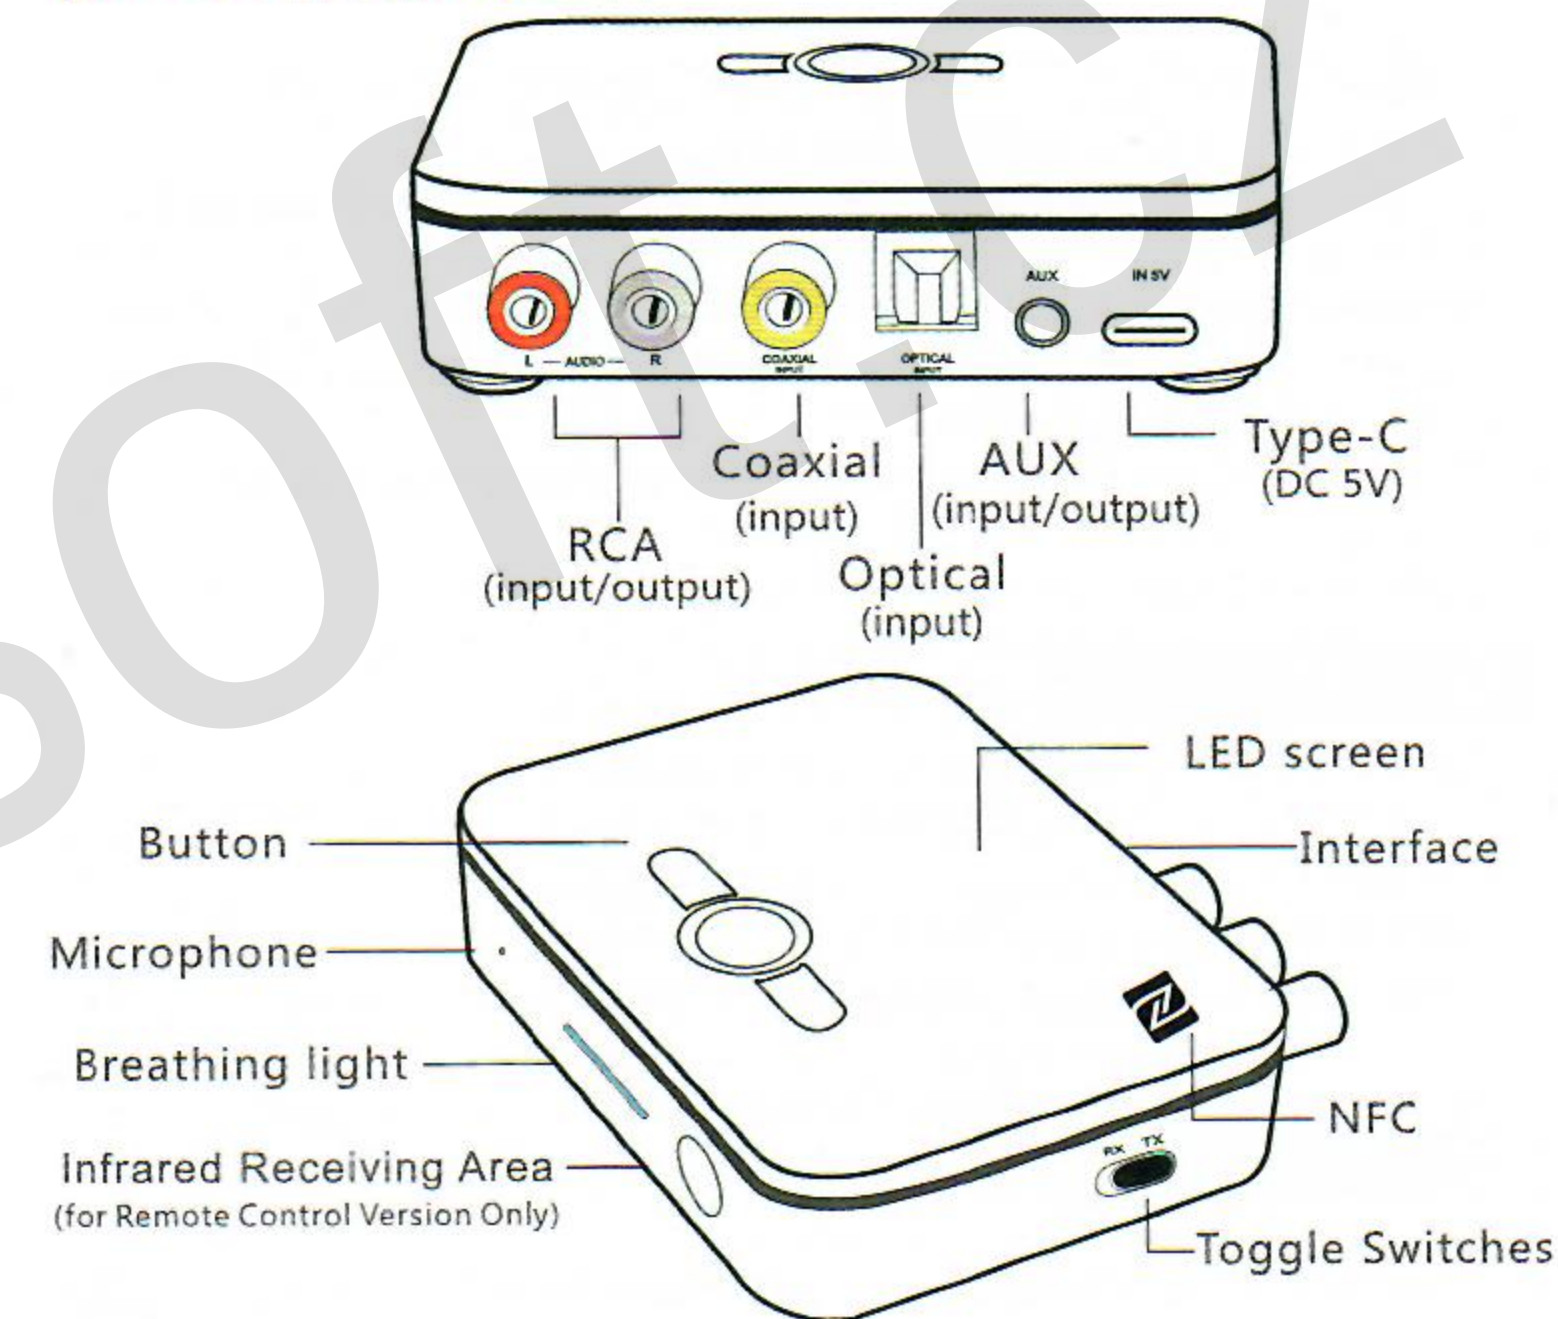

Operation Instructions


- ⦿ Long press 3S: On/off Double click: Switching Signal
Single click: Play/Pause
Long press when calling: Answer
Short press when calling: Reject
- ⏮ Long press: Volume- Single click: Previous song
- ⏭ Long press: Volume+ Single click: Next song

3

RX mode (Receiving mode)

It can be used to all devices with AUX (3.5mm) or RCA audio input interface, such as active speakers/old speakers/speakers/headphones/amplifiers/car speakers. This product can upgrade ordinary wired speakers to Bluetooth stereo and transmit music from mobile phones to speakers and other devices wirelessly.

Connection Diagram

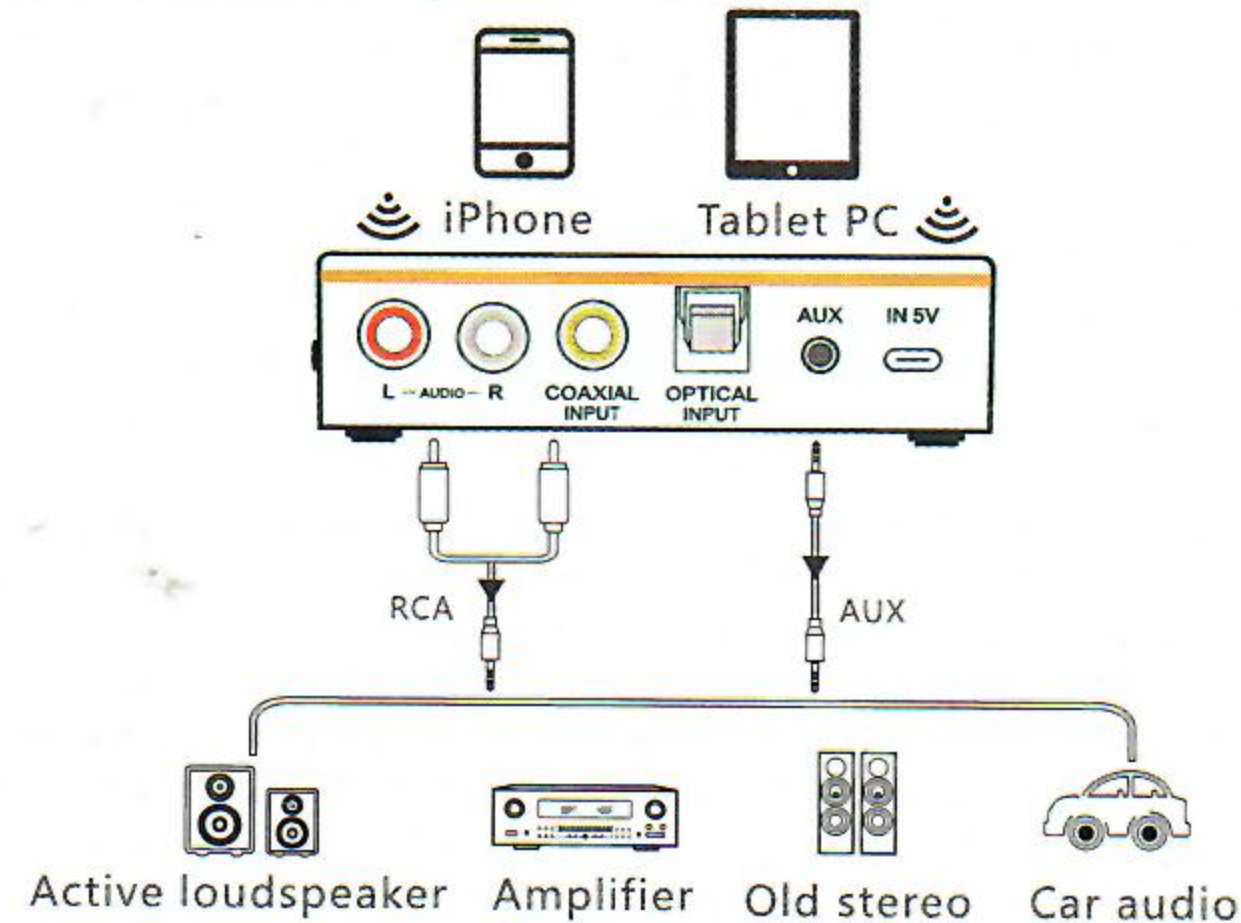

Step ① : Connect/Power on

1. Insert one end of AUX/RCA audio cable to the adapter and another end to the audio input interface of the active speaker.
2. Long press  for three seconds to open the device. The display screen will be BLUE and RX and blue light will flash, showing that the adapter is in the receiving mode (If it is currently in TX mode, you can switch it through the toggle switch Switch to RX mode).

4

Step ②: Pair with mobile phone (support NFC)

1. Turn on Bluetooth of your phone and make related selection from the list and connect "M8". After paired, RX and the blue light will be always on, indicating that the adapter has been successfully paired with the mobile phone.
2. Open the music software of the mobile phone and the sound can be transmitted to the active speaker through Bluetooth. At this time, the blue light will flash. Support operations, such as play/pause/previous song/next song/volume+/volume-.

Hint:


1. With HD microphone, the product can be automatically switched to the CALL mode after the mobile phone is connected successfully or the music is played. The screen will display CALL and you can answer/refuse/hang up (Refer to Operation List).
2. The product will save the paired devices and automatically connect your phone or tablet when it is turned on again after it is paired successfully before.
3. Supports NFC connection. After the mobile phone or the tablet PC with built-in NFC function is placed near the NFC induction area for 2 seconds, a NFC connection window will be pop up, Click "OK".
4. This mode supports USB-Disk and TF card play. It can automatically identify signal sources and play related songs. You can double click  to switch signal sources. The device will broadcast current signal sources in voices. There is no need to unplug the signal source line repeatedly.
5. Ensure that the audio input interface (Input) of the device is properly connected. Interface errors will result in no sound or other failures.
6. If paired fail, please turn off mobile phone Bluetooth or clear Bluetooth list of the mobile phone before you restart the Bluetooth adapter. You can repeat doing the above pairing steps and have a try again.

5

TX mode (Transmitting mode)

This mode is only suitable for devices with audio output interfaces (AUX/RCA/Optical/Coaxial), such as desktop computer/laptop/TV/power player/projector and other devices). It can instantly upgrade Bluetooth function and connect Bluetooth headset or Bluetooth speaker wirelessly.

Connection Diagram

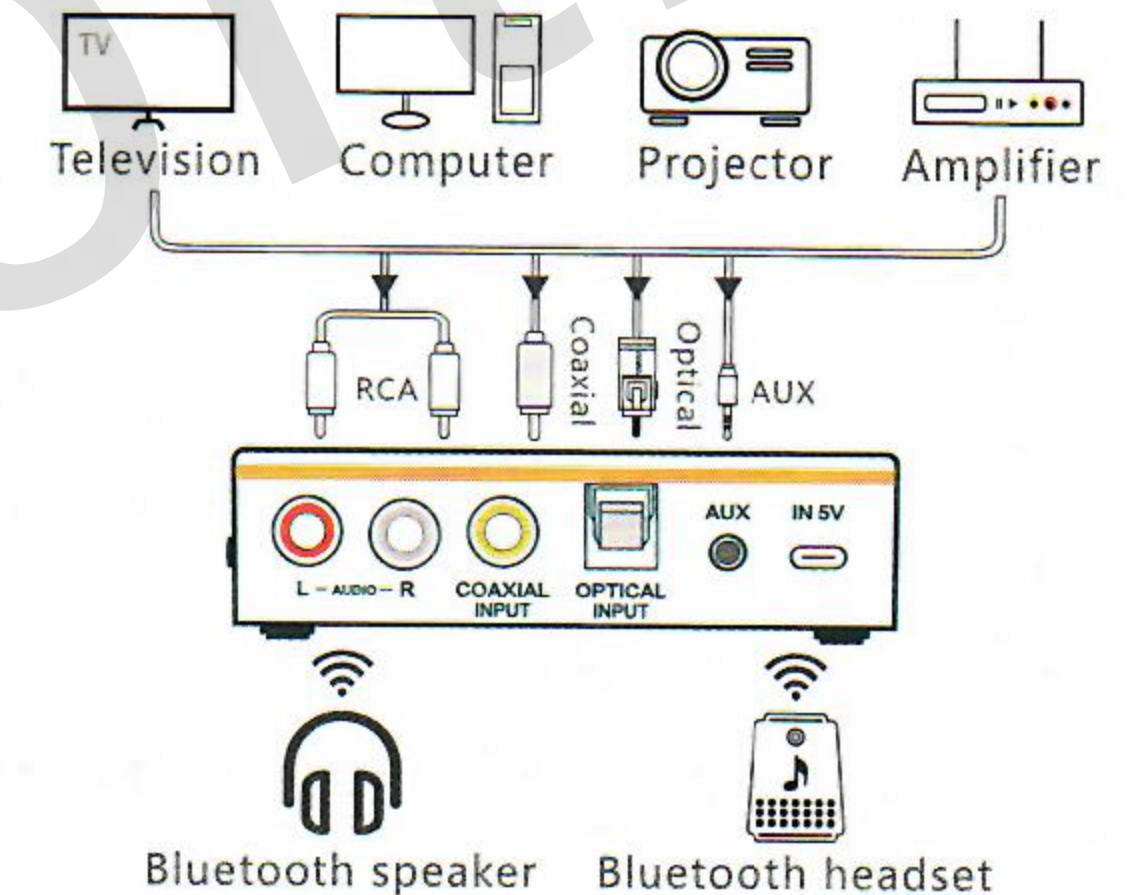

Step ① : Connect/Power on

1. Insert one end of AUX/RCA audio cable to the adapter and another end to the audio input interface of the computer or TV.
2. Long press  for three seconds to turn on the device and the display screen will display LINE. At the same time, TX and red light will flash to show that the adapter is in the transmitting mode (If the current mode is RX mode, otherwise you can turn on Switch to TX mode.)

6

Step②: Bluetooth Pairing

- 1.Place the product near the Bluetooth Headset(< 10m) ; make sure that the adapter is turned on and in Transmitting Mode.
- 2.Turn on the Bluetooth headset or speaker and make sure that they are waiting for pairing. Wait them to be paired automatically.
- 3.After successfully paired, TX and red light will be always on. At this time, sounds of the computer/TV can be transmitted to the Bluetooth headset or Bluetooth speaker wirelessly.

Hint:


- 1.The device will automatically save the paired devices. After your Bluetooth headset is successfully paired for the first time, it will be automatically paired when the product is turned on again.
- 2.This mode supports the five transmitting ways of AUX/USB-Disk/ TF card/Optical/Coaxial transmission. After corresponding signal sources are inserted, you can switch signal sources by double clicking ● key.At the same time, the device will broadcast current signal sources. There is no need to repeatedly plug and unplug the signal source/lines.
- 3.Please ensure that the audio output interfaces (Output) of computer TV and other devices are connected correctly. Interface errors will lead to silence or other faults.
- 4.If fail paired, please restart Bluetooth headset and this device and try repeating the above matching steps. Due to differences in Bluetooth protocols between different devices, it is normal to have different pairing times.

NFC Functions

NFC connection is available in RX mode. This function can only be used to mobile phone with NFC function. The operation is as follows:
1.Open NFC function of mobile phone or other devices.

- 2.Put NFC induction area of the mobile phone close to NFC induction area of M8 Bluetooth adapter at zero distance for about 2 seconds. When the NFC connection window pops up, click it for further connection.

Remote Control

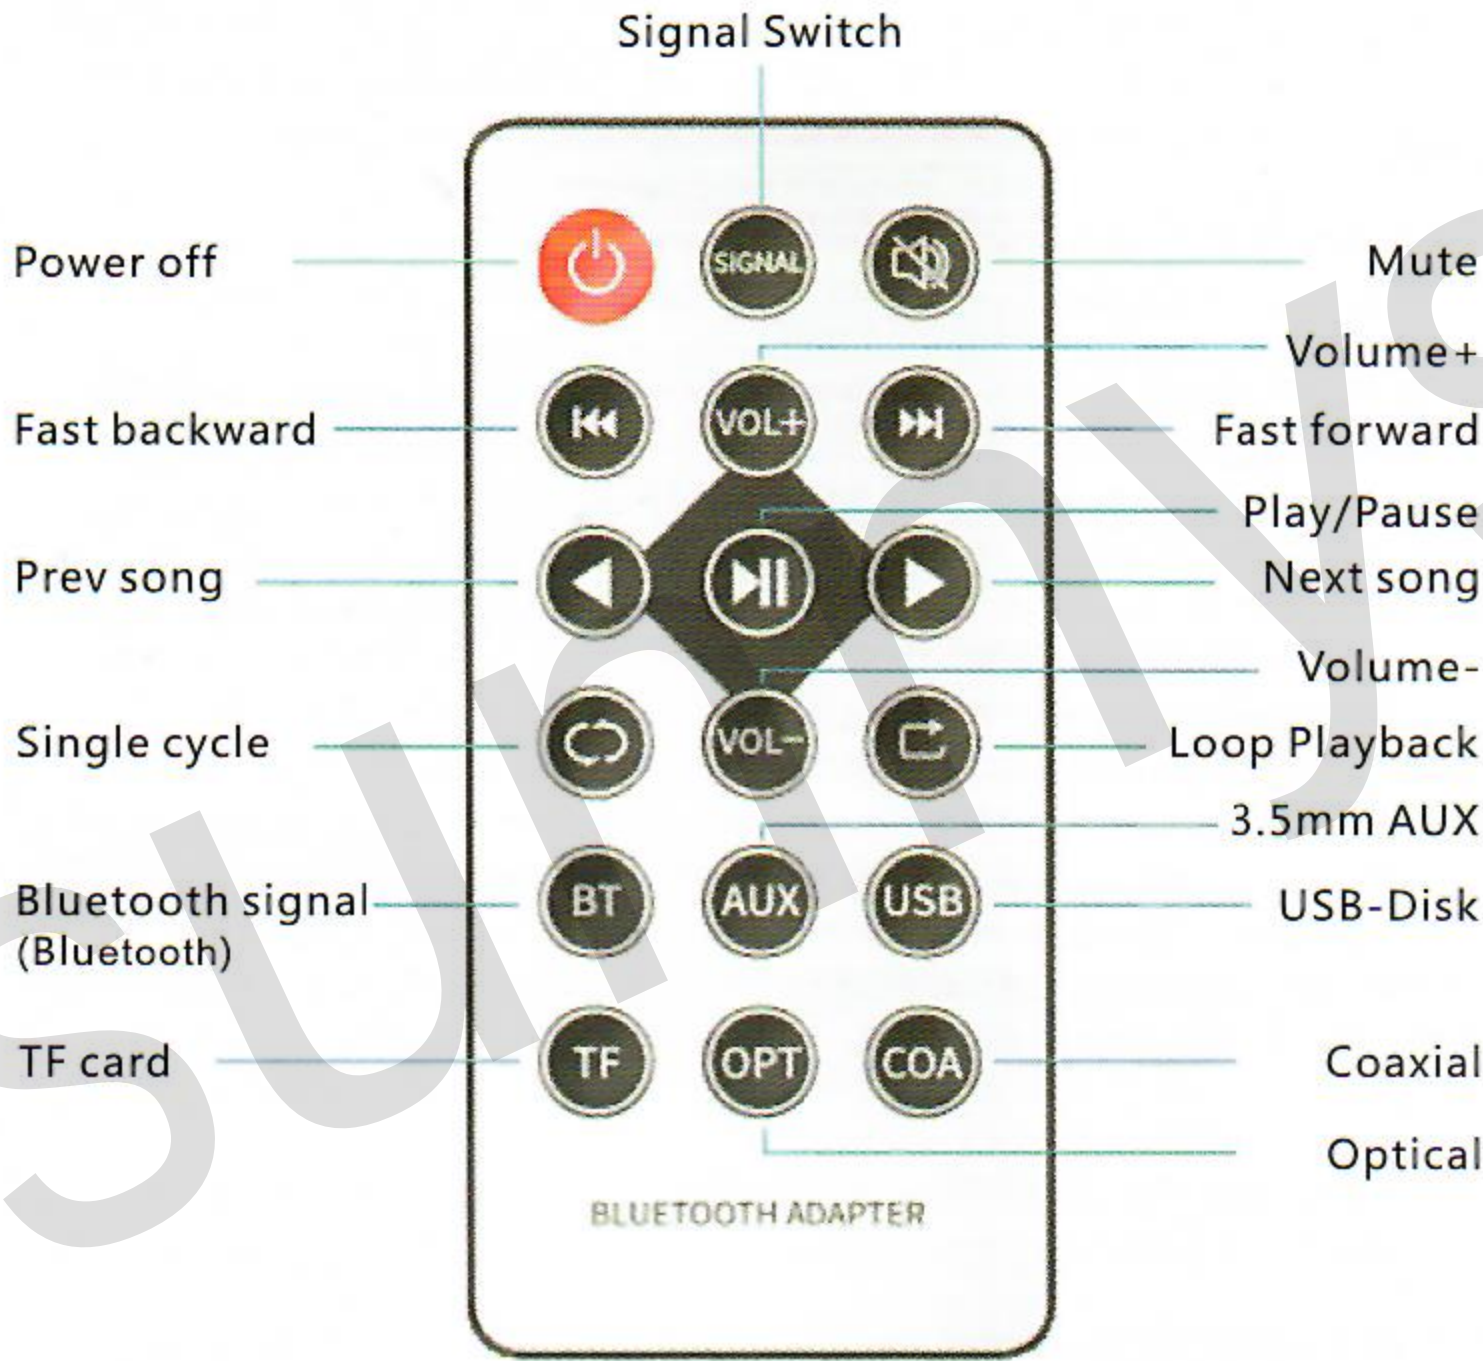

Note: This function can only be used for remote control version. The effective linear remote control distance is about 5-8 meters.

Common Problems

- In case of the following problems, you can solve them by using the following methods.
- 1.Display screen of the device is not properly bright?
Answer:Please check whether the device is properly plugged into the Type-C charging cable and whether the battery works.
 - 2.Fail to enter the Receiving/Transmitting?
Answer:Toggle the mode switch in any mode to switch to the next mode and the LED screen will display the current Bluetooth mode, such as RX/TX.
 - 3.Fail to be connected with a Bluetooth device (Bluetooth headset)?
Answer:Put the Bluetooth adapter closer and start the device again and connect the Bluetooth headset and other devices again. If that fails to work, you can restart the adapter and the Bluetooth headset to ensure that they have entered the waiting state for pairing.
 - 4.No sound output?
Answer:Please check whether the 3.5mm audio line is connected correctly; the audio line shall be inserted to audio output interface under the transmitting mode and the audio line shall be inserted to the audio input interface under the receiving mode. At the same time, please check whether all current signal sources are correct. If wrong interfaces are found, please double press ● to switch to the correct signal sources.
 - 5.No sound after the digital optical/coaxial cable is inserted?
Answer:Determine the current working mode; if it is RX receiving mode, digital fiber/coaxial input will be switched to AUX/RCA analog signals, which will be output to the ordinary speaker through the wire. If TX transmitting mode is used, the digital optical/coaxial input will be switched to analog signals, which will be output to Bluetooth headset Bluetooth speaker
 - 6.What devices can be used?
Answer:All devices with audio input or output interfaces, such as computer, television, active sound box, home loudspeaker, office acoustics, vehicle , power amplifier, projector, wired earphone.

LED Display Screen

Description of Screen Display Status						
BLUE	LINE	RX/TX	LINE	OPT	COR	USB
RX mode	TX mode	RX/TX	AUX IN	Optical	Coaxial	USB-Disk
TF	PAUS	U 30	05:30	CALL	HIFI	OFF
TF card	Pause	Volume	Play time	Call mode	Power on	Power off

Operation List

Keys Operation Instructions			
Functions			
On/Off	long press 3S	/	/
Mode Switch	Toggle switch to switch left and right		
Signal Switch	double click	/	/
Play/Pause	single click	/	/
Volume	/	long press: volume-	long press: volume+
Song Switch	/	long press: prev song	short press: next song
Answer/Hang up	short press: when incoming call	/	/
Reject Call	long press: when incoming call	/	/
Restore settings	/	Press it: five seconds	Press it: five seconds

10

Description of Indicator Lights

Blue Light			Red Light		
Flashes	Always on	Breathing	Flashes	Always on	Breathing
Connecting	Connected	Playing	Pairing	Paired	Playing

Digital Optical/Coaxial function

- The device supports digital Optical and Coaxial input and can convert digital signals to analog audio signals.
Note: Optical/Coaxial output is not supported.
- In the RX or TX mode, the Optical/Coaxial input can be converted into AUX/RCA analog signal, which can be wired to the speaker or transmitted to the Bluetooth headset.

Warm Reminder

- This product can meet UN38.3 transportation certification and MSDS safety certification
- This product is supplied by standard 5V±5% power; it will be damaged and safety risks will appear if the power exceeds the standard voltage range.
- The device can only be used in areas with an altitude of 2000m and below and areas with non-tropical climate conditions.
- This product shall not be used near magnets or products with strong magnetic fields, otherwise, its normal functions will be affected or the product may be damaged.
- Do not drop or strongly hit the product; your rude usage may damage the product.
- Please do not use this product in extremely high or low temperature, damp or corrosive environments.

11

- This product has a built-in lithium battery. Please do not discard or throw it into the water/fire and do not expose it to the sun, fire or similar overheated environments.

Reset

In any mode after starting up, press the "⏮" and "⏭" keys at the same time for about 5 seconds, and the display shows If 8888 is displayed, it means that the factory settings have been restored successfully.

Packing List

- | | | | |
|-----------------------|----|--------------------------|----|
| 1. Bluetooth Adapter | x1 | 2. AUX 3.5mm Audio Cable | x1 |
| 3. RCA Audio Cable | x1 | 4. Type-C Charging Line | x1 |
| 5. Instruction Manual | x1 | | |

12