


Teslong

Endoszkóp
NTS300

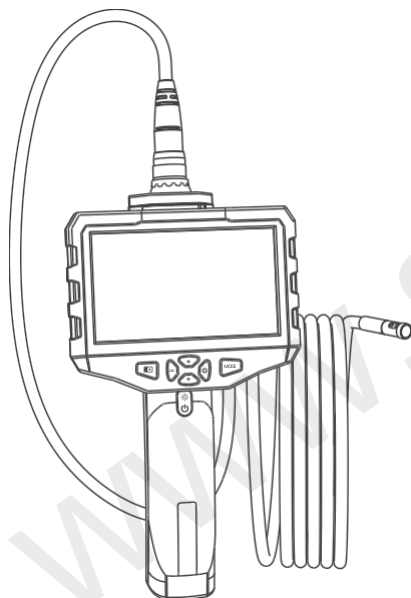

Felhasználói kézikönyv

Biztonsági utasítások

! FIGYELEM! A termék használata előtt figyelmesen olvassa el az összes biztonsági figyelmeztetést és az összes használati utasítást. A figyelmeztetések és utasítások figyelmen kívül hagyása áramütést, tüzet és súlyos sérülést okozhat.

- Tartsa a készüléket szárazon, tisztán, olajtól, víztől, gáztól vagy más maró anyagtól mentesen.
- Tartsa a munkaterületet tisztán és jól megvilágítva.
- Ez a berendezés nem alkalmas korlátozott fizikai, érzékszervi vagy szellemi képességekkel rendelkező személyek általi használatra.
- Ez a készülék nem orvosi használatra vagy személyes ellenőrzésre szolgál.
- A készülékkel végzett munka során tartsa a járókelőket biztonságos távolságban.
- Kerülje el, hogy megbotojlon vagy ne tartsa meg az egyensúlyát a készülék használata közben.

Akkumulátorok

- Amikor a bekapcsológomb pirosra vált, töltsse fel a készüléket. A piros fény töltés közben villog, és kialszik, amikor teljesen feltöltődött.
- A készülék töltéséhez csak az otthon használt 5 V-os USB-töltőt használjon.
- Ha hosszabb ideig nem használja a készüléket, legalább 3 havonta egyszer töltsse fel, hogy elkerülje az akkumulátor károsodását.

Karbantartás

- Mindig tartsa tisztán a fényképezőgép lencséjét.
- Ha az itt nem felsorolt alkatrészeket ki kell cserélni, forduljon a szervizképviselőhöz.

Értesítés



A készülék be- és kikapcsolásához nyomja meg hosszan a bekapcsológombot. Használat előtt távolítsa el a gumi védőburkolatot.



Győződjön meg róla, hogy a kamera szilárdan és szorosan (1) csatlakozik a monitorhoz, különben a képernyő tele lesz zajjal.

Ha két objektívvel rendelkező kameraszondát csatlakoztat, nyomja meg a gombot (2) az előlső és az oldalsó objektívek közötti váltáshoz.



Ha nem tudja bekapcsolni a készüléket, vagy a kép tele van zajjal, ellenőrizze az akkumulátor töltöttségi szintjét.



Ez a termék egy TF (microSD) kártyát tartalmaz már a készülékben. Ezt kinyomhatja, és a kártyaolvasó segítségével megtekintheti vagy másolhatja az endoszkóp által készített fényképeket és videókat.

Ne feledje, hogy csak akkor készíthet fényképeket vagy rögzíthet videókat, ha microSD-kártya van behelyezve a készülékbe, egyébként csak élő videót nézhet a kijelzőn.

Használati utasítás




LED zseblámpa




Nyomja meg a gombot a feloldáshoz és a beállítások fogantyú.



LED fáklya kapcsoló

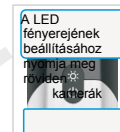

A LED fényerejének beállításához nyomja meg röviden a kamerák



Hosszan nyomja meg az OK/Lock gombot



(Csak akkor cserélje ki az akkumulátort, ha az elérté élettartama végét, vagy megszűnt.)



A kártya behelyezése: Kapcsolja ki a készüléket, nyissa ki a monitor hátoldalán lévő fedelet, és helyezze be a microSD-kártyát a bal oldali képen látható módon.




- 1) A microSD-kártya használata előtt győződjön meg róla, hogy a készülék ki van kapcsolva.
- 2) Győződjön meg róla, hogy a kártya megfelelően van behelyezve.
- 3) Ehhez a készülékhez nagy sebességű, 10. osztályú microSD-kártya szükséges, és nem fog megfelelően működni alacsony sebességű, 4. osztályú kártyával.



Mód: Fényképezés /
Videófelvétel / Lejátszás

Az akkumulátor állapota:
Teli / Közepes / Alacsony / Üres

MicroSD kártya állapota
Kártya behelyezve / nincs kártya

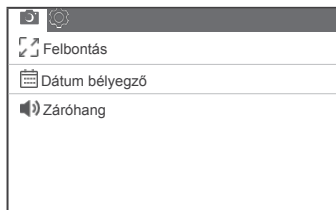

Érintse meg a **MODE** gombot. Három különböző üzemmódban nyomja meg a

Fotó üzemmódra, **Video**, **Lejátszás**.

Kattintson a **Fotó/Video** módban a fényképek készítéséhez vagy videók rögzítéséhez.

▲Nyomja meg az **OK** gombot a képernyő megállításához, és nyomja meg a gombot a képernyő forgatásához.



gombot egyszer, hogy belépjen az adott üzemmód beállítási menüjébe.

▲▼Kattintson a és gombra a kiválasztáshoz, majd kattintson az **OK** gombra a módosítások mentéséhez.

Megfelelési mód: felbontás; adatbélyegző; záróhang

Fényképezési mód: felbontás; felvétel; dátumbélyegző


Videó mód: törlés; védelem; bemutatás



üzemmódban nyomja meg kétszer a gombot a rendszerbeállítási menübe való belépéshez.

▲▼Kattintson a vagy gombra a kiválasztáshoz, majd kattintson az

⚠ Ha a képernyő lefagy, vagy a gombok nem reagálnak, nyomja meg a készülék hátoldalán található **Reset** gombot.

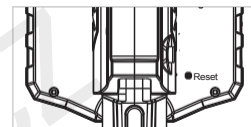

EU KÖRNYEZETVÉDELEM

Az elektromos termékeket nem szabad a háztartási vegyes hulladékkal együtt ártalmatlanítani.

Forduljon a helyi hatósághoz, hogy megtudja, hol vannak a legközelebbi gyűjtőudvarok vagy újrahasznosító konténerek.

Forgalmazó

Sunnysoft s.r.o.
Kovanecká 2390/1a
190 00 Prága 9
Cseh Köztársaság
www.sunnysoft.cz



OK gombra a módosítások mentéséhez.

Rendszerbeállítások menü: Automatikus kikapcsolás; Nyelv; Dátum/idő; Formátum; Alapértelmezett beállítások; Verzió.

Product Overview

This new Digital Video Recording Endoscope is a portable, hand-held, multifunctional inspection system featuring a 4.5' IPS HD display with powerful recording capability, users can capture images (JPG) or videos (MOV) on the TF card with 720P HD resolution. With ergonomic and robust design, users can control all the keys with one hand easily, and the adjustable handle offers extra comfort. In addition, the stainless steel shield and overall reinforced structures ensures stability under heavy duty.

The device has a small diameter probe with 6 adjustable LED lights, high performance camera module offering crystal clear output. Furthermore, it has an integrated CREE LED flash light for dark area working assistance.

Applications

This premier tool is an economical solution for:

- Automotive / Diesel Repair and Maintenance.
- Inspection of hard-to-reach or hard-to-see area or equipment.
- Plumbing, construction, restoration applications.
- Science Education.
- Outdoor Exploration.

Features

- View live inspection video instantly on the 4.5' IPS HD display.
- 720P high definition for image capture and video recording.
- 180° image flip monitor.
- High sensitivity for low-light HD camera chip in the tip.
- Cree LED flash assisting dark area work.
- Adjustable handle.

Safety



WARNING! Please read all safety warnings and all instructions before using this product. Failure to follow the warnings and instructions may result in electric shock, fire and serious injury.

- Keep the tool dry, clean, free from oil, water, gas or other materials causing corrosion.
- Keep work area clean and well lit.
- This appliance is not intended for use by persons with limited physical, sensory or mental capabilities.
- This appliance is not intended for medical use or personal inspection.
- Keep bystanders, children away while operating the tool.
- Do not overreach, keep proper footing and balance at all times.

Battery

- Charge the device when the power button turns red, the red light blinks when charging and will be off when fully charged.
- Only use 5V indoor home use USB charger to charge the device.
- Please charge the device at least once every 3 months if it is left unused for a long time to prevent damage to the battery.

Maintenance

- Always keep the camera lens clean.
- Should any other components not mentioned need to be replaced, please contact our service agents.

Notices



Long Press the power button to Power On or Power Off. Please remove the rubber protective cover before using this tool.



Please make sure ① the camera is connected to the monitor **firmly and tightly**, otherwise there will be noisy image on the screen.

When connecting a dual lens camera probe, please press ② this button to switch the front and side lenses.



Please check the battery level if you can not power on the device or there is noisy image on the screen.

! This product comes with a TF card and it's already within the device, you can press it to eject the TF card and use a card reader to see or copy the photos and videos taken by the endoscope.






Please notice that you can only take photos or record videos when a **TF card is inserted to the device**, otherwise you can only preview the video stream.



Insert card : Power off the device, open the cover on the backside of the monitor and insert the TF card according to this chart.

- !** 1. Please make sure the device is powered off before operating the TF card.
2. Please make sure the card is insert correctly.
3. This device requires Class 10 high speed TF card and it will not be able to work properly with Class 4 low speed card.

Instructions for use

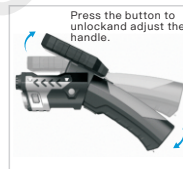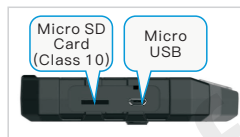


(Replace the battery only when it reaches the end of its life or it's broken)



Mode: Take Photo /Record Video /Playback

Battery Status: Full/Middle/Low /Empty

TF Card Status: Card Plugged in / No Card

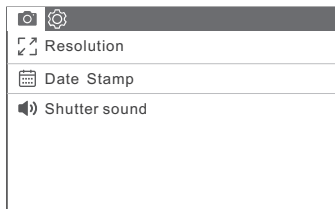

Click "MODE" button to switch the mode Photo Video Playback
Click "" in Photo/Video mode to take photos or record movie clip.


Press "OK" button to freeze the screen and "" button to rotate screen.

In three different modes, press the "" button once to enter the settings menu of corresponding mode.

Click "" "" button to select and "OK" button to save changes.

corresponding mode: Resolution; Date Stamp; Shutter sound
Photo mode: Resolution; Recording; Date Stamp

Video mode: Delete; Protection; Slideshow

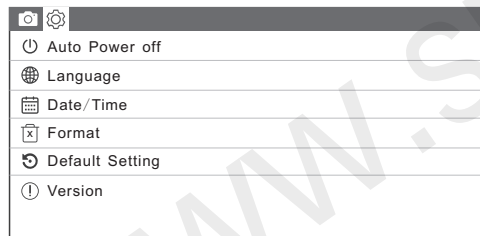


In any mode, press the "" button twice to enter the system settings menu.

Click "" "" button to select and "OK" button to save changes.

System settings menu: Auto Power off; Language; Date/Time; Format; Default Setting; Version

Please press the reset button on the back of the device if the screen freezes or the buttons does not respond.

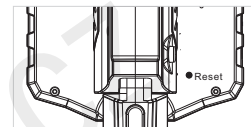

Technical Specifications

Monitor:

Screen Type: 4.5' IPS HD display
Resolution: 854*480 pixels
Rotation: 180° rotation
Video Recording Resolution: 1280*720; 1920x1080
Image Capturing Resolution: 1920x1080
Menu languages: English, Chinese, German, French, Spanish, Italian, Russian, Japanese
Port: Micro USB, TF Card Slot

Camera:

Diameter : 5.5mm or optional
Probe Length: optional
Resolution : 1.0 Megapixel HD
Viewing angle: 70°
Depth of Field : 30mm—100mm
Light Source: 6 adjustable high-intensity LEDs

Other:

LED Flash light: 1W CREE LED
Operating Temperature: 32° to 113°F (0° to 45°C)
Power Source: 2600mAh Lithium Battery
Max battery life: 3~4 hours
Certifications: CE FCC RoHS

Contents:

Digital Endoscope

User's Manual

Probe

Accessories — pick up hook, magnet, mirror

Micro USB cable(3.9mm No accessories)

EU Environmental Protection

**Waste electrical products should not be disposed of
With household waste. Please recycle where facilities
Exist. Check with your local authority or retailer for
Recycling advices.**